



COLLABORATION BAR




PVCCU12M601

Quick Start Guide

Version 1.0

EN Contents

   General information	5
Operating instructions	5
Troubleshooting	7
Safety guidelines	8

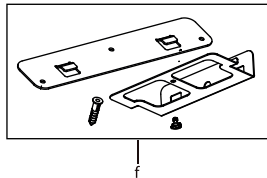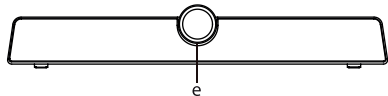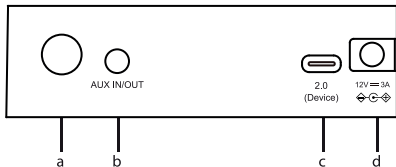


- a. EN Multi-function button.
- b. EN AUX IN/OUT interface
- c. EN USB 2.0 (Type-C) port
- d. EN DC IN Port
- e. EN Camera Lens
- f. EN Hanging components

EN General Information

Features	Pixel: 12M. Resolution: UHD. Output Format: MJPG/YUY2/H.264. Field of View: FOV 120°(D). Adjustable Angle: Up and down 15° by manual adjustment. Focus mode: Fixed focus. Focus distance: 2m. Digital zoom: 5x. Sound Channel: 1.0. Output Power: 1×8W. Microphone Quantity: 6. Voice Pickup Range: 0~8m. Power Requirements: 12V DC 2A. Overall Power (Max.): 24W. Standby Power: ≤0.5W. USB Type-C: 1. AUX IN/OUT: 1. DC 2.0: 1. Dimension L×H×D: 462×76×93 mm. Net Weight: 1.03 kg.
Functions	The Collaboration bar integrated with both UHD camera and Hi-Fi speakerphone. It's a grab-n-go product for online meetings.
Package Contents	Collaboration Bar PVCCU12M601, USB Cable, Remote Control, Power Adapter, Wall-mounted Components, Peeping Cover, Quick Start Guide, Warranty card.
Warranty	1 year (service life: 2 years)

Operating instructions

Product function


1.  : Multi function button. Press to turn on or off the microphone.
2. AUX IN/OUT: Used for external audio equipment.
3. USB 2.0: The Collaboration Bar can be connected to a computer through a USB Type-A to Type-C data cable, providing the computer with camera, microphone and speaker.
4. DC IN: Used for 12V power input power supply.

To start using the device, connect the power supply to the camera and to the power outlet. Also connect the device to a computer using a USB cable: USB Type-C is inserted into the device, USB Type-A is inserted into the corresponding connector on the computer. On the computer, select this camera as the default sound and image source (the name of the camera is indicated on the nameplate on the device).

Mounting the Collaboration Bar


- 1) Placed directly on the desktop.


2) Wall-mounted: Fix the bracket onto the Wall with screws, then place the Integrated video conference terminal onto the bracket.

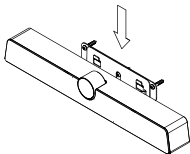





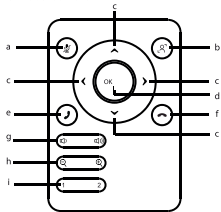



Note: The connection of different samples may slightly differ. Please refer to the actual product.

Remote control



a.  : Mute Button, press to turn on/off the microphone.

- b.  : Press to enable/disable the auto framing function. (After pressing the button, the camera screen will display the status, "  " means open, "  " means off.)
- c.  : Direction Button. After zoom+/-, press the direction buttons to move the camera.
- d. OK : Confirm Button. Camera image initialization function: Press to restore the camera image to its original state.
- e.  : Answer the communication.
- f.  : Hang up communication.
- g.  : Volume Button, press to adjust the system volume.
- h.  : Digital Zooming, press to digitally zoom the camera. (Available only when auto framing is disabled). After zooming in, the direction button can move the picture.
- i. Presets:
 - 1) When the camera is turned on, can set and switch the presets in settings. (Available only when auto framing is disabled).
 - 2) Press and hold the number button "1/2" for 2 seconds to save the current view as a preset.
 - 3) Each preset contains zooming level, viewing angle information. Up to two presets are supported.
 - 4) Press 1/2 to switch amongst the presets.

Troubleshooting

Problem	Solution
Problem when using the camera with online communication apps	Check for updates and make sure you are using the latest version of your online communication application. Make sure the microphone setting in the Sound Settings and Camera Settings in Video Settings is set to the current Video Device (please refer to the nameplate at the device).
A blank screen appears when launching the online communication application	After making a call, make sure the current camera is selected as the video device (please refer to the nameplate at the device).

Problem	Solution
Camera microphone does not work with online communication app	Select a sound setting option from the menu of the application you are using. Make sure the current device is selected as the microphone (please refer to the nameplate at the device). Check volume settings. Increase the volume if necessary.

Safety guidelines

Before using and operating this device, please read thoroughly and comply with the following precautions in order to prevent accidents or abnormal operation.

1. DO NOT place the product in dusty and humid environments to prevent internal short circuit.
2. DO NOT place the product near heating devices (such as electrical heater).
3. Operating temperature is 0-40°C, operating humidity is 10%-90%RH. Please use the product accordingly.
4. The product is NOT waterproof. Please keep it dry.
5. The product and accessories may contain some small parts. Please keep them from children to avoid accidental swallowing or danger.
6. Please use the standard power adapter.
7. Please contact technical support for maintenance services. Your device may only be repaired by Prestigio Specialist Service Centers.
8. DO NOT insert any sharp or pointed object into the device.
9. Prevent the device from falls and collisions with other objects, which may cause damages.

NOTE. All information contained herein is subject to change without prior notice to users. Up-to-date information and detailed descriptions of the device, as well as the connection process, certificates, and information about companies that accept quality claims and warranties, can be found in the instructions available for download at prestigio.com/use. All trademarks and brand names are the property of their respective owners. Information about the manufacturer and suppliers can be found on the packaging.

www.prestigio.com

