



SPEAKERPHONE


PVCSN0M601

Quick Start Guide

Version 1.0

EN Contents

General information	5
Operating instructions	6
1. Turn on/off the device	6
2. Bluetooth	6
3. Connection modes	7
4. Multi-party conference	8
5. Answer/hang up call.	8
6. Mute microphone.	8
7. Volume adjustment.	8
8. Charging the Device.	8
9. Checking the battery.	8
Troubleshooting	9
Safety guidelines	9

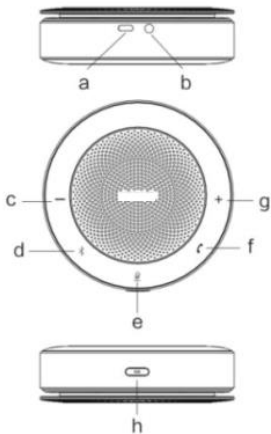

- a. EN** USB Type-C port
- b. EN** 4-section 3.5 mm audio input/output hole
- c. EN** Volume down Button
- d. EN** Bluetooth Button
- e. EN** Microphone mute Button
- f. EN** Answer/hang up Button
- g. EN** Volume up Button
- h. EN** Power Button

EN General information

Weight	0.39 kg
Dimensions (Diameter * Height)	120*36.5 mm
Interfaces	USB Type-C (Audio IN/OUT + Charge 5V/2A), AUX 3.5mm (Audio IN/OUT)
LED Indicator Light	Power/Volume/Button/Battery charge
Bluetooth	4.2
Bluetooth Operating Distance	10 m
Battery capacity	7.4V/2200mAh
Battery Charging	Wired: 5V/2A Wireless: 5W
Continuous working time	8h (Voice communication with the maximum volume)
Frequency Range (Microphone)	150Hz – 7.5kHz
Frequency Range (Speaker)	150Hz – 16kHz
Microphone	6-Element Array, Omnidirectional
Voice Pickup Range	5 m (Radius)
Speakers	1 x 5W
Package Contents	QSG, Warranty card, USB Type-C Cable, Audio Cable 3.5mm, USB Dongle (Bluetooth adapter), Power adapter
Warranty	1 year (service life: 2 years)

Operating instructions

First Use and operation of the Device

1. Turn on/off the device. Long press and hold the power button for 2 seconds to turn on or off the device.

2. Bluetooth. When Bluetooth is not connected, long press Bluetooth Button to turn Bluetooth on/off. When Bluetooth is connected, long press Bluetooth Button to disconnect the current Bluetooth connection. Bluetooth status/settings are described below:

Status	Indicator status	State description	This state is actionable
S1	Blue lights are flashing	Waiting for Bluetooth connection	Long press the Bluetooth Button for 3s to enter S4; Long press the Bluetooth Button for 9s to enter S3
S2	Blue light is always on	Bluetooth connected	Long press the Bluetooth Button for 3s to enter S1
S3	White lights are flashing	Repair connection with USB Bluetooth adapter	Long press the Bluetooth Button for 3s to enter S1
S4	White light is always on	Bluetooth function turned off	Long press the Bluetooth Button for 3s to enter S1

3. Connection modes. There are 4 types of connection modes:

3.1. Connect the computer/conference plat (Windows, Mac) to this device via USB cable.

3.2 Connect this device with the original AUX audio cable (4 sections).

3.3. Connect this device with Bluetooth. The Bluetooth indicator will flash to indicate that the device is in Bluetooth pairing state. Enable Bluetooth functions on mobile phones/other devices, and select to connect this device from the Bluetooth device list. Please refer to the nameplate at the bottom of the device for the name of Bluetooth (when the conference panel is connected to the wireless omnidirectional mic speaker, USB Bluetooth adapter is required to ensure the stability of Bluetooth connection).

3.4. USB Bluetooth audio adapter (supporting Win7/8/10 and Mac OS, Android) operating as follows:

a) Insert the USB Bluetooth audio adapter into the computer, and turn on the device to enter the Bluetooth pairing status. (If you use a USB Bluetooth adapter to connect to the conference plat, please connect it to the front-mounted USB port of the conference plat to ensure best use effect);

b) USB Bluetooth audio adapter will be automatically connected to the device (which is the only device bound by USB Bluetooth audio adapter);

c) If it is necessary to re-pair the USB Bluetooth audio adapter to the new wireless omnidirectional speaker, the distance between the USB Bluetooth audio adapter and the wireless omnidirectional speaker should be controlled within 3 meters. When Bluetooth is disconnected from the wireless omnidirectional speaker, long press and hold the Bluetooth key for 9 seconds to enter the binding mode. After plugging the USB Bluetooth audio adapter, the USB Bluetooth audio adapter will be rebound successfully within 30 seconds.

Note: to connect computer/conference plat with USB Bluetooth audio adapter, it is necessary to set this device as the default playback and recording device in the computer/conference plat sound setting interface.

4. Multi-party conference. It supports multi-channel data fusion of USB, Bluetooth and audio ports. It can work in three connection modes at the same time so as to support simultaneous access of multiple parties for the conference.

5. Answer/hang up call. Note: This device can only use the function of answering and hanging up the phone when connecting to the phone.

5.1. When there is an incoming call, press the "📞" key to answer the call.

5.2. When it is in calling state, press "📞" to hang up the call.

5.3. When there is an incoming call, long press and hold the "📞" key for 3 seconds to reject the call.

6. Mute microphone. When the device is connected to Bluetooth or plugged into an AUX audio cord or USB cord, short press the microphone mute key to turn the microphone on or off.

7. Volume adjustment. Press volume "+" and volume "-" keys to increase or decrease the volume accordingly.

8. Charging the Device.

8.1. *Wired charging:* connect the original power adapter (5V/2A) with USB cable for charging.

8.2. *Wireless charging:* use the selected wireless charger to charge the device. In order to ensure the charging quality and charging safety, it is suggested that you purchase wireless charger via proper channel.

8.3. When charging, the white indicator of the power key will flash; when fully charged, the green indicator of the power key will be normally on.

9. Checking the battery. In the power-on state, short press the power key to view the current remaining electric quantity. When the light bar displays 5

squares, the battery is full. When the electric quantity is relatively low, the power key's red indicator light will flash and the low electric quantity prompt tone is broadcast.

Troubleshooting

Do not try to repair the device yourself, it may cause damage or injure. There are no user serviceable parts inside. Your device may only be repaired by Prestigio Specialist Service Centers.

1. Unable to turn on the device. The battery is low or completely discharged. Connect the adapter or use wireless charger to charge the device.
2. Shuts down automatically after running for a while. The battery may be low. Connect the adapter or use wireless charger to charge the device.
3. No sound. Make sure that connection is correct and the volume is turned on. Select the correct sound input or adjust the device to solve the problem.
4. Unable to work with USB. Make sure that the device is connected correctly. Please, use the original USB cable to make a call.
5. Unable to work with AUX. Make sure that the device is connected correctly. Please, use the original AUX cable (4 sections) to make a call.
6. Invalid key. The key may be accidentally touched. Long press and hold the power button for 8 seconds to reset the system.
7. Unable to charge the device. The charging device is in fault or the battery is already full. Replace the charging device with one with normal functions.

Safety guidelines

1. This device is not waterproof, please keep it dry; if water is immersed in this product, please shut down immediately and contact the customer service center before using it again.

2. Never place this device and accessories near the burning flames or other heat sources, including direct sunlight.
3. This device should be turned off and unplugged before lightning storms.
4. Before connecting this device to an electrical outlet, please make sure that the power supply voltage matches the voltage value printed on the back or bottom of the product. Never connect the product to an electrical outlet when the voltage is different.
5. Never place this device or any objects on a power cord or other electronic devices, excluding the wireless charging pad.
6. If this product is transported at a temperature below 5°C, please unpack the product and wait until the temperature reaches room temperature before connecting it to a power outlet.
7. This product comes with sharp objects, please handle it carefully so as to avoid injury to the user or scratching the appearance of the product or damaging the internal parts of the product!
8. Never install this device in an enclosed space. Always leave at least 4 inches space around the product for ventilation.
9. This device and accessories may contain some small parts, please keep them out of the reach of children to avoid danger.
10. This device applies recyclable high-performance materials and components.
11. Never dispose of this product with other household wastes. Please understand the local regulations on the sorting collection of electronic, electrical products and batteries.
12. Proper disposal of these products helps to avoid potential negative effects on the environment and human body health.
13. Clean this device only with a piece of microfiber cleaning cloth.
14. Please contact professional service personnel for all repair services.

15. Please do not insert any sharp object into the inside of the device.
16. Please do not drop or hit the device to avoid damaging it.
17. The battery charging circuit shall stop when the temperature of the battery exceeds the highest specified charging temperature. The battery charging circuit shall limit the current to the value specified by the battery manufacturer when the battery temperature is lower than the lowest specified charging temperature.

NOTE. All information contained herein is subject to change without prior notice to users. Up-to-date information and detailed descriptions of the device, as well as the connection process, certificates, and information about companies that accept quality claims and warranties, can be found in the instructions available for download at prestigio.com/use. All trademarks and brand names are the property of their respective owners. Information about the manufacturer and suppliers can be found on the packaging.

www.prestigio.com

