

Wireless Stereo Headset
WI-C100




Model: YY2957

Quick Start Guide

 To prevent burning or malfunction due to getting wet

Download the app, and set up the headset



Let's start to use



1

Wearing the headset



Put the headset unit with the **Ⓛ** (left) mark into your left ear and the headset unit with the **Ⓡ** (right) mark into your right ear.

2


Turning on the headset



Press and hold the button for about 2 seconds until the indicator (blue) starts flashing. The headset is turned on. Follow the downloaded “Sony | Headphones Connect” app instructions.

3


Operating with the headset

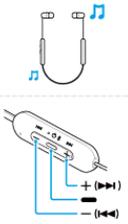

Operate the audio device.

- Press once: Play/Pause
- + (▶▶) Press once: Increase the volume
- + (▶▶) Press and hold: Skip to the beginning of the next track
- (◀◀) Press once: Decrease the volume
- (◀◀) Press and hold: Skip to the beginning of the previous track (or the current track during playback)

To use all functions and improved performances



Update the software of the headset and “Sony | Headphones Connect” app to the latest version. For details, refer to the following:

<https://www.sony.net/elesupport/>

Related information

[Establishing a BLUETOOTH® connection manually](#)

[Charging the headset](#)

Getting started

[What you can do with the Bluetooth function](#)

[About the voice guidance](#)

Supplied accessories

[Checking the package contents](#)

[Replacing the earbud tips](#)

Parts and controls

[Location and function of parts](#)

[About the indicator](#)

[Wearing the headset](#)

Power/Charging

- [Charging the headset](#)

- [Available operating time](#)

- [Checking the remaining battery charge](#)

- [Turning on the headset](#)

- [Turning off the headset](#)

Making connections

[How to make a wireless connection to Bluetooth devices](#)

Easy setup with app

- [Connecting with the “Sony | Headphones Connect” app](#)

Android smartphone

- [Pairing and connecting with an Android smartphone](#)

- [Connecting to a paired Android smartphone](#)

iPhone (iOS devices)

- [Pairing and connecting with an iPhone](#)

- [Connecting to a paired iPhone](#)

Computers

- [Pairing and connecting with a computer \(Windows® 10\)](#)

- [Pairing and connecting with a computer \(Windows 8.1\)](#)

- [Pairing and connecting with a computer \(Mac\)](#)

- [Connecting to a paired computer \(Windows 10\)](#)

- [Connecting to a paired computer \(Windows 8.1\)](#)

- [Connecting to a paired computer \(Mac\)](#)

Other Bluetooth devices

- [Pairing and connecting with a Bluetooth device](#)

- [Connecting to a paired Bluetooth device](#)

Listening to music

Listening to music via a Bluetooth connection

- [Listening to music from a device via Bluetooth connection](#)

[Controlling the audio device \(Bluetooth connection\)](#)

[Disconnecting Bluetooth connection \(after use\)](#)

[About 360 Reality Audio](#)

Sound quality mode

[About the sound quality mode](#)

[Supported codecs](#)

[About the DSEE function](#)

Making phone calls

[Receiving a call](#)

[Making a call](#)

[Functions for a phone call](#)

[Making a video call on your computer](#)

[Disconnecting Bluetooth connection \(after use\)](#)

Using the voice assist function

[Using the voice assist function \(Google app\)](#)

[Using the voice assist function \(Siri\)](#)

Using the apps

[What you can do with the “Sony | Headphones Connect” app](#)

[Installing the “Sony | Headphones Connect” app](#)

[Accessing support information from the “Sony | Headphones Connect” app](#)

[How to keep the software up-to-date \(for comfortable use of the headset\)](#)

Important information

[Precautions](#)

[To prevent burning or malfunction due to getting wet](#)

[If the headset gets wet](#)

[Licenses](#)

[Trademarks](#)

[Customer support websites](#)

Troubleshooting

[What can I do to solve a problem?](#)

Power/Charging

- [Unable to turn on the headset.](#)

 - [Charging cannot be done.](#)

 - [Charging time is too long.](#)

 - [The available operating time is short \(the duration of the battery is short\).](#)
-

Sound

- [No sound](#)

 - [Low sound level](#)

 - [Low sound quality, or noise or unusual sound can be heard.](#)

 - [Sound skips frequently.](#)
-

Bluetooth connection

- [Pairing cannot be done.](#)

 - [Unable to make a Bluetooth connection.](#)

 - [The headset does not operate properly.](#)

 - [Cannot hear a person during a call/low voice from callers, your voice does not reach the person during a call/your voice is low on the caller's side.](#)
-

Others

- [Earbud tips are damaged or lost.](#)

 - [An earache occurs.](#)
-

Resetting or initializing the headset

- [Resetting the headset](#)

 - [Initializing the headset to restore factory settings](#)
-

Specifications

[Specifications](#)

Wireless Stereo Headset
WI-C100

What you can do with the Bluetooth function

The headset uses Bluetooth wireless technology, allowing you to do the following.


Listening to music

You can enjoy music wirelessly from a smartphone or music player, etc.



Talking on the phone

You can make and receive calls hands-free, while leaving your smartphone or mobile phone in your bag or pocket.

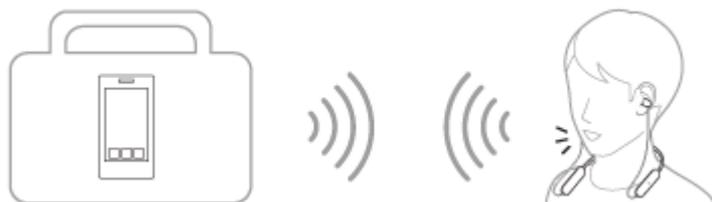

Wireless Stereo Headset
WI-C100

About the voice guidance

In the factory settings, you will hear the English voice guidance in the following situations via the headset. You can change the language of the voice guidance and turn on/off the voice guidance using “Sony | Headphones Connect” app. For more details, refer to the “Sony | Headphones Connect” app help guide.

https://rd1.sony.net/help/mdr/hpc/h_zy/

- When the headset is turned on: “Power on”
- When the headset is turned off: “Power off”
- When entering pairing mode: “Bluetooth pairing”
- When establishing a Bluetooth connection: “Bluetooth connected”
- When disconnecting a Bluetooth connection: “Bluetooth disconnected”
- When informing the remaining battery charge: “Battery about XX %” (The “XX” value indicates the approximate remaining charge. Use it as a rough estimate.) / “Battery fully charged”
- When the remaining battery charge is low: “Low battery, please recharge headset”
- When automatically turning off due to low battery: “Please recharge headset. Power off”

Note

- It takes about 4 minutes when you change the language of the voice guidance.
- If the voice guidance is not heard after changing the voice guidance language or updating the software, turn the headset off and on again.

Wireless Stereo Headset
WI-C100

Checking the package contents


After opening the package, check that all of the items in the list are included. If any items are missing, contact your dealer.

Numbers in () indicate the item amount.

Wireless Stereo Headset

Hybrid silicone rubber earbud tips (SS/M/LL 2 each)

- M-sized earbud tips come attached to the left and right units of the headset at the time of purchase.
- Depending on the color of the headset, a set of one of the following earbud tip types is supplied.
 - The size of the earbud tips can be determined based on the number of dotted lines inside the bottom of the earbud tips.

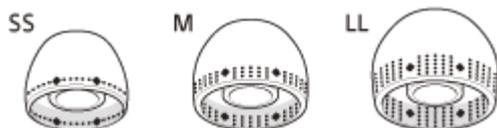

SS size: 1 line

M size: 3 lines

LL size: 5 lines

- The size of the earbud tips can be determined based on the color of the inside of the earbud tips.



SS size: red

M size: green

LL size: purple

Note

- Earbud tips are consumables. If the earbud tips are damaged and need replacing, contact your nearest Sony dealer.

Replacing the earbud tips

M-sized earbud tips come attached to the left and right units of the headset at the time of purchase.

If the size of the earbud tips does not match the size of your ear canals or the headset is not worn properly in your ears, you may not obtain the correct sound qualities or call performance.


If any of this is the case, try the following.

- Check that you are wearing the headset properly in your ears. Wear the headset so that the earbud tip is comfortably situated as deep in the ear canal as possible.

Hybrid silicone rubber earbud tips

Depending on the color of the headset, a set of one of the following earbud tip types is supplied.

- The size of the earbud tips can be determined based on the number of dotted lines inside the bottom of the earbud tips.

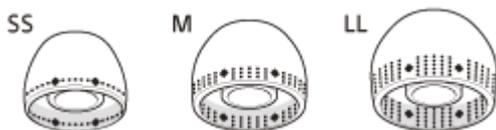


SS size: 1 line
M size: 3 lines
LL size: 5 lines

- The size of the earbud tips can be determined based on the color of the inside of the earbud tips.




SS size: red
M size: green
LL size: purple

1 Remove the earbud tip.

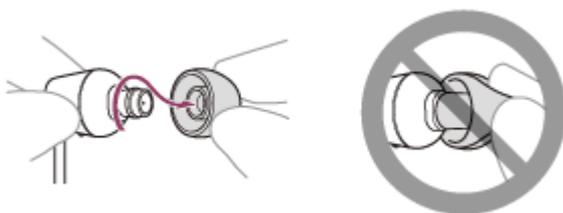

Do not pinch the end of the earbud tip when removing it.


2 Attach the earbud tip.

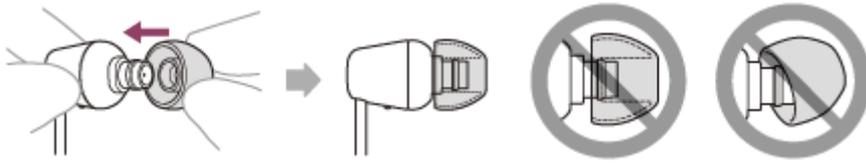

Firmly insert the earbud tip all the way. Do not attach the earbud tip in a loose or skewed manner.

5-036-709-11(2) Copyright 2022 Sony Corporation

Location and function of parts

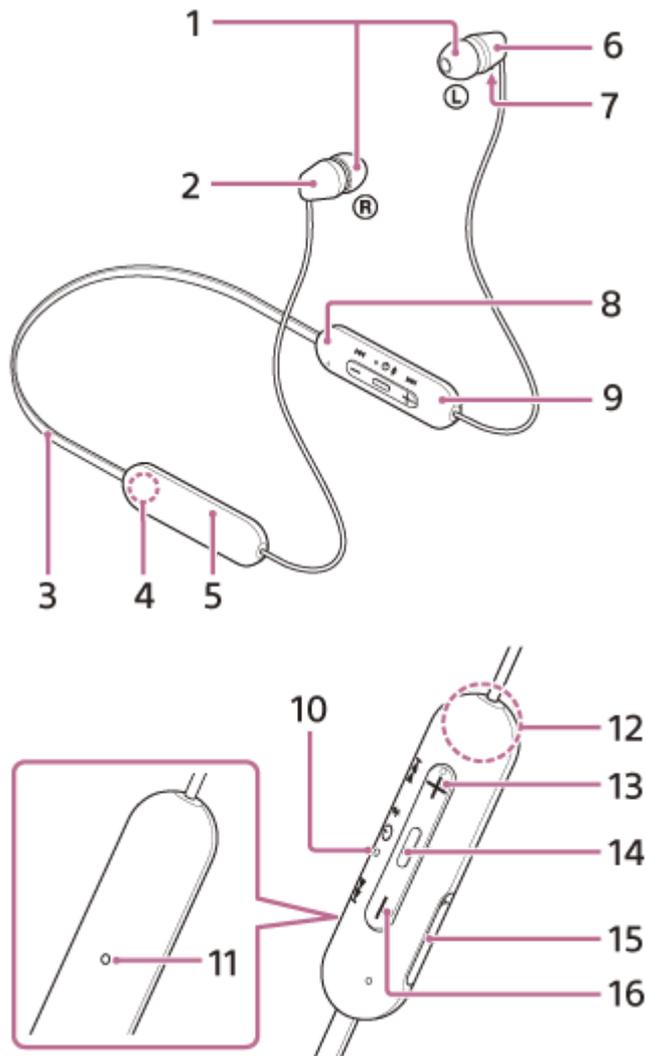

- 1. Earbud tips (left, right)
- 2. Right unit
- 3. Neckband
- 4. ® (right) mark
- 5. Built-in rechargeable battery
- 6. Left unit
- 7. Tactile dot
There is a tactile dot on the left unit.
- 8. ℒ (left) mark
There is a tactile dot at the ℒ (left) mark.
- 9. Remote control component
- 10. Indicator
Lights up in orange while charging.
Lights up in orange or blue to indicate the battery or communications status of the headset.
- 11. Microphone
Picks up the sound of your voice when talking on the phone.
- 12. Built-in antenna
A Bluetooth antenna is built into the headset.

13. + / ►► (volume +/next) button

There is a tactile dot on the + button.

14. ⏻ / ■ (power/play/call) button

Operate to turn on/off the headset, play (or pause) music, or make a call.

15. USB Type-C® port

Connect the headset to an AC outlet with a commercially available USB AC adaptor or to a computer with a commercially available USB Type-C cable to charge the headset.

16. - / ◀◀ (volume -/previous) button

Related Topic

- [About the indicator](#)
- [Checking the remaining battery charge](#)

5-036-709-11(2) Copyright 2022 Sony Corporation

About the indicator

You can check various statuses of the headset by the indicator.

● : Turns on in blue / ● : Turns on in orange / -: Turns off

Turning on

● - ● (flashes twice in blue)

In this case, when the remaining battery charge is 20% or lower (requires charging), the indicator lights successively as follows.

● - ● - ● (repeatedly flashes slowly in orange for about 15 seconds)

For details, see "[Checking the remaining battery charge](#)".

Turning off

● (lights up in blue for about 2 seconds)

When the remaining battery charge becomes low

● - ● - ● (repeatedly flashes slowly in orange for about 15 seconds)

Charging

- While charging
● (lights up in orange)
The indicator turns off after charging is complete.
- Abnormal temperature
● ● -- ● ● -- (repeatedly flashes twice in orange)
- Abnormal charging
● -- ● -- (repeatedly flashes slowly in orange)

Bluetooth function

- Device registration (pairing) mode
● ● -- ● ● -- (repeatedly flashes twice in blue)
- Not connected
● -- ● -- ● -- (repeatedly flashes in blue at about 1-second intervals)
- Connection process completed
● ● ● ● ● ● ● ● (repeatedly flashes quickly in blue for about 5 seconds)
- Connected
● ----- ● ----- (repeatedly flashes in blue at about 5-second intervals)
- Incoming call
● ● ● ● ● ● ● ● (repeatedly flashes quickly in blue)

The unconnected and connected status indications automatically turn off after a period of time has passed. They start flashing again for a period of time when some operation is performed. When the remaining battery charge becomes low, the indicator starts flashing in orange.

Other

- Updating software
 -- (repeatedly flashes slowly in blue)
 - Initialization completed
 (flashes 4 times in blue)
- For details, see [“Initializing the headset to restore factory settings”](#).

Related Topic


- [Checking the remaining battery charge](#)
- [Initializing the headset to restore factory settings](#)

5-036-709-11(2) Copyright 2022 Sony Corporation

Wearing the headset

1 Put on the headset.

Place the neckband around your neck so that the **Ⓛ** (left) mark is on your left side, and the **Ⓡ** (right) mark is on your right side. There is a tactile dot on the **Ⓛ** (left) mark side. Put the left and right units on your ears. Move the neckband and the left and right units up, down, left and right to adjust them into a position where they fit well.

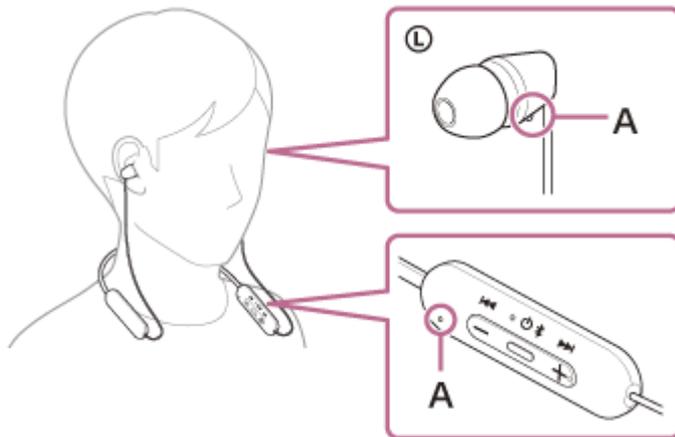

A: Tactile dot

For the proper sound quality, call sound quality, etc. to be effective

If the size of the earbud tips does not match the size of your ear canals or the headset is not worn properly in your ears, you may not obtain the correct sound qualities or call performance.

If any of this is the case, try the following.

- Check that you are wearing the headset properly in your ears. Wear the headset so that the earbud tip is comfortably situated as deep in the ear canal as possible.


Related Topic

- [What you can do with the “Sony | Headphones Connect” app](#)

Charging the headset


The headset contains a built-in lithium-ion rechargeable battery. Use a commercially available USB Type-C cable to charge the headset before use.

1 Open the USB Type-C port cover.

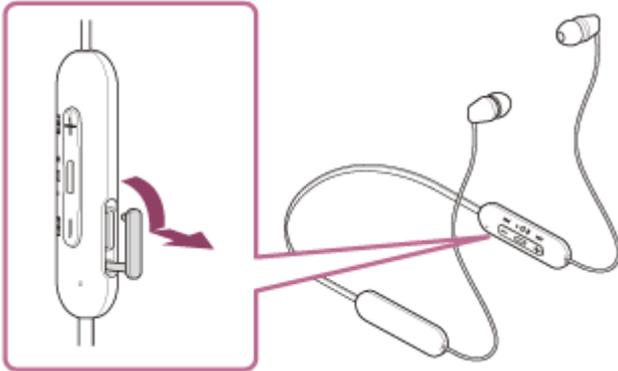

2 Connect the headset to an AC outlet.

Use a commercially available USB Type-C cable and USB AC adaptor.

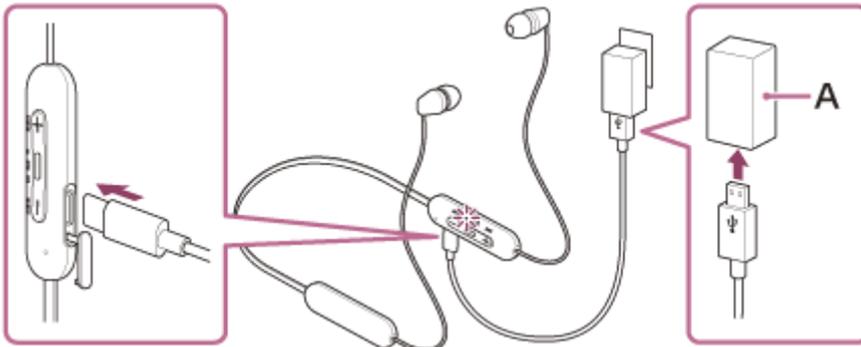


A: USB AC adaptor

- The indicator (orange) on the headset lights up.
- Charging is completed in about 3 hours (*) and the indicator turns off automatically.

* Time required for charging the empty battery to its full capacity. The charging time may differ depending on the conditions of use.

After charging is complete, disconnect the USB Type-C cable and close the USB Type-C port cover securely to prevent water or dust from entering the headset.

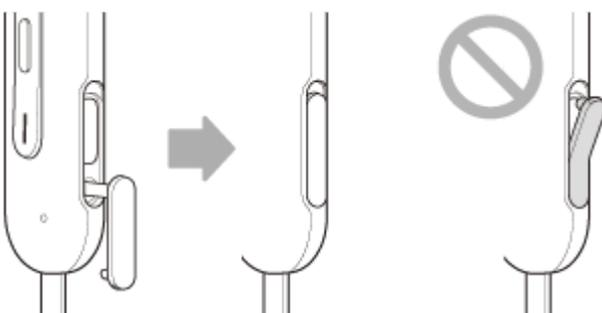

System requirements for battery charge using USB

USB AC adaptor

A commercially available USB AC adaptor capable of supplying an output current of 0.5 A (500 mA) or more

A commercially available USB cable

USB Type-C cable (compliant with USB standards)

Personal computer

Personal computer with a standard USB port

- We do not guarantee operation on all computers.
- Operations using a custom-built or homebuilt computer are not guaranteed.

Hint

- The headset can be also charged by connecting the headset to a running computer using a commercially available USB Type-C cable.
- If charging starts while the headset is on, the headset will turn off automatically.

Note

- Charging may not be successful depending on the type of USB Type-C cable.
- Charging may not be successful depending on the type of USB AC adaptor.
- When the headset is connected to an AC outlet or computer, all operations such as turning on the headset, registering or connecting to Bluetooth devices, and music playback cannot be performed.
- The headset cannot be charged when the computer goes into standby (sleep) or hibernation mode. In this case, change the computer settings, and start charging once again.
- If the headset is not used for a long time, the rechargeable battery usage hours may be reduced. However, the battery life will improve after charging and discharging several times. If you store the headset for a long time, charge the battery once every 6 months to avoid over-discharge.
- If the headset is not used for a long time, it may take longer to charge the battery.
- If the headset detects a problem while charging due to the following causes, the indicator (orange) flashes. In this case, charge once again within the charging temperature range. If the problem persists, consult your nearest Sony dealer.
 - Ambient temperature exceeds the charging temperature range of 5 °C - 35 °C (41 °F - 95 °F).
 - There is a problem with the rechargeable battery.
- If the headset is not used for a long time, the indicator (orange) may not immediately light up when the headset starts charging. Please wait a moment until the indicator lights up.
- If the usage hours of the built-in rechargeable battery decrease significantly, the battery should be replaced. Consult your nearest Sony dealer.
- Avoid exposure to extreme temperature changes, direct sunlight, moisture, sand, dust, and electrical shock. Never leave the headset in a parked vehicle.
- When connecting the headset to a computer, make sure to connect it directly to the computer with a USB Type-C cable. Charging will not be properly completed when the headset is connected through a USB hub.

Wireless Stereo Headset
WI-C100

Available operating time

The available operating times of the headset with the battery fully charged are as follows:

Bluetooth connection

Music playback time (AAC): Max. 25 hours

Music playback time (SBC): Max. 20 hours

- About 60 minutes of music playback is possible after 10 minutes charging.

Communication time: Max. 15 hours

Hint

- By using the “Sony | Headphones Connect” app, you can check which codec is used for a connection or switch the DSEE function.

Note

- Usage hours may be different from the time described above depending on the settings for the headset functions and usage conditions.
- If you set the following functions, the available operating time of the battery becomes shorter than the ones described above.
 - DSEE
 - Equalizer

If you set the equalizer and DSEE at the same time, the available operating time of the battery becomes even shorter.

Related Topic

- [Supported codecs](#)
- [About the DSEE function](#)
- [What you can do with the “Sony | Headphones Connect” app](#)

Checking the remaining battery charge

You can check the remaining battery charge of the rechargeable battery.

When you turn on the headset, the voice guidance indicating the remaining battery charge can be heard.

“Battery about XX %” (The “XX” value indicates the approximate remaining charge.)

“Battery fully charged”

The remaining battery charge indicated by the voice guidance may differ from the actual remaining charge in some cases. Use it as a rough estimate.

The indicator (orange) also flashes for about 15 seconds if the remaining battery charge is 20% or lower when the headset is turned on.

When the remaining charge becomes low


A warning beep sounds and the color of the operating indicator (blue) becomes orange. If you hear the voice guidance say, “Low battery, please recharge headset”, charge the headset as soon as possible.

When the battery becomes completely empty, a warning beep sounds, the voice guidance says, “Please recharge headset. Power off”, and the headset automatically turns off.

When you are using iPhone or iPod touch

When the headset is connected to an iPhone or iPod touch over an HFP (Hands-free Profile) Bluetooth connection, it will show an icon that indicates the remaining battery charge of the headset on the screen of the iPhone or iPod touch.

The display position is an example.

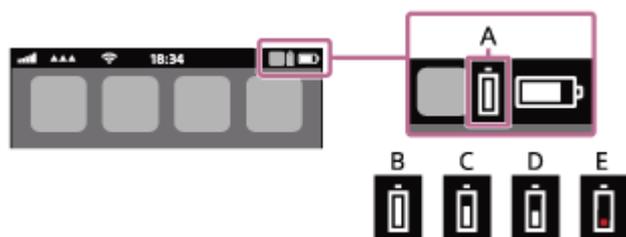

A: Remaining battery charge of the headset

B: 100% - 70%

C: 70% - 50%

D: 50% - 20%

E: 20% or lower (requires charging)

The remaining battery charge of the headset is also displayed on the widget of an iPhone or iPod touch running iOS 11 or later.

For more details, refer to the operating instructions supplied with the iPhone or iPod touch.

The remaining charge which is displayed may differ from the actual remaining charge in some cases. Use it as a rough estimate.

When you are using an Android™ smartphone (OS 8.1 or later)

When the headset is connected to an Android smartphone via HFP Bluetooth connection, select [Settings] - [Device connection] - [Bluetooth] to display the remaining battery charge of the headset as 100%, “70%”, “50%” or “20%” in the connected Bluetooth device column on the smartphone’s screen. The operation above is an example. For details, refer to the operating instructions of the Android smartphone.

The remaining charge which is displayed may differ from the actual remaining charge in some cases. Use it as a rough estimate.

Hint

- You can also check the remaining battery charge of the headset with the “Sony | Headphones Connect” app. Android smartphones and iPhone/iPod touch both support this app.

Note

- If the headset and smartphone are not connected with HFP, the remaining battery charge will not be correctly displayed.
- The remaining battery charge may not be properly displayed immediately after a software update or if the headset has not been used for a long time. In this case, repeatedly charge and discharge the battery multiple times to properly display the remaining battery charge.


Related Topic

- [About the indicator](#)
- [What you can do with the “Sony | Headphones Connect” app](#)

Wireless Stereo Headset
WI-C100

Turning on the headset

- 1 Press and hold the  (power) button for about 2 seconds until the indicator (blue) flashes.

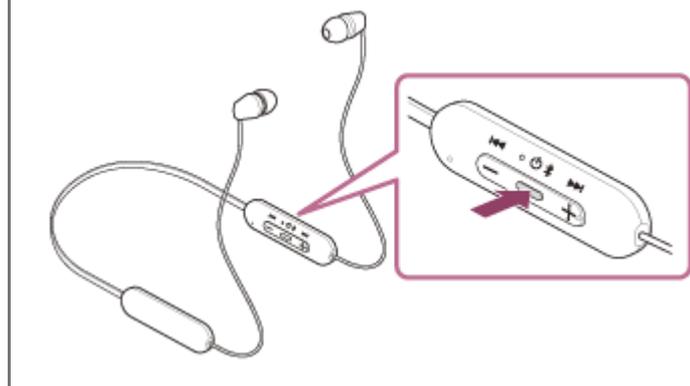


Related Topic

- [Turning off the headset](#)

Turning off the headset

- 1 Press and hold the  (power) button for about 2 seconds until the indicator (blue) turns off.

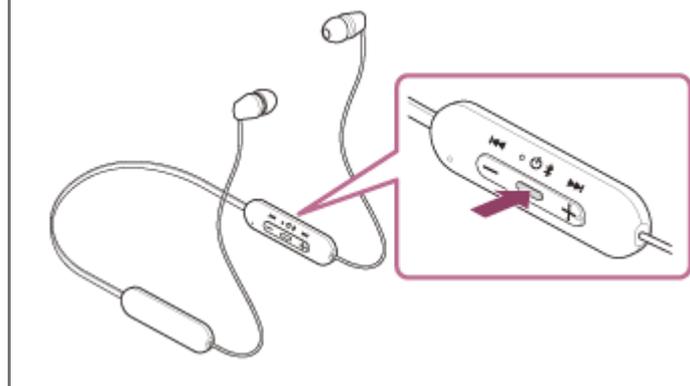

Hint

- You can also turn off the headset with the “Sony | Headphones Connect” app.

Related Topic

- [Turning on the headset](#)
- [What you can do with the “Sony | Headphones Connect” app](#)

Wireless Stereo Headset
WI-C100

How to make a wireless connection to Bluetooth devices

You can enjoy music and hands-free calling with the headset wirelessly by using your Bluetooth device's Bluetooth function.

Pairing

To use the Bluetooth function, both of the connecting devices must be registered in advance. The operation to register a device is called "pairing".

Pair the headset and the device manually.

Connecting to a paired device

Once a device is paired, it is not necessary to pair it again. Connect to devices already paired with the headset using the methods necessary for each device.

Related Topic

- [Pairing and connecting with an Android smartphone](#)
- [Pairing and connecting with an iPhone](#)
- [Pairing and connecting with a computer \(Windows® 10\)](#)
- [Pairing and connecting with a computer \(Windows 8.1\)](#)
- [Pairing and connecting with a computer \(Mac\)](#)
- [Pairing and connecting with a Bluetooth device](#)
- [Connecting to a paired Android smartphone](#)
- [Connecting to a paired iPhone](#)
- [Connecting to a paired computer \(Windows 10\)](#)
- [Connecting to a paired computer \(Windows 8.1\)](#)
- [Connecting to a paired computer \(Mac\)](#)
- [Connecting to a paired Bluetooth device](#)

Wireless Stereo Headset
WI-C100

Connecting with the “Sony | Headphones Connect” app

Launch the “Sony | Headphones Connect” app on your Android smartphone/iPhone to connect the headset to a smartphone or iPhone. For more details, refer to the “Sony | Headphones Connect” app help guide.

https://rd1.sony.net/help/mdr/hpc/h_zz/



Sony Headphones Connect

Note

- The connection with some smartphones and iPhone devices may become unstable when connecting using the “Sony | Headphones Connect” app. In that case, follow the procedures in “[Connecting to a paired Android smartphone](#)”, or “[Connecting to a paired iPhone](#)” to connect to the headset.

Related Topic

- [Connecting to a paired Android smartphone](#)
- [Connecting to a paired iPhone](#)
- [What you can do with the “Sony | Headphones Connect” app](#)
- [Installing the “Sony | Headphones Connect” app](#)

Pairing and connecting with an Android smartphone

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.


Before starting the operation, make sure of the following:

- The Android smartphone is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the Android smartphone is in hand.


1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step 2 .

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

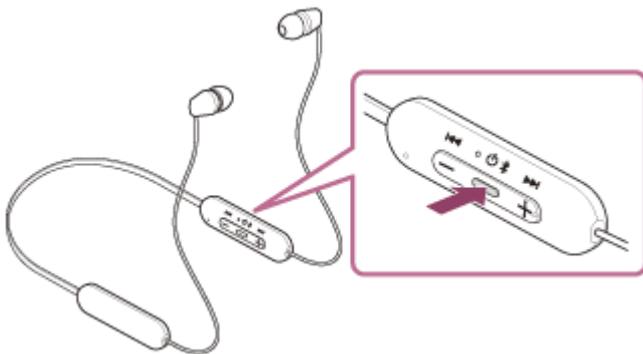


The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

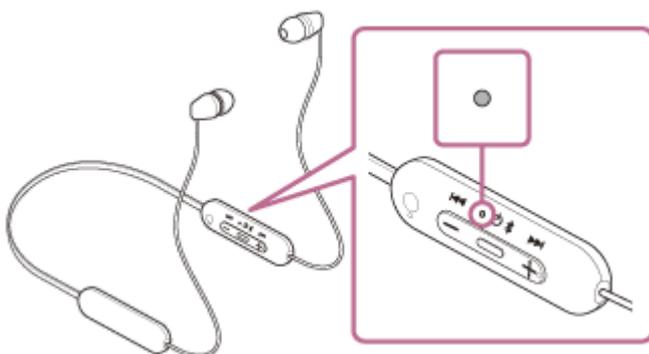

2 Unlock the screen of the Android smartphone if it is locked.

3 Find the headset on the Android smartphone.


1. Select [Settings] - [Device connection] - [Bluetooth].

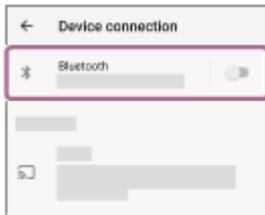

2. Touch the switch to turn on the Bluetooth function.



4 Touch [WI-C100].

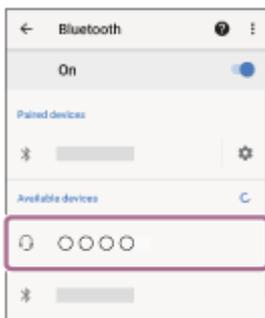

If Passkey (*) input is required, input "0000".

The headset and smartphone are paired and connected with each other.

You will hear the voice guidance say, "Bluetooth connected".

If they are not connected, see "[Connecting to a paired Android smartphone](#)".

If [WI-C100] does not appear on the Android smartphone screen, try again from the beginning of step 3 .

* A Passkey may be called "Passcode", "PIN code", "PIN number", or "Password".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the Android smartphone.
- To delete all Bluetooth pairing information, see "[Initializing the headset to restore factory settings](#)".

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step 1 .
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.
- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Connecting to a paired Android smartphone](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Initializing the headset to restore factory settings](#)


5-036-709-11(2) Copyright 2022 Sony Corporation

Connecting to a paired Android smartphone

1 Unlock the screen of the Android smartphone if it is locked.


2 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

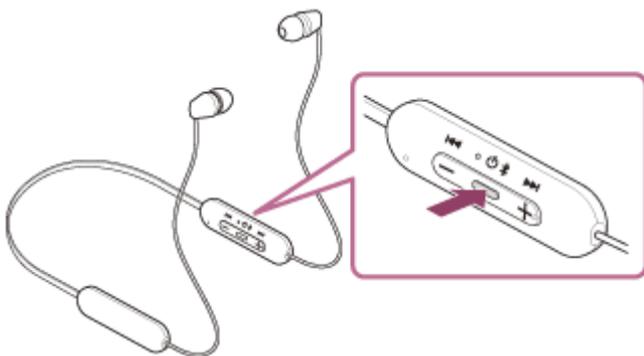

You will hear the voice guidance say, "Power on".

The indicator (blue) continues to flash even after you release your finger from the button.

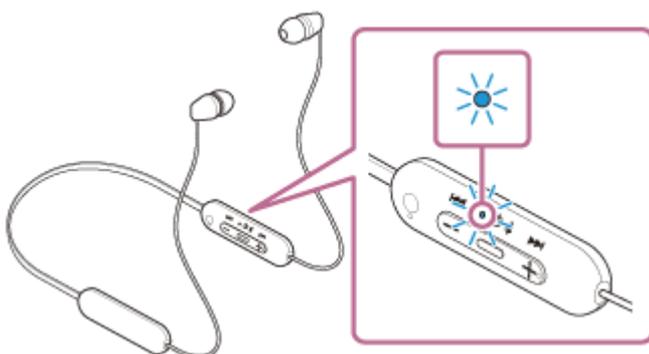

If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".


Check the connection status on the Android smartphone. If it is not connected, proceed to step **3**.

3 Display the devices paired with the Android smartphone.


1. Select [Settings] - [Device connection] - [Bluetooth].



2. Touch the switch to turn on the Bluetooth function.

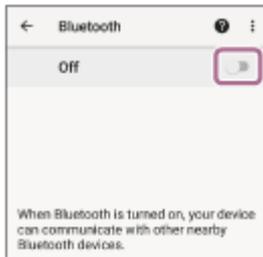

4 Touch [WI-C100].

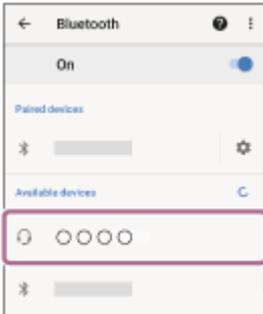

You will hear the voice guidance say, “Bluetooth connected”.

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the Android smartphone.

Note

- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your smartphone to the headset, delete the headset pairing information on your smartphone and perform the pairing again. As for the operations on your smartphone, refer to the operating instructions supplied with the smartphone.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with an Android smartphone](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)

Pairing and connecting with an iPhone

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.


Before starting the operation, make sure of the following:

- The iPhone is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the iPhone is in hand.


1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step 2 .

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

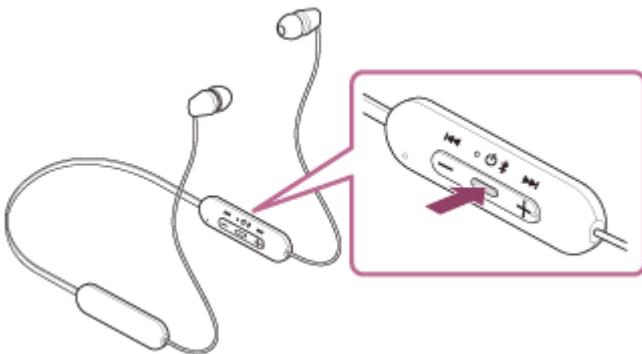


The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

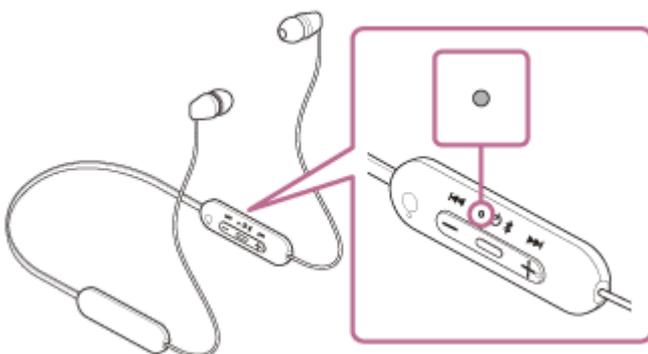


2 Unlock the screen of the iPhone if it is locked.

3 Find the headset on the iPhone.


1. Select [Settings].
2. Touch [Bluetooth].

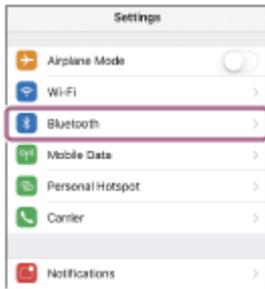

3. Touch the switch to turn on the Bluetooth function.

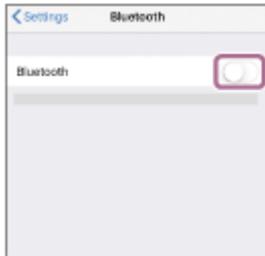

4 Touch [WI-C100].

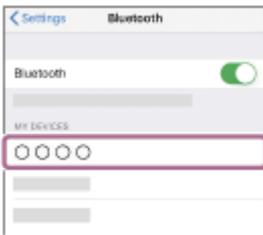

If Passkey (*) input is required, input "0000".

The headset and iPhone are paired and connected with each other.

You will hear the voice guidance say, "Bluetooth connected".

If they are not connected, see ["Connecting to a paired iPhone"](#).

If [WI-C100] does not appear on the display of the iPhone, try again from the beginning of step 3.

* A Passkey may be called "Passcode", "PIN code", "PIN number", or "Password".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with your iPhone.
- To delete all Bluetooth pairing information, see ["Initializing the headset to restore factory settings"](#).

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step 1.
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
 - The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
 - All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.
- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Connecting to a paired iPhone](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Initializing the headset to restore factory settings](#)


5-036-709-11(2) Copyright 2022 Sony Corporation

Connecting to a paired iPhone

1 Unlock the screen of the iPhone if it is locked.


2 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

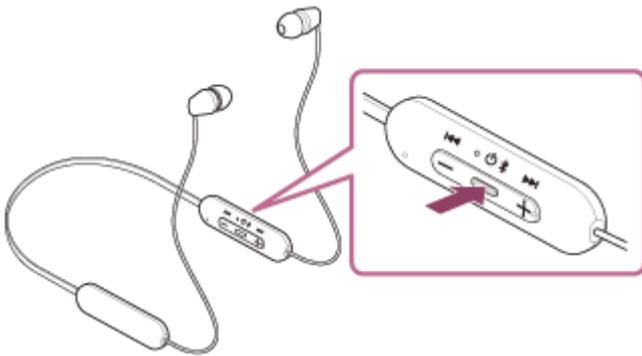

You will hear the voice guidance say, "Power on".

The indicator (blue) continues to flash even after you release your finger from the button.

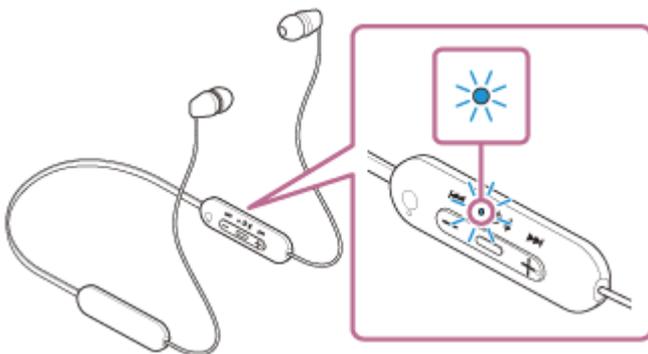


If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".

Check the connection status on the iPhone. If it is not connected, proceed to step **3**.

3 Display the devices paired with the iPhone.


1. Select [Settings].
2. Touch [Bluetooth].

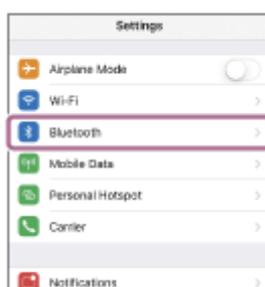

3. Touch the switch to turn on the Bluetooth function.



4. Touch [WI-C100].

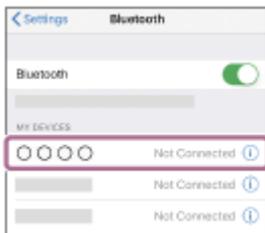

You will hear the voice guidance say, “Bluetooth connected”.

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with your iPhone.

Note

- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your iPhone to the headset, delete the headset pairing information on your iPhone and perform the pairing again. As for the operations on your iPhone, refer to the operating instructions supplied with the iPhone.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with an iPhone](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)


Wireless Stereo Headset
WI-C100

Pairing and connecting with a computer (Windows® 10)

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.

Before starting the operation, make sure of the following:


- Your computer has a Bluetooth function that supports music playback connections (A2DP).
- When you use a video calling application on your computer, your computer has a Bluetooth function that supports calling connections (HFP/HSP).
- The computer is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the computer is in hand.
- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.
- If your OS version is Windows 10 version 1803 or later, the Swift Pair function will make pairing easier. To use the Swift Pair function, click the [Start] button - [Settings] - [Devices] - [Bluetooth & other devices], and check [Show notifications to connect using Swift Pair].

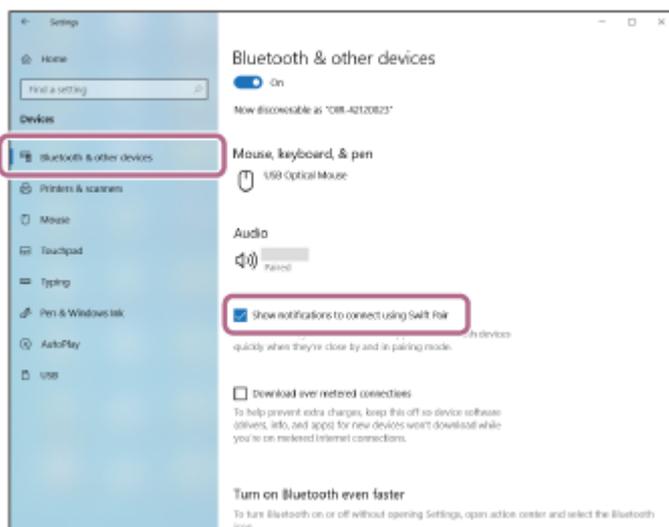


1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step 2.

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

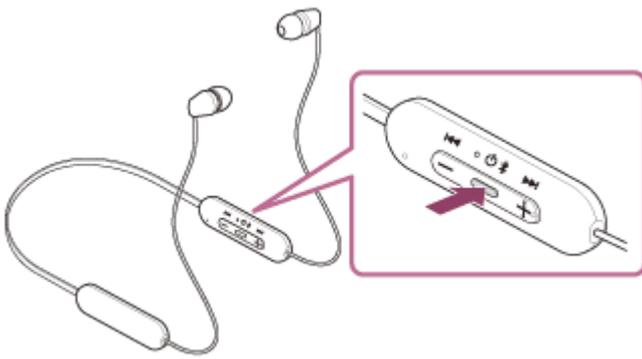

The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

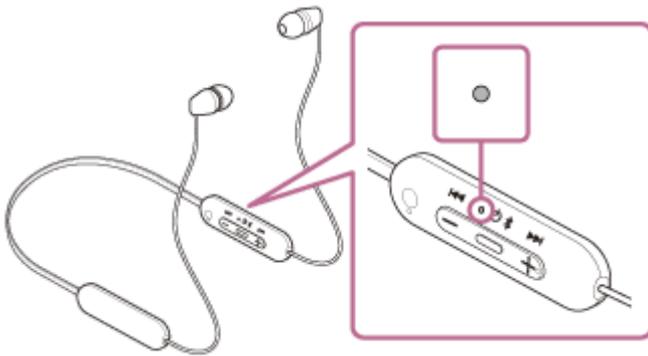


2 Wake the computer up if the computer is in standby (sleep) or hibernation mode.

3 Pair the headset using the computer.


To connect using the Swift Pair function

1. Select [Connect] from the pop up menu displayed on your computer screen.

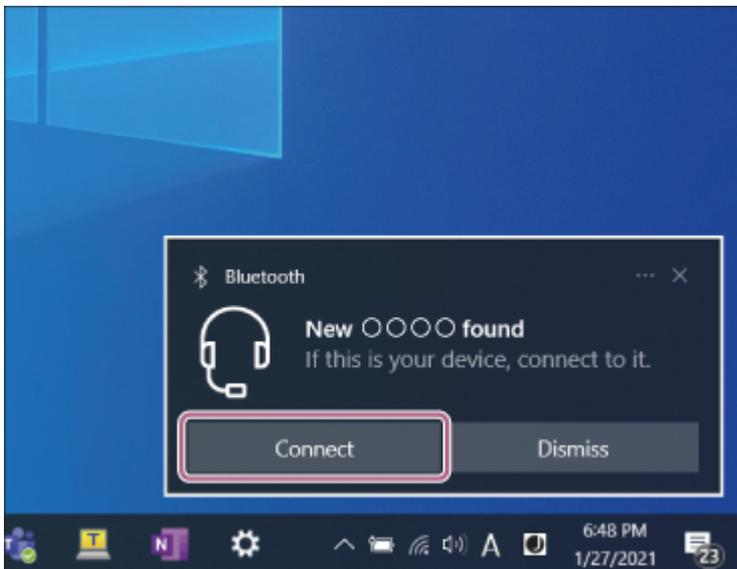


To connect without using the Swift Pair function


1. Click the [Start] button, then [Settings].
2. Click [Devices].

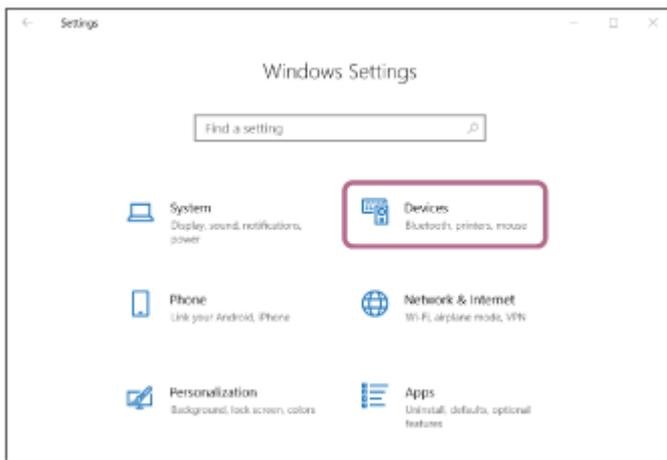


3. Click the [Bluetooth & other devices] tab, click the [Bluetooth] switch to turn on the Bluetooth function, then click [Add Bluetooth or other device].

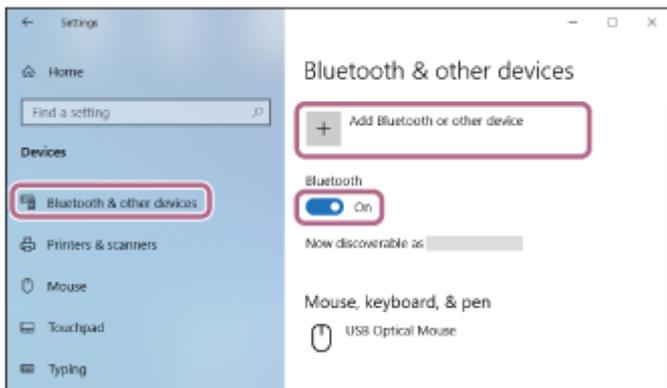

4. Click [Bluetooth].

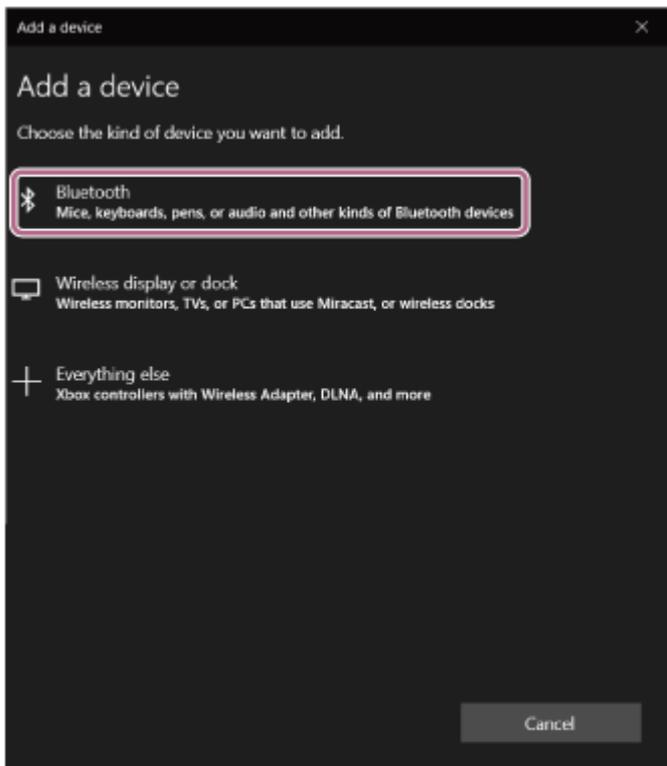

5. Click [WI-C100].

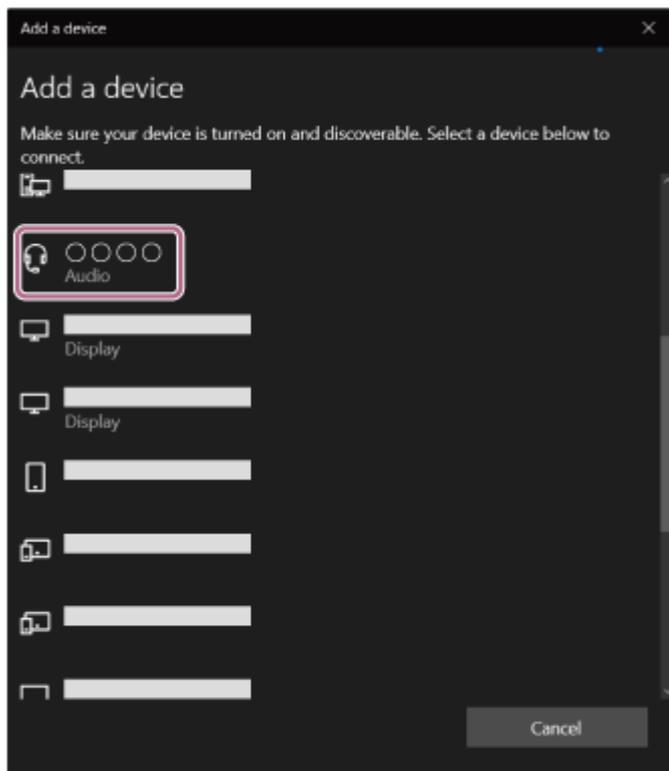

If Passkey (*) input is required, input "0000".

The headset and computer are paired and connected with each other.

You will hear the voice guidance say, "Bluetooth connected".

If they are not connected, see ["Connecting to a paired computer \(Windows 10\)"](#).

If [WI-C100] does not appear on the computer screen, try again from "To connect without using the Swift Pair function" of step ③ .

* A Passkey may be called "Passcode", "PIN code", "PIN number", or "Password".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.
- To delete all Bluetooth pairing information, see ["Initializing the headset to restore factory settings"](#).

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step ① .
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.
- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)

- Connecting to a paired computer (Windows 10)
- Listening to music from a device via Bluetooth connection
- Making a video call on your computer
- Disconnecting Bluetooth connection (after use)
- Initializing the headset to restore factory settings

5-036-709-11(2) Copyright 2022 Sony Corporation

Pairing and connecting with a computer (Windows 8.1)

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.


Before starting the operation, make sure of the following:

- Your computer has a Bluetooth function that supports music playback connections (A2DP).
- When you use a video calling application on your computer, your computer has a Bluetooth function that supports calling connections (HFP/HSP).
- The computer is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the computer is in hand.
- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.


1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step 2 .

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

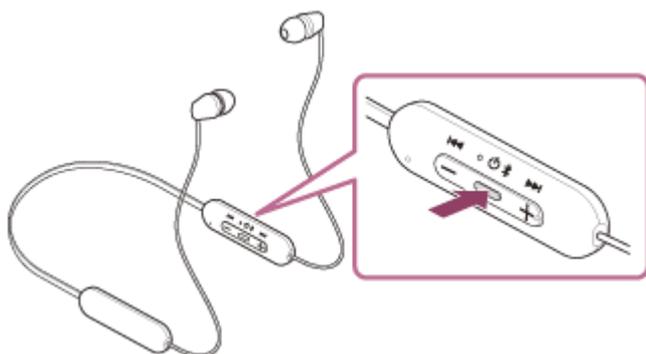

The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

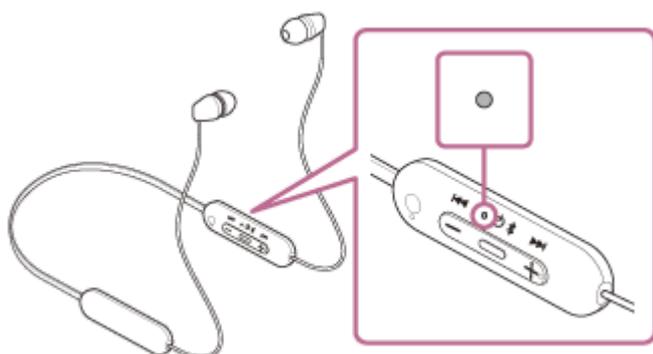


2 Wake the computer up if the computer is in standby (sleep) or hibernation mode.

3 Pair the headset using the computer.


1. Move the mouse pointer to the top-right corner of the screen (when using a touch panel, swipe from the right edge of the screen), then select [Settings] from the Charm Bar.




2. Select [Change PC Settings] of the [Settings] charm.

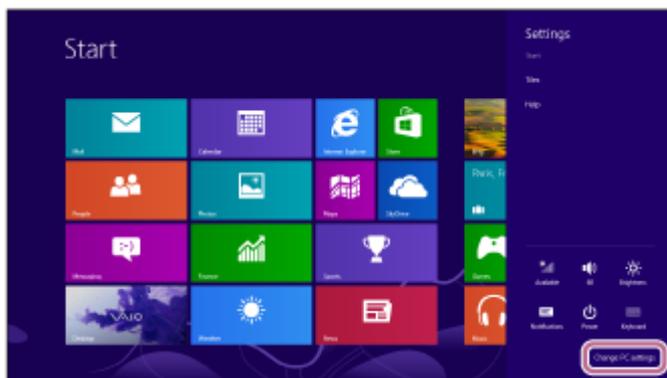


3. Select [PC and devices] of the [PC Settings] screen.

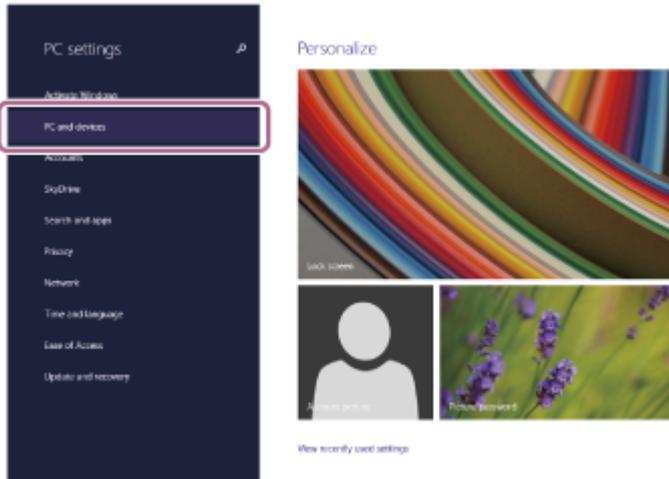

4. Select [Bluetooth].

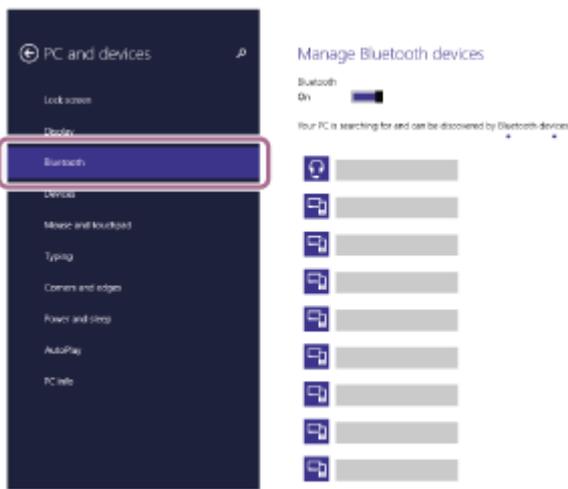

5. Select [WI-C100], then select [Pair].

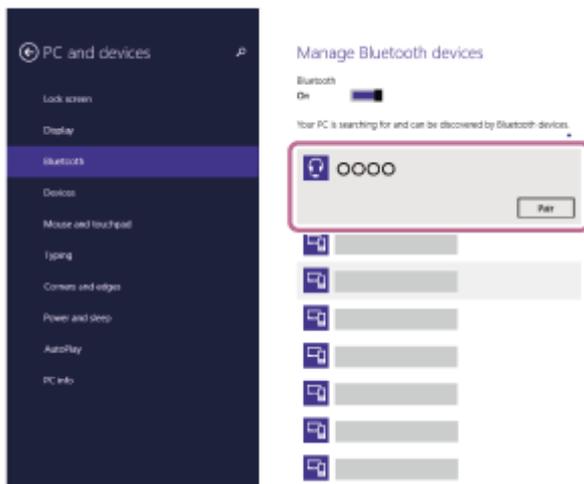

If Passkey (*) input is required, input "0000".

The headset and computer are paired and connected with each other.

You will hear the voice guidance say, "Bluetooth connected".

If they are not connected, see "[Connecting to a paired computer \(Windows 8.1\)](#)".

If [WI-C100] does not appear on the computer screen, try again from the beginning of step 3 .

* A Passkey may be called "Passcode", "PIN code", "PIN number", or "Password".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.
- To delete all Bluetooth pairing information, see "[Initializing the headset to restore factory settings](#)".

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step 1 .
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.

- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Connecting to a paired computer \(Windows 8.1\)](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Making a video call on your computer](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Initializing the headset to restore factory settings](#)

5-036-709-11(2) Copyright 2022 Sony Corporation

Pairing and connecting with a computer (Mac)

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.

Compatible OS

macOS (version 10.15 or later)

Before starting the operation, make sure of the following:

- Your computer has a Bluetooth function that supports music playback connections (A2DP).
- When you use a video calling application on your computer, your computer has a Bluetooth function that supports calling connections (HFP/HSP).
- The computer is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the computer is in hand.
- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.
- Set the computer speaker to the ON mode.

If the computer speaker is set to the  “OFF” mode, no sound is heard from the headset.


Computer speaker in the ON mode




1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step **2**.

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

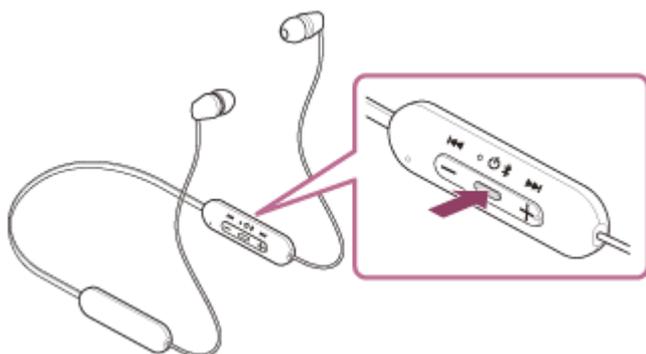

The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

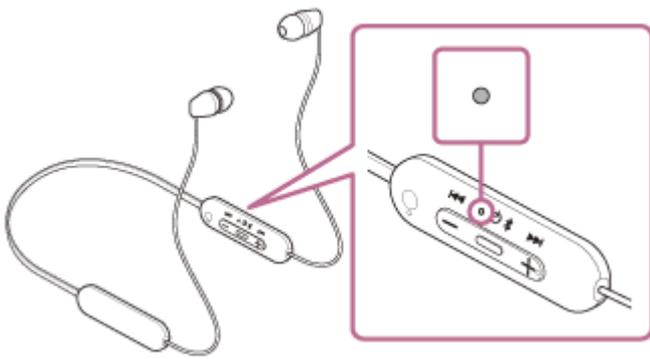


2 Wake the computer up if the computer is in standby (sleep) or hibernation mode.

3 Pair the headset using the computer.

1. Select [ (System Preferences)] - [Bluetooth] from the Dock at the bottom of the screen.



2. Select [WI-C100] of the [Bluetooth] screen and click [Connect].

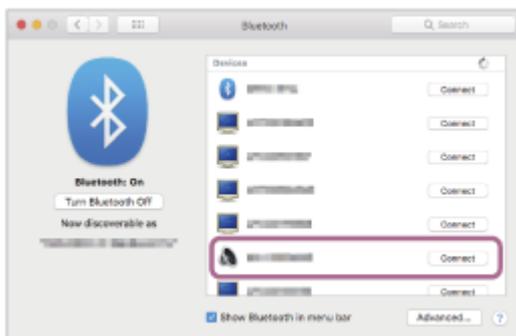

If Passkey (*) input is required, input “0000”.

The headset and computer are paired and connected with each other.

You will hear the voice guidance say, “Bluetooth connected”.

If they are not connected, see [“Connecting to a paired computer \(Mac\)”](#).

If [WI-C100] does not appear on the computer screen, try again from the beginning of step **3** .

* A Passkey may be called “Passcode”, “PIN code”, “PIN number”, or “Password”.

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.

- To delete all Bluetooth pairing information, see [“Initializing the headset to restore factory settings”](#).

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step ① .
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.
- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Connecting to a paired computer \(Mac\)](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Making a video call on your computer](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Initializing the headset to restore factory settings](#)

Connecting to a paired computer (Windows 10)


Before starting the operation, make sure of the following:

- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.

1 Wake the computer up if the computer is in standby (sleep) or hibernation mode.


2 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

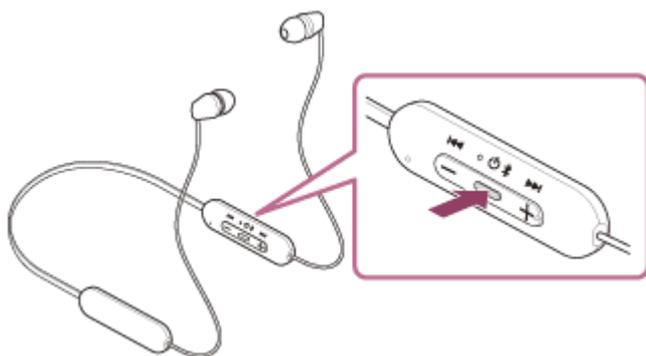

You will hear the voice guidance say, "Power on".

The indicator (blue) continues to flash even after you release your finger from the button.

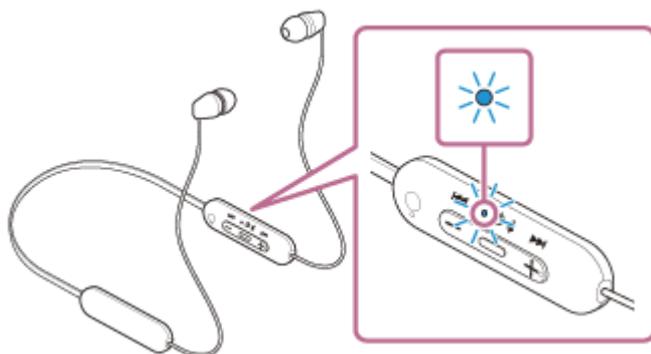


If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".


Check the connection status on the computer. If it is not connected, proceed to step **3**.

3 Select the headset using the computer.


1. Right-click the speaker icon on the toolbar, then select [Open Sound settings].

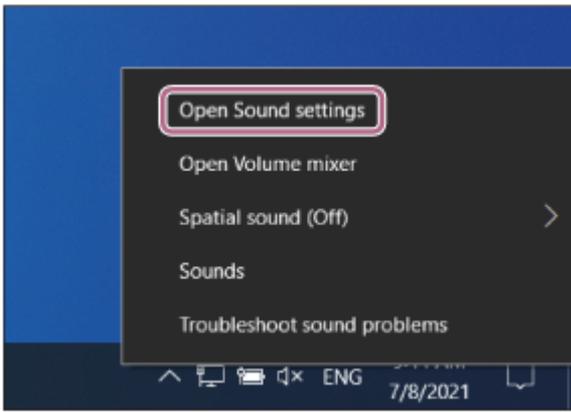


- From the [Choose your output device] drop-down menu, select [Headphones (WI-C100 Stereo)].

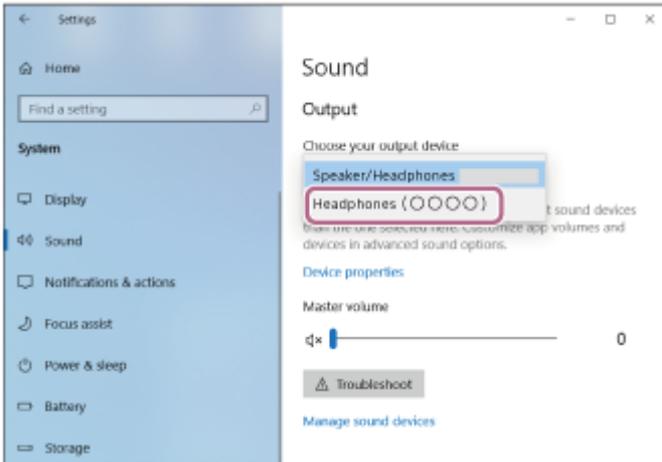


If [Headphones (WI-C100 Stereo)] is not displayed on the drop-down menu, click [Sound Control Panel] and then right-click on the [Playback] tab of the [Sound] screen to check [Show Disconnected Devices].

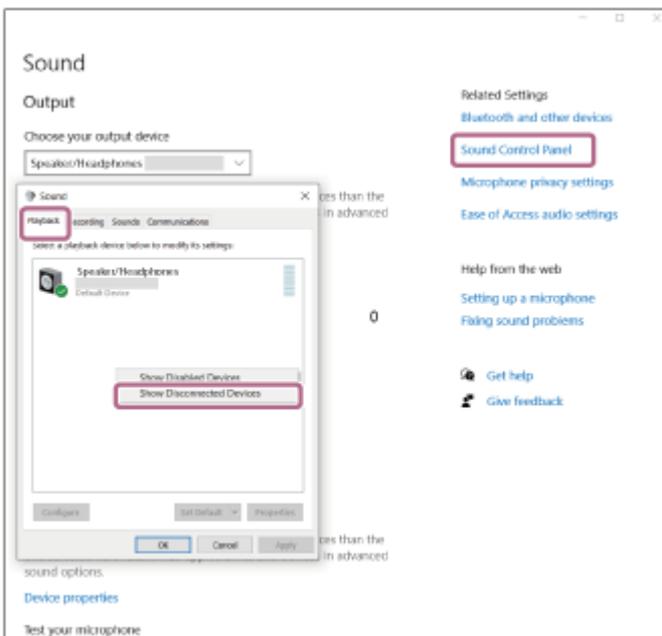

- Select [Connect] from the displayed menu.

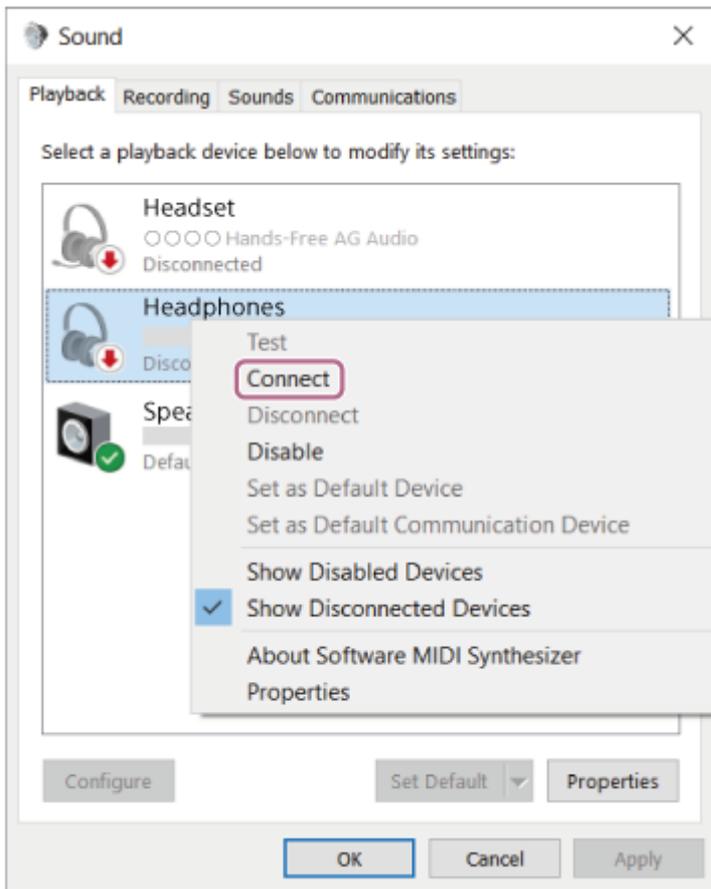

You will hear the voice guidance say, "Bluetooth connected".

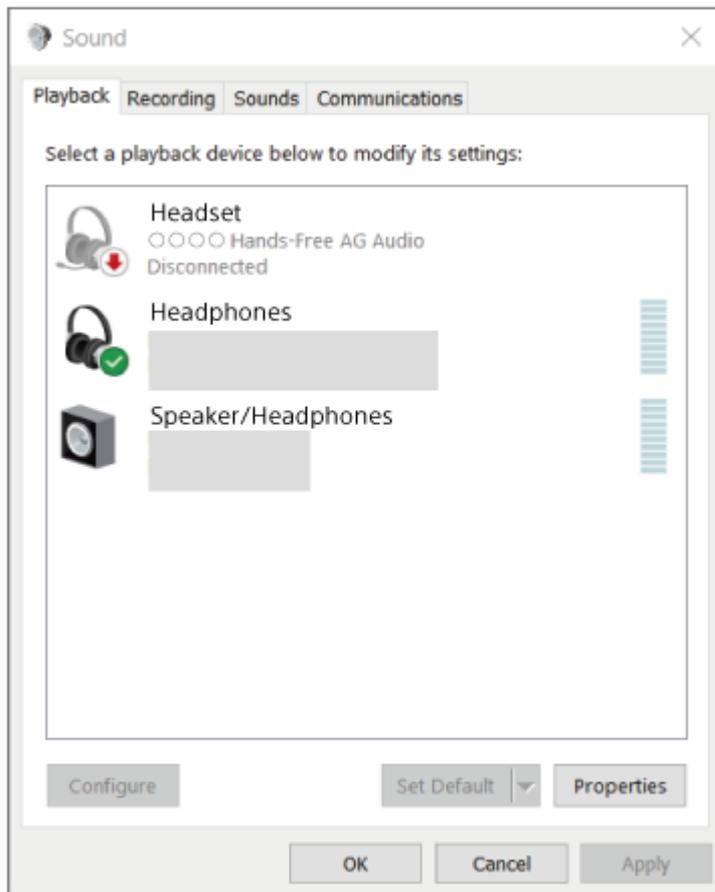

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.

Note

- If the music playback sound quality is poor, check that the A2DP function which supports music playback connections is enabled in the computer settings. For more details, refer to the operating instructions supplied with the computer.
- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your computer to the headset, delete the headset pairing information on your computer and perform the pairing again. As for the operations on your computer, refer to the operating instructions supplied with the computer.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with a computer \(Windows® 10\)](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)

Connecting to a paired computer (Windows 8.1)


Before starting the operation, make sure of the following:

- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.

1 Wake the computer up if the computer is in standby (sleep) or hibernation mode.


2 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

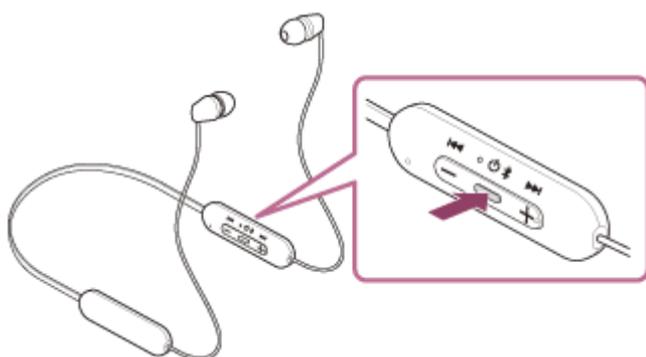

You will hear the voice guidance say, "Power on".

The indicator (blue) continues to flash even after you release your finger from the button.


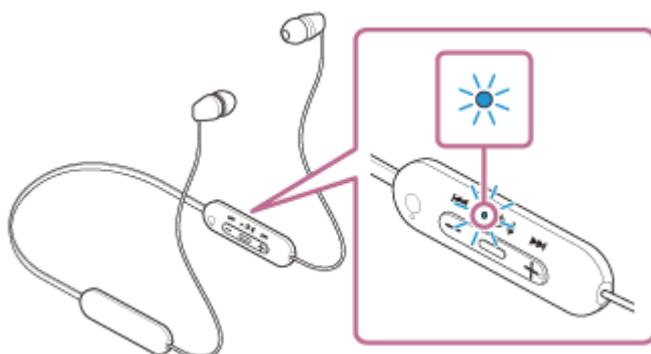


If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".


Check the connection status on the computer. If it is not connected, proceed to step **3**.

3 Select the headset using the computer.


1. Select [Desktop] on the Start screen.
2. Right-click the [Start] button, then select [Control Panel] from the pop-up menu.
3. Select [Hardware and Sound] - [Sound].

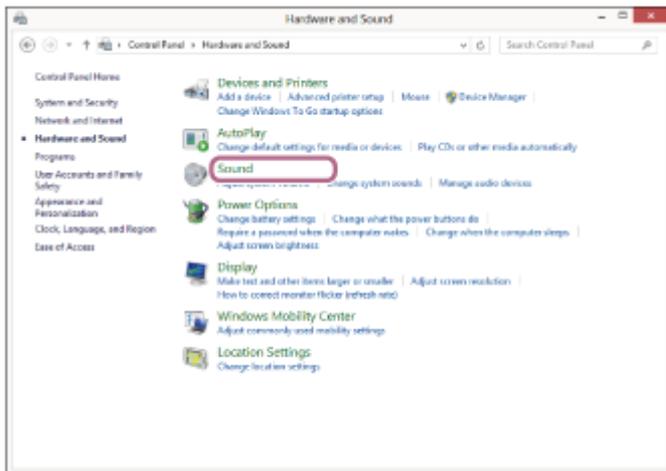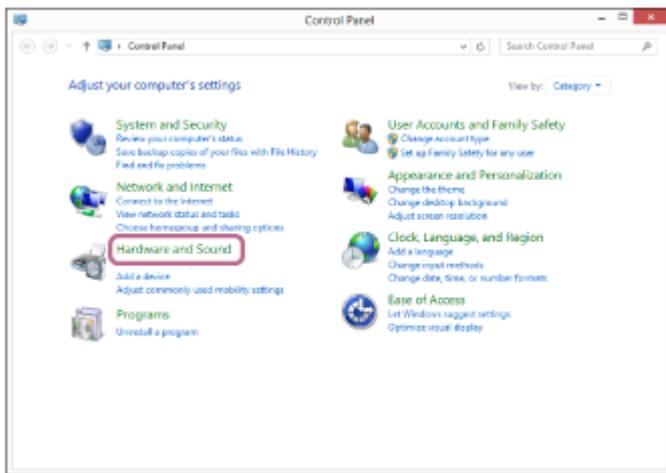


4. Right-click [WI-C100].
If [WI-C100] is not displayed on the [Sound] screen, right-click on the [Sound] screen, then check [Show Disconnected Devices].

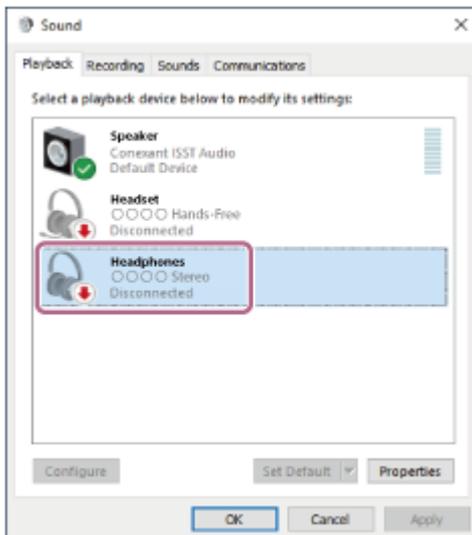

5. Select [Connect] from the displayed menu.

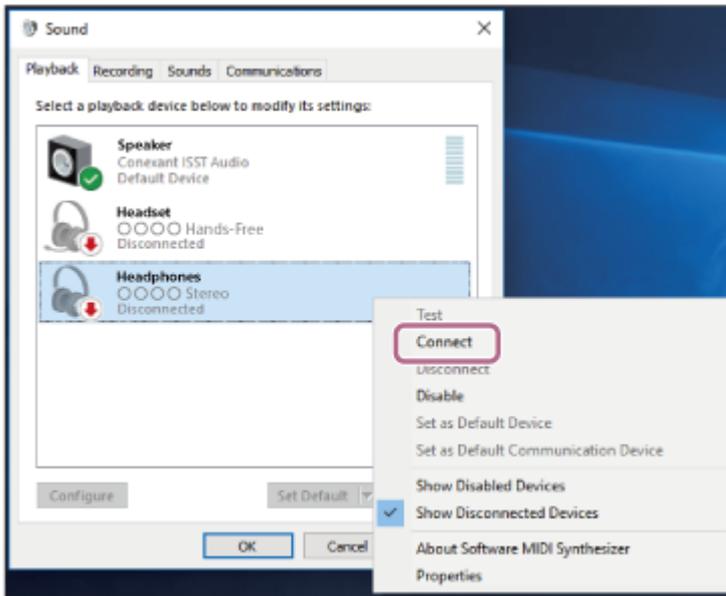

The connection is established.
You will hear the voice guidance say, “Bluetooth connected”.

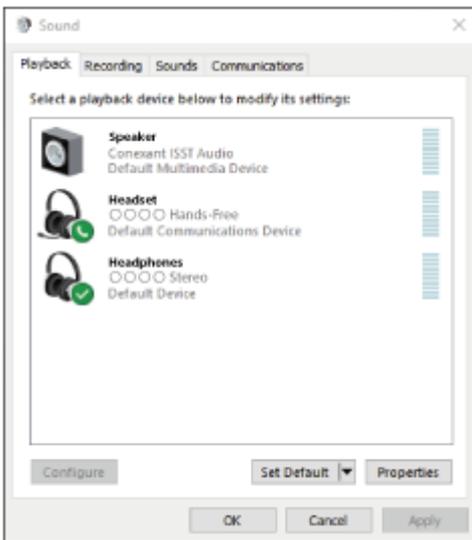

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.

Note

- If the music playback sound quality is poor, check that the A2DP function which supports music playback connections is enabled in the computer settings. For more details, refer to the operating instructions supplied with the computer.
- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your computer to the headset, delete the headset pairing information on your computer and perform the pairing again. As for the operations on your computer, refer to the operating instructions supplied with the computer.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with a computer \(Windows 8.1\)](#)

- Listening to music from a device via Bluetooth connection
- Disconnecting Bluetooth connection (after use)

5-036-709-11(2) Copyright 2022 Sony Corporation

Connecting to a paired computer (Mac)

Compatible OS

macOS (version 10.15 or later)

Before starting the operation, make sure of the following:

- Depending on the computer you are using, the built-in Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.
- Set the computer speaker to the ON mode.
If the computer speaker is set to the  "OFF" mode, no sound is heard from the headset.


Computer speaker in the ON mode



1 Wake the computer up if the computer is in standby (sleep) or hibernation mode.


2 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

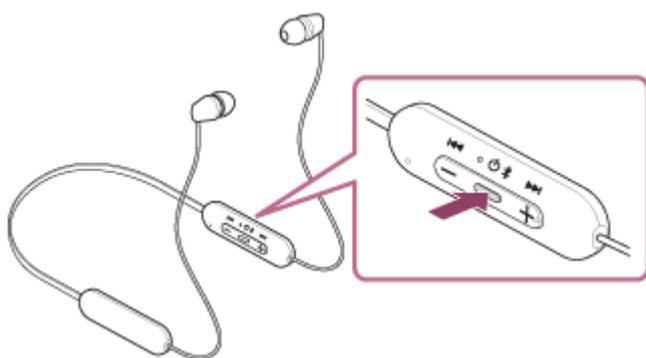

You will hear the voice guidance say, "Power on".

The indicator (blue) continues to flash even after you release your finger from the button.

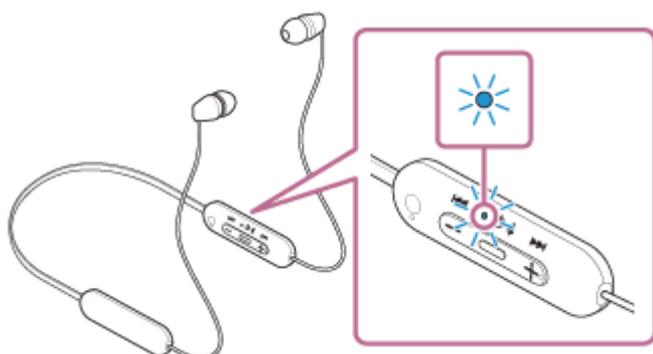

If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".

Check the connection status on the computer. If it is not connected, proceed to step **3**.

3 Select the headset using the computer.

1. Select [ (System Preferences)] - [Bluetooth] from the Dock at the bottom of the screen.



2. Click [WI-C100] on the [Bluetooth] screen while pressing the computer Control button and select [Connect] from the pop up menu.



The connection is established.

You will hear the voice guidance say, "Bluetooth connected".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the computer.

Note

- If the music playback sound quality is poor, check that the A2DP function which supports music playback connections is enabled in the computer settings. For more details, refer to the operating instructions supplied with the computer.
- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your computer to the headset, delete the headset pairing information on your computer and perform the pairing again. As for the operations on your computer, refer to the operating instructions supplied with the computer.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with a computer \(Mac\)](#)

- Listening to music from a device via Bluetooth connection
- Disconnecting Bluetooth connection (after use)

5-036-709-11(2) Copyright 2022 Sony Corporation

Pairing and connecting with a Bluetooth device

The operation to register the device that you wish to connect to is called “pairing”. First, pair a device to use it with the headset for the first time.


Before starting the operation, make sure of the following:

- The Bluetooth device is placed within 1 m (3 feet) of the headset.
- The headset is charged sufficiently.
- The operating instructions of the Bluetooth device is in hand.


1 Enter pairing mode on this headset.

Turn on the headset when you pair the headset with a device for the first time after you bought it or after you initialized the headset (the headset has no pairing information). The headset enters pairing mode automatically. In this case, proceed to step 2 .

When you pair a second or subsequent device (the headset already has pairing information for other devices), press and hold the  (power) button for about 5 seconds to enter pairing mode manually.

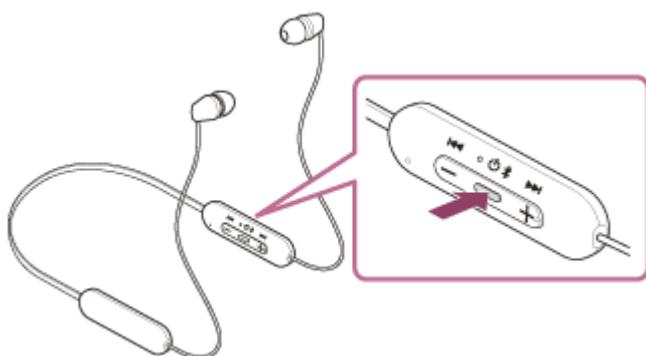

The indicator (blue) repeatedly flashes twice in a row. You will hear the voice guidance say, “Bluetooth pairing”.

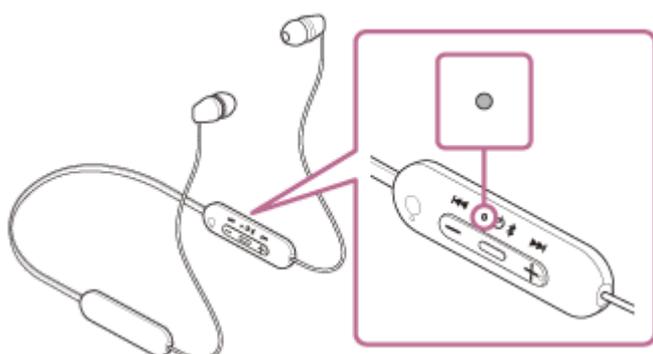

2 Perform the pairing procedure on the Bluetooth device to search for this headset.

[WI-C100] will be displayed on the list of detected devices on the screen of the Bluetooth device.

If it is not displayed, repeat from step 1 .

3 Select [WI-C100] displayed on the screen of the Bluetooth device for pairing.

If Passkey (*) input is required, input “0000”.

* A Passkey may be called “Passcode”, “PIN code”, “PIN number”, or “Password”.

4 Make the Bluetooth connection from the Bluetooth device.

Some devices automatically connect with the headset when the pairing is complete. You will hear the voice guidance say, "Bluetooth connected".

If they are not connected, see "[Connecting to a paired Bluetooth device](#)".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the Bluetooth device.
- To delete all Bluetooth pairing information, see "[Initializing the headset to restore factory settings](#)".

Note

- If pairing is not established within 5 minutes, pairing mode is canceled, and the headset turns off. In this case, start the operation again from step ①.
- Once Bluetooth devices are paired, there is no need to pair them again, except in the following cases:
 - Pairing information has been deleted after repair, etc.
 - When a 9th device is paired.
The headset can be paired with up to 8 devices. If a new device is paired after 8 devices are already paired, the registration information of the paired device with the oldest connection date is overwritten with the information for the new device.
 - When the pairing information for the headset has been deleted from the Bluetooth device.
 - When the headset is initialized.
All of the pairing information is deleted. In this case, delete the pairing information for the headset from the connected device and then pair them again.
- The headset can be paired with multiple devices, but can only play music from 1 paired device at a time.


Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Connecting to a paired Bluetooth device](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Initializing the headset to restore factory settings](#)


Connecting to a paired Bluetooth device

1 Turn on the headset.

Press and hold the  (power) button for about 2 seconds.

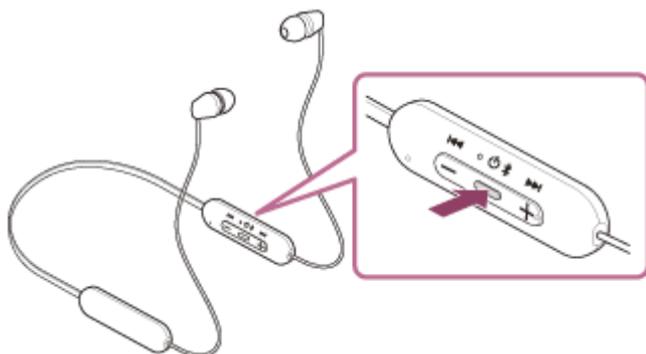

You will hear the voice guidance say, "Power on". The indicator (blue) continues to flash even after you release your finger from the button.

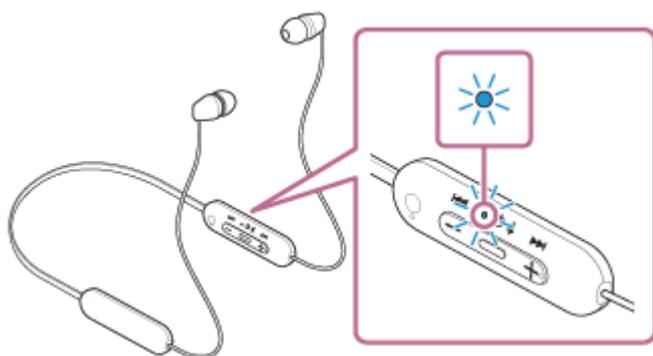

If the headset has automatically connected to the last connected device, you will hear the voice guidance say, "Bluetooth connected".

Check the connection status on the Bluetooth device. If it is not connected, proceed to step **2**.

2 Make the Bluetooth connection from the Bluetooth device.

As for the operations on your Bluetooth device, refer to the operating instructions supplied with the Bluetooth device. When connected, you will hear the voice guidance say, "Bluetooth connected".

Hint

- The operation above is an example. For more details, refer to the operating instructions supplied with the Bluetooth device.

Note

- If the last-connected Bluetooth device is placed near the headset, the headset may connect automatically to the device by simply turning on the headset. If this is the case, deactivate the Bluetooth function on the last-connected device or turn off the power.
- If you cannot connect your Bluetooth device to the headset, delete the headset pairing information on your Bluetooth device and perform the pairing again. As for the operations on your Bluetooth device, refer to the operating instructions supplied with the

Bluetooth device.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with a Bluetooth device](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Disconnecting Bluetooth connection \(after use\)](#)

5-036-709-11(2) Copyright 2022 Sony Corporation

Listening to music from a device via Bluetooth connection

If your Bluetooth device supports the following profiles, you can enjoy listening to music and control the device from your headset via Bluetooth connection.

- A2DP (Advanced Audio Distribution Profile)
You can enjoy high-quality music wirelessly.
- AVRCP (Audio Video Remote Control Profile)
You can adjust the volume, etc.


The operation may vary depending on the Bluetooth device. Refer to the operating instructions supplied with the Bluetooth device.

1 Connect the headset to a Bluetooth device.

2 Put on the headset.

Place the neckband on your neck so that the remote control component is on your left side, and put the left and right units on your ears. There are tactile dots on the remote control component and left unit.

Move the neckband and the left and right units up, down, left and right to adjust them into a position where they fit well.

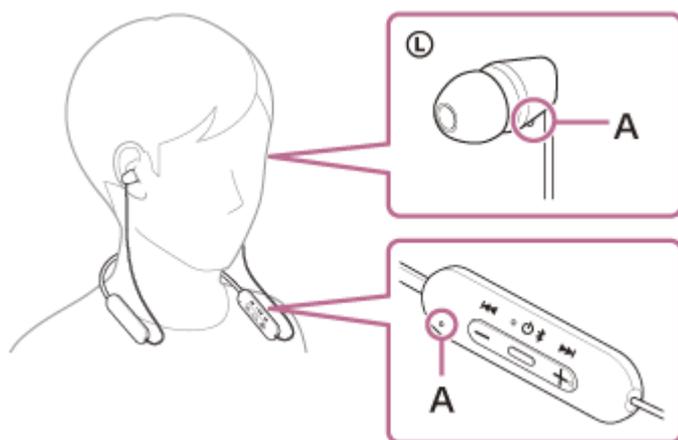


A: Tactile dot

3 Operate the Bluetooth device to start playback and adjust the volume to a moderate level.

4 Adjust the volume by pressing the +/- buttons of the headset.

There is a tactile dot on the + button.

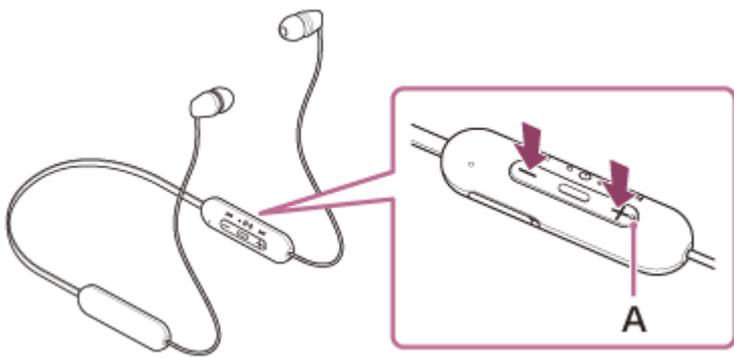

A: Tactile dot

When the volume reaches the maximum or minimum, an alarm sounds.

Hint

- The headset supports SCMS-T content protection. You can enjoy music and other audio on the headset from a device such as a mobile phone or portable TV that supports SCMS-T content protection.
- Depending on the Bluetooth device, it may be necessary to adjust the volume or set the audio output setting on the device.
- The headset volume during a call and during music playback can be independently adjusted. Changing the call volume does not change the volume of music playback and vice versa.

Note


- If the communication condition is poor, the Bluetooth device may react incorrectly to the operation on the headset.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Controlling the audio device \(Bluetooth connection\)](#)

Controlling the audio device (Bluetooth connection)

If your Bluetooth device supports the device operating function (compatible protocol: AVRCP), then the following operations are available. The available functions may vary depending on the Bluetooth device, so refer to the operating instructions supplied with the device.

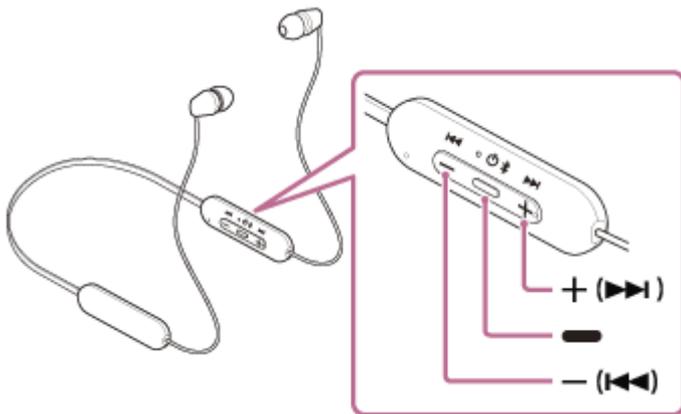

Each button has the following function:

■ (play)

- Play: Press once while paused.
- Pause: Press once during playback.

– (volume –)/ ◀◀ (previous)

+ (volume +)/ ▶▶ (next)

- Adjust the volume.
- Press and hold until you hear a beep to skip to the beginning of the previous track (or the current track during playback)/beginning of the next track. After releasing the button, press it repeatedly within 1 second to hear a beep and skip to the beginning of the previous/next track.

Note

- If the communication condition is poor, the Bluetooth device may react incorrectly to the operation on the headset.
- The available functions may vary depending on the connected device, the music software, or app used. In some cases, it may operate differently or may not work even when the operations described above are performed.

Disconnecting Bluetooth connection (after use)

1 Disconnect the Bluetooth connection by operating the Bluetooth device.

When disconnected, you will hear the voice guidance say, "Bluetooth disconnected".

2 Turn off the headset.

You will hear the voice guidance say, "Power off".

Hint

- When you finish playing music, the Bluetooth connection may terminate automatically depending on the Bluetooth device.

Related Topic

- [Turning off the headset](#)

Wireless Stereo Headset
WI-C100

About 360 Reality Audio

What is 360 Reality Audio?

360 Reality Audio is a new music experience using Sony's 360 three-dimensional audio technology.

Positional information is attached to each sound source such as vocals, chorus, and musical instruments, and are placed in a spherical space.

Listeners can experience a three-dimensional sound field as if they are immersed in a live performance of the artists.

Conditions of use

Download and use a music streaming service (charged) app that supports 360 Reality Audio on your smartphone or tablet equipped with iOS or Android.

By optimizing the sound field and the acoustic feature of headset with the "Sony | Headphones Connect" app, you can enjoy a more realistic sense of reality.

For details on "360 Reality Audio", refer to the following URL.

<https://www.sony.net/360RA/>

Note

- Service is not available in certain countries and regions.

Wireless Stereo Headset
WI-C100

About the sound quality mode

The following 2 sound quality modes during Bluetooth playback can be selected. You can switch the settings and check the sound quality mode with the “Sony | Headphones Connect” app.

Priority on sound quality: Prioritizes the sound quality (default).

Priority on stable connection: Prioritizes the stable connection.

- When you want to prioritize the sound quality, select the “Priority on sound quality”.
- If the connection is unstable, such as when producing only intermittent sound, select the “Priority on stable connection”.

Note

- The playback time may shorten depending on the sound quality and the conditions under which you are using the headset.
- Depending on the ambient conditions in the area where you are using the headset, intermittent sound may still occur even if the “Priority on stable connection” is selected.

Related Topic

- [What you can do with the “Sony | Headphones Connect” app](#)

Wireless Stereo Headset
WI-C100

Supported codecs

A codec is an audio coding algorithm used when transmitting sound wirelessly via Bluetooth connection. The headset supports the following 2 codecs for music playback via an A2DP connection: SBC and AAC.

- SBC

This is an abbreviation for Subband Codec.

SBC is the standard audio coding technology used in Bluetooth devices.

All Bluetooth devices support SBC.

- AAC

This is an abbreviation for Advanced Audio Coding.

AAC is mainly used in Apple products such as iPhone that can provide a higher sound quality than that of SBC.

When music in one of the above codecs is transmitted from a connected device, the headset switches to that codec automatically and plays back the music in the same codec.

If the connected device supports a codec of higher sound quality than SBC, you may need to set the device beforehand to enjoy music with the desired codec from the supported codecs.

Refer to the operating instructions supplied with the device regarding setting the codec.

Related Topic

- [About the sound quality mode](#)

About the DSEE function

The DSEE function complements the high-range sound, which is often lost from compressed sound sources, in the headset to the equivalent of CD sound quality.

Sound sources compressed by streaming playback, MP3, Bluetooth transmission codec, etc. are played with natural and expansive sound.

The DSEE function can be set up on the “Sony | Headphones Connect” app, and is only available when connected to the headset via Bluetooth connection.

Note

- When DSEE is set to [Auto], the available operating time is reduced.

Related Topic

- [What you can do with the “Sony | Headphones Connect” app](#)

Receiving a call

You can enjoy a hands-free call with a smartphone or mobile phone that supports the Bluetooth profile HFP (Hands-free Profile) or HSP (Headset Profile), via Bluetooth connection.

- If your smartphone or mobile phone supports both HFP and HSP, set it to HFP.
- The operation may vary depending on the smartphone or mobile phone. Refer to the operating instructions supplied with the smartphone or mobile phone.
- Depending on the connected device or the application you are using, the functions may not work properly even if you try to operate them with the headset.

Ring tone


When an incoming call arrives, a ring tone will be heard from the headset, and the indicator (blue) flashes quickly. You will hear either of following ring tones, depending on your smartphone or mobile phone.

- Ring tone set on the headset
- Ring tone set on the smartphone or mobile phone
- Ring tone only for a Bluetooth connection set on the smartphone or mobile phone


1 Connect the headset to a smartphone or mobile phone via Bluetooth connection beforehand.

2 When you hear the ring tone, press the **■** (call) button on the headset and receive the call.

When you receive an incoming call while listening to music, playback pauses and a ring tone will be heard from the headset.

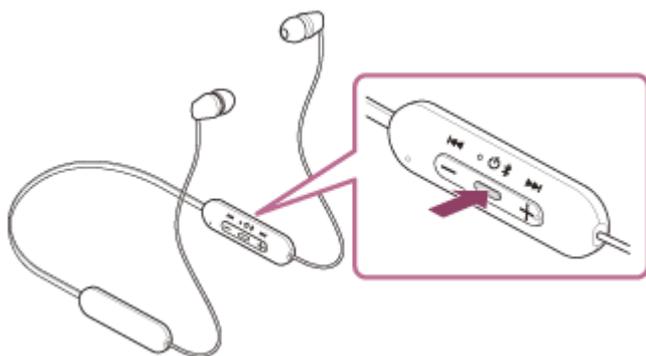

You can talk using the microphone on the headset.

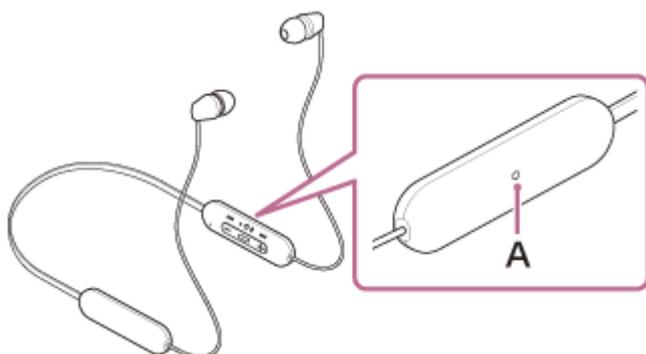

A: Microphone on the remote control component

If no ring tone is heard via the headset

- The headset may not be connected with the smartphone or mobile phone over HFP or HSP. Check the connection status on the smartphone or mobile phone.
- If playback does not pause automatically, operate the headset to pause playback.

3 Adjust the volume by pressing the +/- buttons of the headset.

When the volume reaches the maximum or minimum, an alarm sounds.

4 When you finish your phone call, press the **■** (call) button on the headset to end the call.

If you received a call during music playback, music playback resumes automatically after ending the call.

Hint

- When receiving a call by operating smartphones or mobile phones, some smartphones or mobile phones may receive a call with the phone instead of the headset. With an HFP or HSP connection, switch the call to the headset by pressing and holding the **■** (call) button for about 2 seconds or by using your smartphone or mobile phone.
- Volume for a call can be adjusted during a telephone conversation only.
- The headset volume during a call and during music playback can be independently adjusted. Changing the call volume does not change the volume of music playback and vice versa.

Note

- Depending on the connected device or playback application you are using, when you receive an incoming call while listening to music, playback may not resume automatically even after you finish the call.
- Use a smartphone or mobile phone at least 50 cm (19.69 in.) away from the headset. Noise may result if the smartphone or mobile phone is too close to the headset.
- Your voice will be heard from the headset through the headset's microphone (Sidetone function). In this case, ambient sounds or the sounds of the headset operation may be heard through the headset, but this is not a malfunction.
- If the headset's microphone rubs against your clothing, etc., noise may interfere with your voice on the call. When talking on the phone, change the direction of the remote control component so that the microphone's audio capture hole does not touch your clothing, etc.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Making a call](#)
- [Functions for a phone call](#)

Making a call

You can enjoy a hands-free call with a smartphone or mobile phone that supports the Bluetooth profile HFP (Hands-free Profile) or HSP (Headset Profile), via Bluetooth connection.

- If your smartphone or mobile phone supports both HFP and HSP, set it to HFP.
- The operation may vary depending on the smartphone or mobile phone. Refer to the operating instructions supplied with the smartphone or mobile phone.
- Depending on the connected device or the application you are using, the functions may not work properly even if you try to operate them with the headset.


1 Connect the headset to a smartphone/mobile phone via Bluetooth connection.

2 Operate your smartphone or mobile phone to make a call.


When you make a call, the dial tone is heard from the headset.

If you make a call while listening to music, playback pauses.

If no dial tone is heard via the headset, switch the call device to the headset by using your smartphone or mobile phone or by pressing and holding the **■** (call) button for about 2 seconds.

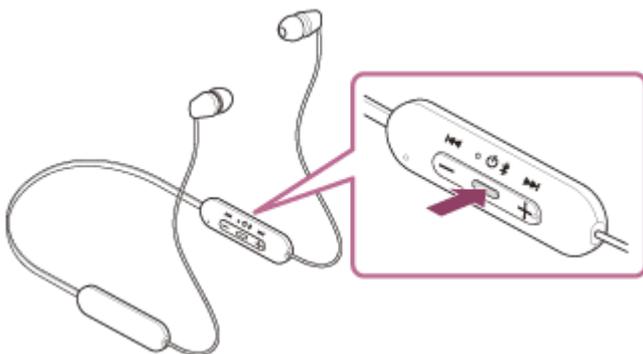

You can talk using the microphone on the headset.

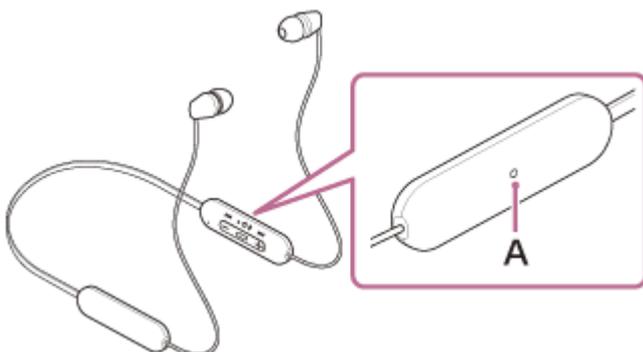

A: Microphone on the remote control component

3 Adjust the volume by pressing the +/- buttons of the headset.

When the volume reaches the maximum or minimum, an alarm sounds.

4 When you finish your phone call, press the **■ (call) button on the headset to end the call.**

If you made a call during music playback, music playback resumes automatically after ending the call.

Hint

- Volume for a call can be adjusted during a telephone conversation only.
- The headset volume during a call and during music playback can be independently adjusted. Changing the call volume does not change the volume of music playback and vice versa.

Note

- Depending on the connected device or playback application you are using, when you make a call while listening to music, playback may not resume automatically even after you finish the call.
- Use a smartphone or mobile phone at least 50 cm (19.69 in.) away from the headset. Noise may result if the smartphone or mobile phone is too close to the headset.
- Your voice will be heard from the headset through the headset's microphone (Sidetone function). In this case, ambient sounds or the sounds of the headset operation may be heard through the headset, but this is not a malfunction.
- If the headset's microphone rubs against your clothing, etc., noise may interfere with your voice on the call. When talking on the phone, change the direction of the remote control component so that the microphone's audio capture hole does not touch your clothing, etc.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Receiving a call](#)
- [Functions for a phone call](#)


Functions for a phone call

The functions available during a call may vary depending on the profile supported by your smartphone or mobile phone. In addition, even if the profile is the same, the functions may vary depending on the smartphone or mobile phone. Depending on the connected device or the application you are using, the functions may not work properly even if you try to operate them with the touch sensor control panel. Refer to the operating instructions supplied with the smartphone or mobile phone.

Supported profile: HFP (Hands-free Profile)

During standby/music playback

- Press the **■** (call) button twice in 0.5 seconds to start up the voice dial function of the smartphone/mobile phone, or activate the Google™ app on the Android smartphone or Siri on the iPhone.

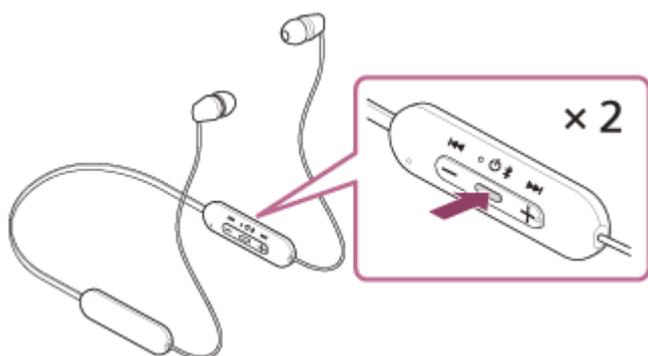

Outgoing call

- Press the **■** (call) button once to cancel an outgoing call.
- Press and hold the **■** (call) button for about 2 seconds to change the call device back and forth from the headset to the smartphone/mobile phone.

Incoming call

- Press the **■** (call) button once to answer a call.
- Press and hold the **■** (call) button for about 2 seconds to reject a call.

During call

- Press the **■** (call) button once to finish a call.
- Press and hold the **■** (call) button for about 2 seconds to change the call device back and forth from the headset to the smartphone/mobile phone.

Supported profile: HSP (Headset Profile)

Outgoing call

- Press the **■** (call) button once to cancel an outgoing call.

Incoming call

- Press the **■** (call) button once to answer a call.

During call

- Press the  (call) button once to finish a call.

Related Topic

- [Receiving a call](#)
- [Making a call](#)

5-036-709-11(2) Copyright 2022 Sony Corporation

Making a video call on your computer

When you make a video call on your computer, you can talk wirelessly from your headset.

1 Connect the headset to your computer via Bluetooth connection.

2 Launch the video calling application on your computer.

3 Check the settings (*) of the video calling application.

- When you make a video call on your computer, select calling connections (HFP/HSP) and not music playback connections (A2DP). If you select music playback connections, a video call may not be available.
- On the speaker settings, select calling connections [Headset (WI-C100 Hands-Free)] (**). ([Headphones (WI-C100 Stereo)] (**)) is for music playback connections.)
- On the microphone settings, select calling connections [Headset (WI-C100 Hands-Free)] (**).
- Depending on the video calling application you are using, calling connections [Headset (WI-C100 Hands-Free)] (**) or music playback connections [Headphones (WI-C100 Stereo)] (**)) may not be selectable on the speaker or microphone settings, and only [WI-C100] may be displayed. If this is the case, select [WI-C100].
- As for frequently asked questions and answers, refer to the customer support website.

* Depending on the video calling application you are using, this function may not be available.

** Names may vary according to the computer or the video calling application you are using.

Hint

- When the settings of the video calling application cannot be checked or calling connections [Headset (WI-C100 Hands-Free)] cannot be selected, select [Headset (WI-C100 Hands-Free)] on the settings of your computer to make connections. See [“Connecting to a paired computer \(Windows 10\)”](#), [“Connecting to a paired computer \(Windows 8.1\)”](#) or [“Connecting to a paired computer \(Mac\)”](#).

Note

- Depending on the computer or application you are using, the headset may not work properly during a video call. This may be improved by restarting the computer.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Pairing and connecting with a computer \(Windows® 10\)](#)
- [Pairing and connecting with a computer \(Windows 8.1\)](#)
- [Pairing and connecting with a computer \(Mac\)](#)
- [Connecting to a paired computer \(Windows 10\)](#)
- [Connecting to a paired computer \(Windows 8.1\)](#)
- [Connecting to a paired computer \(Mac\)](#)
- [Disconnecting Bluetooth connection \(after use\)](#)
- [Customer support websites](#)

Disconnecting Bluetooth connection (after use)

1 Disconnect the Bluetooth connection by operating the Bluetooth device.

When disconnected, you will hear the voice guidance say, "Bluetooth disconnected".

2 Turn off the headset.

You will hear the voice guidance say, "Power off".

Hint

- When you finish playing music, the Bluetooth connection may terminate automatically depending on the Bluetooth device.

Related Topic

- [Turning off the headset](#)

Using the voice assist function (Google app)

By using the Google app feature that comes with the Android smartphone, you can speak to the headset's microphone to operate the Android smartphone.

1 Set the assist and voice input selection to the Google app.

On the Android smartphone, select [Settings] - [Apps & notifications] - [Advanced] - [Default apps] - [Assist & voice input], and set [Assist app] to the Google app.

The operation above is an example. For details, refer to the operating instructions of the Android smartphone.


Note: The latest version of the Google app may be required.

For details on the Google app, refer to the operating instructions or the support website of the Android smartphone, or the Google Play store website.

The Google app may not be activated from the headset depending on specifications of the Android smartphone.


2 Connect the headset to the Android smartphone via Bluetooth connection.

3 When the Android smartphone is in standby or playing music, press the **■** (play/call) button on the headset twice in 0.5 seconds.

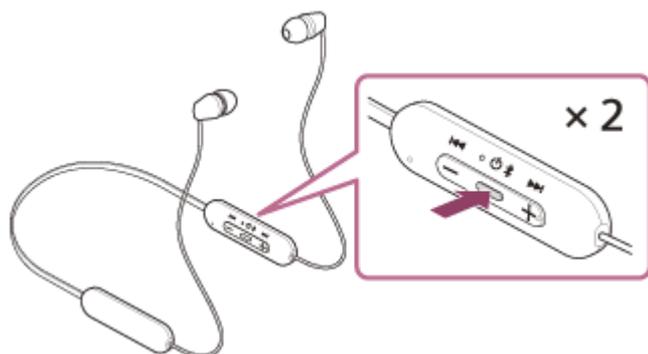

The Google app is activated.

4 Make a request to the Google app through the headset's microphone.

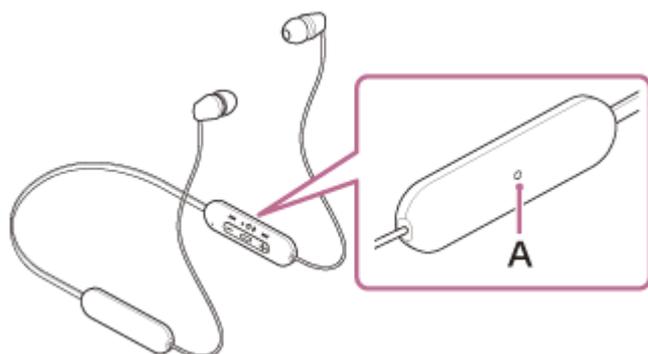

A: Microphone on the remote control component

For details on the apps which work with the Google app, refer to the operating instructions of the Android smartphone.

After activating the Google app, the voice command is canceled when a certain time has passed without requests.

Note

- The Google app cannot be activated when you say "Ok Google" even when the Android smartphone's "Ok Google" setting is on.
- When using the voice assist function, your voice will be heard from the headset through the headset's microphone (Sidetone function). In this case, ambient sounds or the sounds of the headset operation may be heard through the headset, but this is not a malfunction.
- If the headset's microphone rubs against your clothing, etc., noise may interfere with your voice input. When inputting a voice command, change the direction of the remote control component so that the microphone's audio capture hole does not touch your clothing, etc.
- The Google app may not be activated depending on specifications of the smartphone or application version.
- The Google app does not work when connected to a device not compatible with the voice assist function.
- Be careful because the headset will turn off when you press and hold the  (play/call) button.

Using the voice assist function (Siri)


By using the Siri feature that comes with iPhone, you can speak to the headset's microphone to operate the iPhone.

1 Turn Siri on.

On iPhone, select [Settings] - [Siri & Search] to turn [Press Home for Siri] and [Allow Siri When Locked] on. The operation above is an example. For details, refer to the operating instructions of the iPhone.
Note: For details on Siri, refer to the operating instructions or support website of the iPhone.


2 Connect the headset to the iPhone via Bluetooth connection.

3 When the iPhone is in standby or playing music, press the **■** (play/call) button on the headset twice in 0.5 seconds.

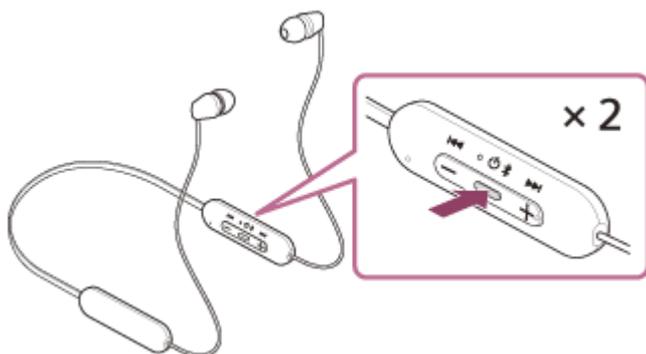

Siri is activated.

4 Make a request to Siri through the headset's microphone.

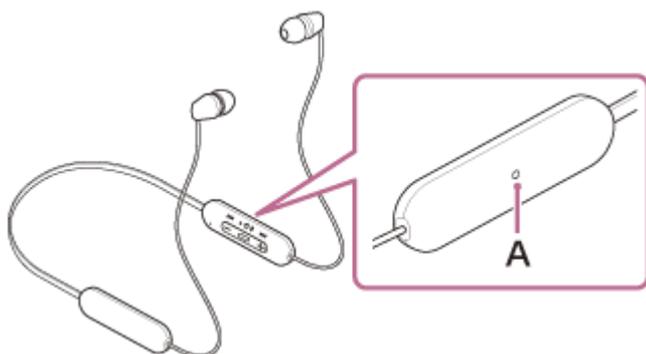

A: Microphone on the remote control component

For details on the apps which work with Siri, refer to the operating instructions of the iPhone. After activating Siri, when a certain time has passed without requests, Siri will be deactivated.

Note

- Siri cannot be activated when you say "Hey Siri" even when the iPhone's "Hey Siri" setting is on.

- When using the voice assist function, your voice will be heard from the headset through the headset's microphone (Sidetone function). In this case, ambient sounds or the sounds of the headset operation may be heard through the headset, but this is not a malfunction.
- If the headset's microphone rubs against your clothing, etc., noise may interfere with your voice input. When inputting a voice command, change the direction of the remote control component so that the microphone's audio capture hole does not touch your clothing, etc.
- Siri may not be activated depending on specifications of the smartphone or application version.
- Be careful because the headset will turn off when you press and hold the  (play/call) button.

Wireless Stereo Headset
WI-C100

What you can do with the “Sony | Headphones Connect” app

When you connect the smartphone with the “Sony | Headphones Connect” app installed and the headset via Bluetooth connection, you can do the following.

- Update the headset software
- Switch the voice guidance language
- Turn the voice guidance on/off
- Set the Bluetooth connection mode (sound quality mode)
- Turn off the headset
- Check the connection status and the settings of the headset
- Check the headset software version
- Display the Bluetooth connection codec
- Select the Equalizer setting
- Customize the Equalizer setting
- Set the DSEE function
- Display the remaining battery charge of the headset
- Adjust the volume during music playback/phone call
- Play/pause music, skip to the beginning of the previous track (or the current track during playback)/skip to the beginning of the next track
- Easy pairing
- Set the CLEAR BASS function
- Set the 360 Reality Audio function

For details on the “Sony | Headphones Connect” app, refer to the following URL.

https://rd1.sony.net/help/mdr/hpc/h_zz/

Hint

- The operation of the “Sony | Headphones Connect” app differs depending on the audio device. The app specifications and screen design may change without prior notice.

Related Topic

- [Installing the “Sony | Headphones Connect” app](#)
- [Checking the remaining battery charge](#)
- [About the sound quality mode](#)
- [Supported codecs](#)
- [About the DSEE function](#)

Installing the “Sony | Headphones Connect” app

- 1 Download the “Sony | Headphones Connect” app from the Google Play store or App Store, and install the app on your smartphone.

For details on the “Sony | Headphones Connect” app, refer to the following URL.

https://rd1.sony.net/help/mdr/hpc/h_zz/



- 2 After installing the app, launch the “Sony | Headphones Connect” app.
-

Related Topic

- [What you can do with the “Sony | Headphones Connect” app](#)

Wireless Stereo Headset
WI-C100

Accessing support information from the “Sony | Headphones Connect” app

You can access the latest support information from the “Sony | Headphones Connect” app.

- 1 Select [Help] on the “Sony | Headphones Connect” app screen.
- 2 The [Headphones Connect Help] screen appears and support information is displayed.
- 3 Select the desired item.

How to keep the software up-to-date (for comfortable use of the headset)

If your headset has the latest software, a notification will appear on the screen of the “Sony | Headphones Connect” app. Update the headset software following the on-screen instructions.

Install the latest headset software to enjoy new functions or to resolve a certain number of issues with the headset. Always use the headset with the latest software installed.

For details on the latest headset software and how to update the software, refer to the information on the support website.

When the [Automatic download of software] setting is enabled (default setting) on the “Sony | Headphones Connect” app, the download and transfer of the software will start automatically.

You can also update the headset software in the following way.

- 1 Download the update software from the server to the smartphone on which the “Sony | Headphones Connect” app is installed.**
- 2 Transfer the update software from the smartphone to the headset.**
- 3 Update the headset software following the on-screen instructions.**

Note

- It is recommended to disable the automatic power off function of the headset before the update. In the factory settings, when the headset is not connected via Bluetooth connection for about 15 minutes, the headset turns off automatically. This setting can be changed using the “Sony | Headphones Connect” app.
- When the mobile device used for the update has any other Bluetooth devices connected to it, turn off all the Bluetooth devices until the update is complete. Software may not be updated when the mobile device is connected with other devices compatible with Bluetooth Low Energy (such as wearable devices, smart watches, etc.).
- Note the following if the update cannot be completed.
 - Close all the apps installed on the mobile device except the “Sony | Headphones Connect” app.
 - Fully charge the headset and the mobile device.
 - Put the headset and the mobile device being used for the update as close to each other as possible before starting the update.
 - Do not start the update if there are wireless LAN devices or other Bluetooth devices nearby.
 - Turn off the power saving mode (*) of your smartphone before updating the software. Depending on the OS version of your smartphone, the update may not be completed under the power saving mode.

* Names may vary according to the smartphone you are using.

Related Topic

- [What you can do with the “Sony | Headphones Connect” app](#)

Wireless Stereo Headset
WI-C100

Precautions

On Bluetooth communications

- Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
- Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off the headset and other Bluetooth devices in the following locations, as it may cause an accident:
 - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.
- This product emits radio waves when used in wireless mode. When used in wireless mode on an airplane, follow flight crew directions regarding permissible use of products in wireless mode.
- The audio playback on the headset may be delayed from that on the transmitting device, due to the characteristics of Bluetooth wireless technology. As a result, the sound may not be in sync with the image when viewing movies or playing games.
- The headset supports security functions that comply with the Bluetooth standard as a means of ensuring security during communication using Bluetooth wireless technology. However, depending on the configured settings and other factors, this security may not be sufficient. Be careful when communicating using Bluetooth wireless technology.
- Sony shall assume no responsibility for any damages or loss resulting from information leaks that occur when using Bluetooth communications.
- Bluetooth connections with all Bluetooth devices cannot be guaranteed.
 - Bluetooth devices connected with the headset must comply with the Bluetooth standard prescribed by Bluetooth SIG, Inc., and must be certified as compliant.
 - Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation.
 - When using the headset to perform hands-free talking on the phone, noise may occur depending on the connected device or the communication environment.
- Depending on the device to be connected, it may require some time to start communications.
- The headset does not support multipoint connection.

With multipoint function support, the headset can connect to a music playback device (A2DP profile compatible device such as portable music player, etc.) and a communication device (HFP or HSP profile compatible device such as smartphone, etc.) at the same time, and you can listen to music while waiting for an incoming call or during a call.

Note on static electricity

- If you use the headset when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the headset. You can reduce the effect by wearing clothes made of natural materials that do not easily generate static electricity.

Notes on wearing the headset

- After use, remove the headset from your ears slowly.
- Because the earbud tips achieve a tight seal in the ears, forcibly pressing them in or quickly pulling them out can result in eardrum damage. When wearing the headset, the speaker diaphragm may produce a click sound. This is not a malfunction.

Other notes

- Do not subject the headset to excessive shock as it is a precision device.

- The Bluetooth function may not work with a mobile phone, depending on the signal conditions and the surrounding environment.
- If you experience discomfort while using the headset, stop using it immediately.
- The earbud tips may be damaged or deteriorate with long-term use and storage.
- If the earbud tips become dirty, remove them from the headset and gently wash them by hand using a neutral detergent. After cleaning, thoroughly wipe off any moisture.
- If water or foreign matter enters the headset, it may result in fire or electric shock. If water or foreign matter enters the headset, stop use immediately and consult your nearest Sony dealer.

Cleaning the headset

- When the headset exterior is dirty, wipe it clean with a soft dry cloth. If the headset is particularly dirty, soak a cloth in diluted neutral detergent, and wring it well before using it to clean the headset. Do not use solvents such as thinner, benzene, or alcohol, as they may damage the finish on the surface of the headset or cause other damages.

Do not use the headset near medical devices

- Radio waves can affect cardiac pacemakers and medical devices. Do not use the headset in crowded places such as crowded trains or inside a medical institution.
- The headset has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place the headset close to persons who use such medical devices. Consult your doctor before using the headset if you use any such medical device.

Keep the headset away from the magnetic card

- The headset has magnets. If you bring a magnetic card close to the headset, the card magnet may be affected and become unusable.

Wireless Stereo Headset
WI-C100

To prevent burning or malfunction due to getting wet

On water resistant performance of the headset

Avoid situations such as the following and be careful not to get moisture or dirt on the headset.

If the headset gets wet or dirty, see [“If the headset gets wet”](#) and clean them as described before use.

- Touching the headset without drying wet hands after doing housework in the kitchen or washing hands in the washroom




- Putting the headset in the chest pocket of a damp article of clothing



- Putting the headset in a bag with a cold PET bottle



- Spilling a drink while eating or drinking

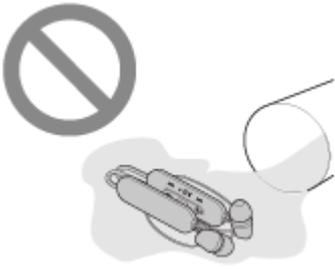

5-036-709-11(2) Copyright 2022 Sony Corporation

If the headset gets wet

On water resistant performance of the headset

- The water resistant specifications of this headset are equivalent to IPX4 in IEC 60529 “Degrees of protection against ingress of water (IP Code)”, which specifies the degree of protection provided against the entry of water. Unless the unit is used correctly, water may get into the headset and cause fire, electrocution, or malfunctions. Note the following cautions carefully and use the headset correctly.
IPX4: Protected against water splashing from any direction.
(Make sure that the USB Type-C port cover is closed securely when you use the headset.)
- The sound conduits (sound output tubes) and air holes of the headset are not completely watertight. If any water droplets are left in the sound conduits, air holes or microphone hole, the following issues may occur temporarily, but they are not malfunctions.
 - Sounds become difficult to hear.
 - Unusual sounds are heard.
 - Voices during phone calls become difficult to hear.

Liquids that the water resistant performance specifications of the headset apply to

Applicable:	Fresh water, tap water, perspiration
Not applicable:	Liquids other than those above (examples: soapy water, detergent water, water with bath agents, shampoo, hot spring water, hot water, pool water, seawater, etc.)

The water resistant performance of the headset is based on measurements performed by Sony under the conditions described above. Note that malfunctions resulting from water immersion caused by customer misuse are not covered by the warranty.


To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the headset.

- Make sure the USB Type-C port cover is closed securely when using the headset. If there is any foreign material on the cover or it is not completely closed, water resistant performance cannot be maintained. Water may get inside and cause the headset to malfunction.
- Make sure the sound output part of the headset does not come in contact with strong splashes of water.
- Do not drop the headset into water, and do not use underwater.
- Do not allow the headset to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water after use.
- Do not place the headset in water or use it in a humid place such as a bathroom.
- Do not drop the headset or expose it to mechanical shock. Doing so may deform or damage the headset, resulting in deterioration of water resistance performance.
- If the headset gets wet,
 1. Use a soft dry cloth to wipe off any water that gets on the headset.
 2. Remove the earbud tips, turn the sound conduits and the air holes downward, and shake several times to get the water out.




3. Turn the microphone hole downward and gently tap it about 10 times on a dry cloth, etc. to remove any water collected inside.

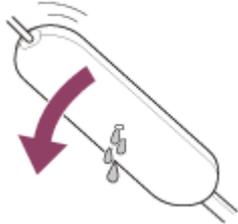


4. Leave the headset to dry in room temperature.

- If the headset units are charged while they are wet with sweat, etc., the charging ports will corrode. Before charging, wipe off any moisture with a soft dry cloth and leave to dry in room temperature. Repairs in case of a malfunction without care are not covered by the free warranty.

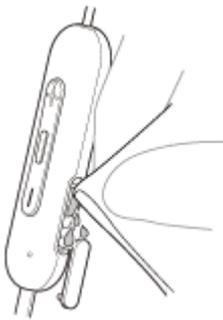

- If the charging port of the headset gets dirty, wipe it clean with a soft dry cloth.
- Do not wash pants or shirts with the headset left in a pocket.

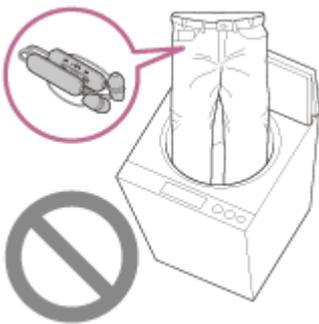

- If the headset is cracked or deformed, refrain from using the headset near water, or contact your nearest Sony dealer.

Wireless Stereo Headset

WI-C100

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
<https://rd1.sony.net/help/mdr/sl/22/>
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Wireless Stereo Headset
WI-C100

Trademarks

- Microsoft, Windows and Windows Media are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- iPhone, iPod touch, macOS, Mac and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Google, Android and Google Play are trademarks of Google LLC.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- DSEE is a trademark or registered trademark of Sony Group Corporation or its affiliates.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and ® marks are not specified.

Wireless Stereo Headset
WI-C100

Customer support websites

For customers in the U.S.A, Canada, and Latin America:

<https://www.sony.com/am/support>

For customers in European countries:

<https://www.sony.eu/support>

For customers in China:

<https://service.sony.com.cn>

For customers in other countries/regions:

<https://www.sony-asia.com/support>

What can I do to solve a problem?

If the headset does not function as expected, try the following steps to resolve the issue.

- Find the symptoms of the issue in this Help Guide, and try any corrective actions listed.
- Charge the headset.
You may be able to resolve some issues by charging the headset battery.
- Restart the device that is being connected to the headset.
You may be able to resolve some issues by restarting the device being connected such as your computer or smartphone.
- Reset the headset.
- Initialize the headset.
This operation resets volume settings, etc. to the factory settings, and deletes all pairing information.
- Look up information on the issue on the customer support website.

If the operations above do not work, consult your nearest Sony dealer.

Related Topic

- [Charging the headset](#)
- [Customer support websites](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Wireless Stereo Headset
WI-C100

Unable to turn on the headset.

- Make sure the battery is fully charged.
 - The headset cannot be turned on while charging the battery. Remove the USB Type-C cable and turn on the headset.
 - Reset the headset.
 - Initialize the headset, and pair the headset and the device again.
-

Related Topic

- [Charging the headset](#)
- [Checking the remaining battery charge](#)
- [Turning on the headset](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Wireless Stereo Headset
WI-C100

Charging cannot be done.

Common

- It is recommended to charge in a place with an ambient temperature between 15 °C and 35 °C (59 °F - 95 °F). Efficient charging may not be possible beyond this range.
- Reset the headset.
- Initialize the headset, and pair the headset and the device again.

When charging with a USB AC adaptor

- Make sure that the USB AC adaptor is firmly connected to the AC outlet.
- When using a commercially available USB AC adaptor, use one capable of supplying an output current of 0.5 A (500 mA) or more.

When charging with a computer

- Check that the USB Type-C cable is properly connected to the USB port of the computer.
- Check that the computer is turned on. Wake the computer up if the computer is in standby (sleep) or hibernation mode.
- Check that the headset and the computer are directly connected, and not via a USB hub.
- There may be a problem with the USB port of the connected computer. Try connecting to another USB port on the computer if one is available.
- Update the OS of the computer.
- Restart the computer and try the USB connection procedure again in cases other than those stated above.

Related Topic

- [Charging the headset](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Wireless Stereo Headset

WI-C100

Charging time is too long.

- When charging with a computer, check that the headset and the computer are directly connected, and not via a USB hub.
 - It is recommended to charge in a place with an ambient temperature between 15 °C and 35 °C (59 °F - 95 °F). Efficient charging may not be possible beyond this range.
 - Restart the computer and try the USB connection procedure again in cases other than those stated above.
-
-

Related Topic

- [Charging the headset](#)

The available operating time is short (the duration of the battery is short).

- If you set the following functions, the available operating time of the battery becomes short.
 - DSEE
 - Equalizer
 - Sound quality mode during Bluetooth playback: Priority on sound quality

If you run the above settings at the same time, the available operating time of the battery becomes even shorter.

- If the headset is not used for a long time, the rechargeable battery usage hours may be reduced. However, the battery life will improve after charging and discharging several times. If you store the headset for a long time, charge the battery once every 6 months to avoid over-discharge.
- It is recommended to charge in a place with an ambient temperature between 15 °C and 35 °C (59 °F - 95 °F). Efficient charging may not be possible beyond this range. If the problem persists, consult your nearest Sony dealer.
- If the usage hours of the built-in rechargeable battery decrease significantly, the battery should be replaced. Consult your nearest Sony dealer.

Related Topic

- [Available operating time](#)

Wireless Stereo Headset
WI-C100

No sound

- Check that both the headset and the connected device are turned on.
 - When playing music, check that the headset and the transmitting Bluetooth device are connected via an A2DP Bluetooth connection.
 - Turn up the volume if it is too low.
 - Check that the connected device is playing back.
 - If you are connecting a computer to the headset, make sure the audio output setting of the computer is set for a Bluetooth device.
 - Pair the headset and the Bluetooth device again.
 - Restart the smartphone or the computer you use.
 - Reset the headset.
 - Initialize the headset, and pair the headset and the device again.
-

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Listening to music from a device via Bluetooth connection](#)
- [Making a video call on your computer](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Low sound level

- If the size of the earbud tips does not match the size of your ear canals or the headset is not worn properly in your ears, you may not obtain the correct sound qualities or volume.
If any of this is the case, try the following.
 - Check that you are wearing the headset properly in your ears. Wear the headset so that the earbud tip is comfortably situated as deep in the ear canal as possible.
- Turn up the volume of the headset and the connected device.
- Connect the Bluetooth device to the headset once again.
- The sound conduits (sound output tubes) and air holes of the headset are not completely watertight. If any water droplets are left in the sound conduits, air holes or microphone hole, the sound level becomes low temporarily, but this is not a malfunction.
- Reset the headset.
- Initialize the headset, and pair the headset and the device again.

Note

- Depending on the connected device, the volume of the device and the headset may or may not be synced. If the volume on a device is not synced to the volume on the headset, it will not be possible to use the device to turn up the volume on the headset once the volume is turned down on the headset.
In that case, turn up the volume of both the headset and the connected device.

Related Topic

- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Low sound quality, or noise or unusual sound can be heard.


- If the size of the earbud tips does not match the size of your ear canals or the headset is not worn properly in your ears, you may not obtain the correct sound qualities or volume.
If any of this is the case, try the following.
 - Check that you are wearing the headset properly in your ears. Wear the headset so that the earbud tip is comfortably situated as deep in the ear canal as possible.
- Turn down the volume of the connected device if it is too loud.
- When playing music, if the headset and the transmitting Bluetooth device are connected via an HFP or HSP Bluetooth connection, switch the Bluetooth connection to A2DP with the connected device.
- When using a video calling application on a computer, switch the Bluetooth connection to HFP or HSP with the computer.
During a video call, sound quality may become low due to the conditions of the communication line.
- If the headset connects to the previously connected Bluetooth device, the headset may only establish the HFP/HSP Bluetooth connection when it is turned on. Use the connected device to connect via an A2DP Bluetooth connection.
- When listening to music from a computer on the headset, the sound quality may be poor (e.g., difficult to hear the singer's voice, etc.) for the first few seconds after a connection is established. This is due to the computer specifications (priority on stable connection at the start of transmission and then switches to priority on sound quality several seconds later) and is not a headset malfunction.
If the sound quality does not improve after a few seconds, use the computer to establish an A2DP connection. As for the operations on your computer, refer to the operating instructions supplied with the computer.

Related Topic

- [Listening to music from a device via Bluetooth connection](#)
- [Making a video call on your computer](#)
- [What you can do with the “Sony | Headphones Connect” app](#)
- [Supported codecs](#)

Sound skips frequently.

- Set the headset to “Priority on stable connection”. For details, see [“About the sound quality mode”](#).
- The situation may be improved by changing the wireless playback quality settings on the transmitting device. For details, refer to the operating instructions supplied with the transmitting device.
- Remove any obstacles between the antenna of the connecting Bluetooth device and the built-in antenna of the headset. The antenna of the headset is built into the part shown in the dotted line below.

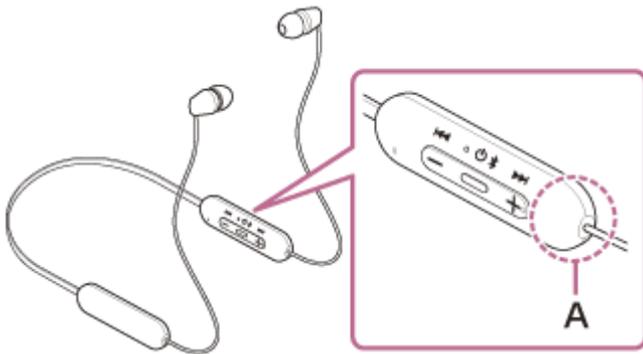

A: Location of the built-in antenna

- Bluetooth communications may be disabled, or noise or audio dropout may occur under the following conditions.
 - When there is a human body between the headset and the Bluetooth device
In this case, put the Bluetooth device in the same direction as the antenna of the headset to improve the Bluetooth communications.
 - When there is an obstacle, such as metal or a wall, between the headset and the Bluetooth device
 - In places with wireless LAN, where a microwave oven is used, electromagnetic waves are generated, etc.
 - Where there are other wireless communication audio devices or other people nearby, such as in train station premises or on a crowded train
- If you are enjoying music with your smartphone, the situation may be improved by closing unnecessary apps or restarting your smartphone. If you are enjoying music with your computer, close unnecessary applications or windows and restart the computer.
- Connect the headset and the Bluetooth device once again.
- Reset the headset.
- Initialize the headset, and pair the headset and the device again.

Related Topic

- [About the sound quality mode](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Pairing cannot be done.

- Bring the headset and the Bluetooth device within 1 m (3 feet) from each other.
 - When pairing a device for the first time after purchase or after initializing or repairing the headset, turn on the headset and the headset automatically enters pairing mode. To pair a second or subsequent device, press and hold the  (power) button on the headset for about 5 seconds to enter pairing mode.
 - When pairing a device once again after initializing or repairing the headset, you may be unable to pair the device if it retains pairing information for the headset (iPhone or other device). In this case, delete the pairing information for the headset from the device and pair them again.
 - Restart the connected device such as a smartphone or a computer you use, and pair the headset and the device again.
 - Reset the headset.
 - Initialize the headset, and pair the headset and the device again.
-

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Unable to make a Bluetooth connection.

- Check that the headset is turned on.
 - Check that the Bluetooth device is turned on and the Bluetooth function is on.
 - If the headset automatically connects to the last connected Bluetooth device, you may fail to connect the headset to other devices via Bluetooth connection. If this is the case, operate the last connected Bluetooth device and disconnect the Bluetooth connection.
 - Check if the Bluetooth device is in sleep mode. If the device is in sleep mode, cancel the sleep mode.
 - Check if the Bluetooth connection has been terminated. If terminated, make the Bluetooth connection again.
 - If the pairing information for the headset has been deleted on the Bluetooth device, pair the headset with the device again.
 - Reset the headset.
 - Initialize the headset, and pair the headset and the device again.
-

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Wireless Stereo Headset

WI-C100

The headset does not operate properly.

- Reset the headset. This operation does not delete pairing information.
 - If the headset does not operate properly even if you reset the headset, initialize the headset.
-

Related Topic

- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Cannot hear a person during a call/low voice from callers, your voice does not reach the person during a call/your voice is low on the caller's side.

- If the size of the earbud tips does not match the size of your ear canals or the headset is not worn properly in your ears, you may not obtain the correct sound qualities or call performance.
If any of this is the case, try the following.
 - Check that you are wearing the headset properly in your ears. Wear the headset so that the earbud tip is comfortably situated as deep in the ear canal as possible.
- Check that both the headset and the connected device are turned on.
- Turn up the volume of the connected device and the volume of the headset if they are too low.
- When you use the video calling application, open the settings (*) of the video calling application, and check that the speaker or microphone setting is specified as [Headset (WI-C100 Hands-Free)](**). When the settings of the video calling application cannot be checked or calling connections [Headset (WI-C100 Hands-Free)] cannot be selected, select [Headset (WI-C100 Hands-Free)] on the settings of your computer to make connections.
 - * Depending on the video calling application you are using, this function may not be available.
 - ** Names may vary according to the computer or the video calling application you are using.
- Use the Bluetooth device to re-establish the connection. Select HFP or HSP for the profile.
- If you are listening to music with the headset, stop playback and press the **■** (call) button to respond to an incoming call.
- Reset the headset.
- Initialize the headset, and pair the headset and the device again.

Related Topic

- [How to make a wireless connection to Bluetooth devices](#)
- [Receiving a call](#)
- [Making a call](#)
- [Resetting the headset](#)
- [Initializing the headset to restore factory settings](#)

Wireless Stereo Headset
WI-C100

Earbud tips are damaged or lost.

- To change the earbud tips with new ones, purchase the EP-EX11 series (sold separately).

Wireless Stereo Headset

WI-C100

An earache occurs.

- Check that you are wearing the headset properly in your ears.
- If you wear the headset for a long time, your ears may start hurting. Use the headset while taking breaks periodically.


5-036-709-11(2) Copyright 2022 Sony Corporation

Resetting the headset

If the headset cannot be turned on or cannot be operated even when it is turned on, reset the headset.


1 Connect the headset to an AC outlet.

Use a commercially available USB Type-C cable and USB AC adaptor.

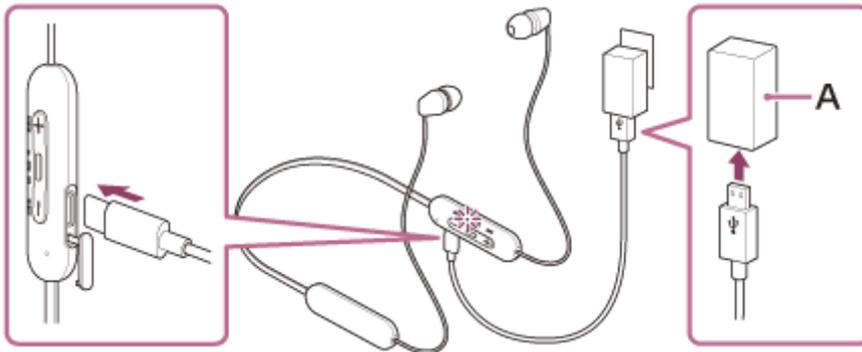

A: USB AC adaptor

2 Press the + (volume +) button and the - (volume -) button simultaneously.

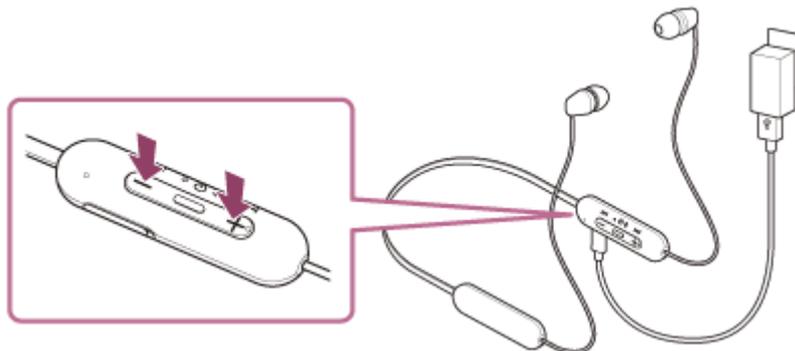

The headset will be reset.

The device registration (pairing) information and other settings are retained.

If the headset does not operate correctly even after resetting, initialize the headset to restore factory settings.


Related Topic

- [Initializing the headset to restore factory settings](#)

Initializing the headset to restore factory settings

If the headset does not operate correctly even after resetting, initialize the headset.

- 1 Turn off the headset.**
Remove the USB Type-C cable.
- 2 Press and hold the  (power) button and the  (volume -) button for about 7 seconds.**

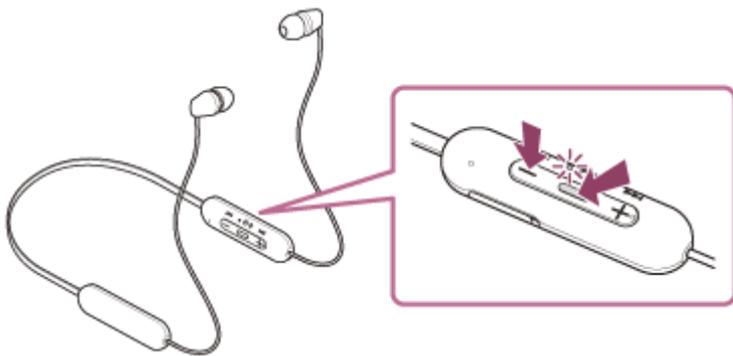

When the initializing is complete, the indicator (blue) flashes 4 times (● ● ● ●).

This operation resets volume settings, etc. to the factory settings, and deletes all pairing information. In this case, delete the pairing information for the headset from the connected device and then pair them again.

If the headset does not operate correctly even after initializing, consult your nearest Sony dealer.

Related Topic

- [Resetting the headset](#)

Wireless Stereo Headset
WI-C100

Specifications

Headset

Power source:

DC 3.7 V: Built-in lithium-ion rechargeable battery
DC 5 V: When charged using USB

Operating temperature:

0 °C to 40 °C (32 °F to 104 °F)

Usage hours:

- When connecting via the Bluetooth device
 - Music playback time: Max. 25 hours
 - Communication time: Max. 15 hours

Note

- Usage hours may be shorter depending on the Codec and the conditions of use.

Charging time:

Approx. 3 hours
(About 60 minutes of music playback is possible after 10 minutes charging.)

Note

- Charging and usage hours may be different depending on the conditions of use.

Charging temperature:

5 °C to 35 °C (41 °F to 95 °F)

Mass:

Approx. 20 g (0.71 oz)

Communication specification

Communication system:

Bluetooth Specification version 5.0

Output:

Bluetooth Specification Power Class 2

Maximum communication range:

Line of sight approx. 10 m (30 ft) (*1)

Frequency band:

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Compatible Bluetooth profiles (*2):

A2DP
AVRCP
HFP
HSP

Supported Codec (*3):

SBC
AAC

Transmission range (A2DP):

20 Hz - 20 000 Hz (Sampling frequency 44.1 kHz)

*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.

*2 Bluetooth standard profiles indicate the purpose of Bluetooth communications between devices.

*3 Codec: Audio signal compression and conversion format

Design and specifications are subject to change without notice.

Compatible iPhone/iPod models

iPhone 12 Pro Max
iPhone 12 Pro
iPhone 12
iPhone 12 mini
iPhone SE (2nd generation)
iPhone 11 Pro Max
iPhone 11 Pro
iPhone 11
iPhone XS Max
iPhone XS
iPhone XR
iPhone X
iPhone 8 Plus
iPhone 8
iPhone 7 Plus
iPhone 7
iPhone SE
iPhone 6s Plus
iPhone 6s
iPhone 6 Plus
iPhone 6
iPhone 5s
iPod touch (7th generation)
iPod touch (6th generation)
(As of January 2022)