

Gigaset

C530 - C530 A

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability.

This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Overview of handset



- 1 **Display** in idle status
- 2 **Status bar** (→ page 49)
Icons display current settings and operating status of the phone
- 3 **Display keys** (→ page 15, → page 25)
- 4 **Message key** (→ page 16)
Access to the calls and message lists;
Flashing: new message or new call
- 5 **End call key, On/off key**
End call;
Cancel function;
Go back one menu level (press **briefly**);
Back to idle status (press and **hold**);
Switch handset on/off (press and **hold** in idle status)
- 6 **Hash key**
Keypad lock on/off (press and **hold** in idle status);
Toggles between upper/lower case and digits;
Insert a dialling pause (press and **hold**)
- 7 **Microphone**
- 8 **Recall key**
Consultation call (flash) (press and **hold**)
- 9 **Star key**
In idle status: Ringtone on/off (press and **hold**);
With an open connection: Switch from pulse dialling to tone dialling (press **briefly**);
When inputting text: Open special characters table
- 10 **Connection socket for headset** (→ page 11)
- 11 **Key 1**
Select answer machine (C530A only)/ network mailbox (press and **hold**)
- 12 **Answer call key / Handsfree key**
Dial number displayed;
Accept call;
Switch from earpiece to handsfree mode;
Open the redial list (press **briefly**);
Start dialling (press and **hold**);
- 13 **Control key / Menu key** (→ page 14)

Overview of base station

Overview of base station

Gigaset C530A base station

**1 Display**

Lit up: The answer machine is activated. The number of saved messages is displayed.

00 flashing: The answer machine is recording a message.

Flashing slowly: There are new messages. The number of **new** messages is displayed.

99 flashing quickly: The answer machine is full.

2 On/Off/Playback/Stop key

Switch answer machine on/off (press and **hold**); Play new messages if available, or play back old messages/cancel playback (press **briefly**).

During playback:**3 Forward key**

Go to the next message.

4 Back key

Press **briefly**:

Skip to previous message during time stamp playback; Skip to the start of the current message during message playback (< 5 secs); Skip back 5 seconds (> 5 secs) during message playback.

Press and **hold**:

Go to the start of the message.

5 Volume adjustment

Adjust volume during message playback:

[**-**] = quieter; [**+**] = louder.

When an external call is displayed:

Adjust the ringtone volume.

6 Delete key

Delete current message.

7 Registration/paging key

Locate handsets ("Paging") (press **briefly**)

→ page 36.

Register handsets and DECT devices

(press and **hold**) → page 35.

Note

If the answer machine is being operated from a handset or if it is recording a message (00 flashing), it cannot be operated from the base at the same time.

Gigaset C530 base station

**Registration/paging key**

◆ Locate handsets ("Paging") (press **briefly**) → page 36.

◆ Register handsets and DECT devices (press and **hold**)

→ page 35.

Contents

Overview of handset	1
Overview of base station	2
Safety precautions	4
Getting started	5
Understanding the operating steps in the user guide	13
Getting to know your phone	14
Making calls	18
Adjusting the telephone settings	21
Operating a repeater	26
Changing the system PIN	27
Restoring phone to default setting	27
ECO DECT	28
Answer machine (Gigaset C530A)	29
Network mailbox	34
Multiple handsets	35
Phonebook (Address book)	38
Call list	41
Calendar	42
Alarm clock	44
Baby monitor	45
Operating the telephone on a router/PABX	47
Display icons	49
Menu tree	51
Customer Service & Assistance	54
Manufacturer warranty (Middle East)	55
Service Centres (Midde East)	56
Environment	61
Appendix	62
Accessories	66
Index	69

Safety precautions

Safety precautions



Read the safety precautions and the user guide before use.

The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.



Use only **rechargeable batteries** that correspond to the **specification** (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").

Getting started

Checking the contents of the package

- ◆ One **base station**,
- ◆ One power adapter for the base,
- ◆ One phone cord,
- ◆ One **handset**,
- ◆ One battery cover (rear cover for the handset),
- ◆ Two batteries,
- ◆ One belt clip,
- ◆ One user guide.

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover, a belt clip and a charging cradle with power adapter for each additional handset.

Setting up the base station and charging cradle (if included)

The base and charging cradle are designed for use in closed, dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base on a level, non-slip surface at a central point in the building or house, or mount the base on the wall (→ page 6).


The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, marks on the surfaces cannot be completely ruled out.

Notes

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.
- ◆ Pay attention to the range of the base. This is up to 50 m inside buildings and up to 300 m in unobstructed outdoor areas. The range is reduced when **Maximum Range** is deactivated (→ page 28).

Getting started

Connecting the base station to the telephone network and the mains power supply

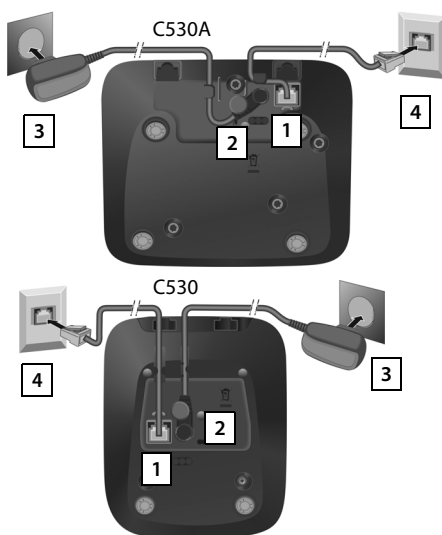

- ▶ Insert the phone cable into the connection socket [1] at the rear of the base until it clicks into place and feed under the cable protection.
- ▶ Insert the power cable for the power adapter into the connection socket [2] at the rear of the base and rotate the right-angle plug under the cable protection.
- ▶ Connect the power adapter [3].
- ▶ Connect the phone jack [4].


Notes

- ◆ The power adapter must **always be connected**, as the phone will not operate without a power supply.
- ◆ Use only the **supplied** power adapter and phone cord. Pin connections on telephone cables can vary (pin connections, → page 64).

Mounting the base station on the wall (optional)



Connecting the charging cradle (if included)

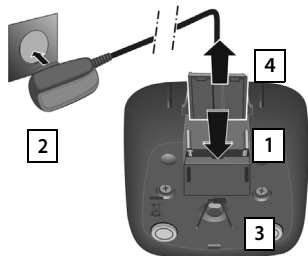

- ▶ Connect the flat plug to the charging cradle [1].
 - ▶ Plug the power adapter into the power socket [2].
- If you have to remove the plug from the charging cradle again:
- ▶ Disconnect the power adapter from the mains power supply.
 - ▶ Press the release button [3] and disconnect the plug [4].

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film!**

Inserting the batteries and closing the battery cover

Caution

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 63), as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.




- ▶ Insert the batteries with the polarity in the right direction (for correct +/- direction, see diagram).
 - ▶ Insert the battery cover on the top [1].
 - ▶ Then press the cover until it clicks into place [2].
- To **open the battery cover**, for example to change the batteries:
- ▶ Grip the notch on the cover [3] and slide it downwards [4].

Getting started

Belt clip

The handset has notches on each side to attach the belt clip.

- ◆ **To attach** — press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- ◆ **To remove** — press the centre of the belt clip firmly with your right thumb, push the fingernail of your left thumb up between the clip and the casing and pull the clip in an upward direction.

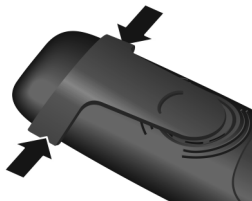

Charging the batteries

The batteries are supplied partially charged. Please charge completely before use. (The batteries are fully charged when the power icon ⚡ disappears from the display.)

- ▶ Charge the handset in the base for **8.5 hours**.








Notes

- ◆ The handset may only be placed in the designated base/charging cradle.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.
- ◆ Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "Please register handset" or "Place handset in base"), please register it manually (→ page 35).

Changing the display language

You can also change the display language via the menu:

 ▶  ▶ OK ▶  Language ▶ OK ▶  Select language ▶ **Select**
or, if you do not understand the language currently set, go to:

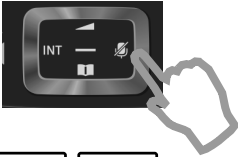

▶ Press right on the control key.




▶ Press keys  and  slowly one after the other.

Example



The language selection display appears.
The current language (e.g. English) is selected.



▶ Press the down control key  ...

Example





... until the language you wish to use is displayed e.g. French.

▶ Press the **right** key, directly under the display, to select the language.

Example




The selection is marked with .

▶ Press and **hold** the End call key  to return to idle status.

Getting started

Setting the date and time


Set the date/time so that the correct date and time can be assigned to incoming calls, and so that you can use the alarm.

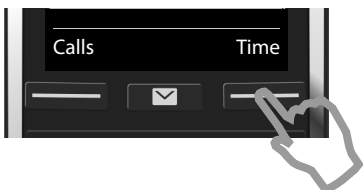

- ▶ Press the key **Time** below the display screen to open the input field.

(If you have already set the date/time, open the input field via the menu:

☰ ▶ ⚙ ▶ OK ▶ Date/Time ▶ OK)

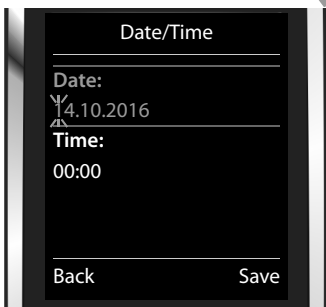


The submenu **Date/Time** is shown on the display.

- ▶ The active input position flashes.
Enter the day, month and year as an 8-digit number via the keypad, e.g.

1	4	1	0	2	0	1	6
INT	4	1	0	2	0	1	6

 for 14.10.2016.

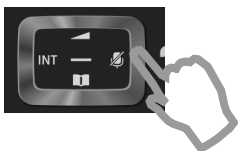

Press the **right** or **left** control key to change the input position, e.g. to correct an entry.




- ▶ Press the **down** control key to switch to the time input field.
- ▶ Enter the hours and minutes in 4-digit format via the keypad e.g.,


0	7	1	5
0	7	1	5

 for 07:15 am.
Change the input position with the control key if necessary.
- ▶ Press the key **Save** below the display screen to save the entry.

Getting started

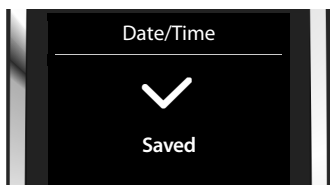

Display shows: **Saved**. You will hear a confirmation tone.

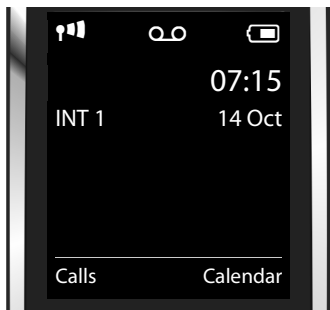

You will automatically return to idle status.

Your phone is now ready for use.

Connecting the headset



You can connect a headset with 2.5 mm jack connectors. For information on recommended headsets, see the relevant product page at www.gigaset.com

Getting started

What would you like to do next?

After successfully setting up the phone, you can make calls straight away, customise your Gigaset according to your requirements or firstly familiarise yourself with the operation.

Setting ringtones

Assign specific tunes to internal and external calls, reminders (→ page 23), wake-up calls (→ page 44) and to certain callers (→ page 38).

Protecting yourself against unwanted calls

Set your phone up so that it doesn't ring if there is an anonymous call or use the time control (→ page 24).

Setting up the answer machine

Record your own message and set your recording parameters (→ page 29).

Register an existing Gigaset handset and add it to the phonebook

Use available handsets to continue calling from your new base. Transfer directory entries from these handsets to your new handset (→ page 35, → page 39).









Configuring ECO DECT settings

Reduce the transmission power (emissions) of your phone (→ page 28).

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 58) or contact our Customer Service team (→ page 54).

Understanding the operating steps in the user guide

The keys on your Gigaset handset are set out in these operating instructions as follows:

 /  / 	Answer call key / Menu key / End call key
 0-9	Number / Letter keys
 * /  #	Star key / Hash key
 / 	Message key / Recall key










Overview of display icons (→ page 49).

Example: Activating/deactivating Auto Answer

Illustration in the user guide:

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change** (☑ = activated)


Follow this procedure:

- ▶ : With the handset in idle status, press the **right** control key to open the main menu.
- ▶ : Navigate to the  icon using the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Settings**.
- ▶  **Telephony**: Scroll to the entry **Telephony** with the control key .
- ▶ **OK**: Press the display key **OK** or the middle of the control key  to open the submenu **Telephony**.
- ▶ **Auto Answer**: The activate/deactivate auto answer function is selected.
- ▶ **Change** (☑ = activated): Press the display key **Change** or the middle of the control key  to alternate between activating or deactivating (☑ = activated, ☐ = deactivated).

Getting to know your phone


Getting to know your phone

Switching the handset on/off

- ▶ Press and **hold** the End call key  in idle status to switch the handset on or off.


Locking/unlocking the keypad

The keypad lock prevents any accidental use of the phone. If you press a key when the keypad is locked, a message is displayed.

- ▶ Press and hold the  key to lock or unlock the keypad.

If a call is signalled on the handset, the keypad automatically unlocks, and you can accept the call. It then locks again when the call is finished.






Control key

In the description below, the side of the control key (up, down, right, left, middle) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".




The control key allows you to navigate within menus and entry fields. In idle status or during an external call, it has the following functions:



When the handset is in idle status

-  Open the phonebook.
-  or  Open the main menu.
-  Open list of handsets.
-  Bring up the menu for setting the handset's call volume (→ page 20).

During an external call

-  Open the phonebook.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the centre of the control key

The key has different functions, depending on the operating situation.

- ◆ **In idle status**, it opens the main menu.
- ◆ **In submenus, selection and entry fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Note


These instructions demonstrate opening the main menu by pressing the right of the control key and confirming the functions by pressing the appropriate display key. However, if you prefer, you can also press the middle of the control key.

Display keys

The display keys have a function preset by default in idle status, but the keys can be re-assigned (→ page 25).

The functions of the display keys change depending on the operating situation.

Example

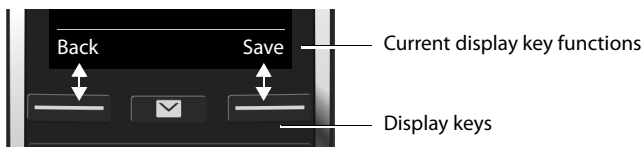

Some of the important display keys are:

- Options** Open a menu for further functions.
- OK** Confirm selection.
- Back** Skip back one menu level or cancel operation.
- Save** Save entry.

Overview of icons on the display keys (→ page 50).

Menu guidance

The functions of your telephone are displayed on a menu that consists of several levels. Menu overview → page 51.

Main menu (first menu level)

- ▶ When the handset is in idle status, press **right** on the control key to open the main menu.


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Use the control key to navigate to the required function and press the display key **OK**.

Returning to idle status: **Briefly** press the display key **Back** or End call key .

Example

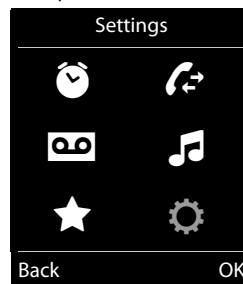

Getting to know your phone

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function using the control key (↶) and press OK.

Returning to the previous menu level: **Briefly** press the display key **Back** or End call key (⏏).

Returning to idle status


From any menu:

- ▶ Press and **hold** the End call key (⏏).

Or:

- ▶ If you do not press a key, the display **automatically** returns to idle status after 2 minutes.

Example

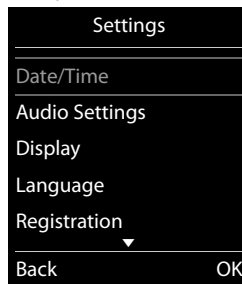

Message lists

Any messages you receive are saved in the message lists. An advisory tone sounds as soon as a **new entry** appears on a list. The Message key also flashes (if activated, → page 22). Icons for message types and the number of new messages are shown on the idle display.

New messages available:

- ◆ On the answer machine (only C530A)/network mailbox (→ page 31, → page 34)
- ◆ In the missed calls list
- ◆ In the missed alarms list (→ page 43)

Open the message list by pressing the Message key (ⓧ). You can access the following message lists:


- ◆ **Answer Mach.:** Answer machine list (only C530A)
- ◆ **Mailbox:** Network mailbox (if your network provider supports this function and the number of the network mailbox has been stored.)
- ◆ **Missed Calls:** Missed call list (see "Call list" → page 41)
- ◆ **Missed Alarms:** Missed appointments list

The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.


Opening the list: (↶) Select required list. ▶ OK

Exception: If you select the **network mailbox**, the number of the network mailbox will be selected (→ page 34). Lists are not opened on the display.

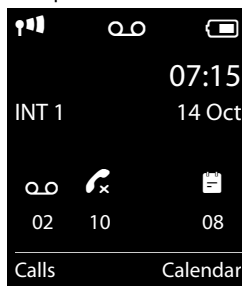

Example




Entering numbers and text







If several number and/or text fields are displayed (e.g. **First Name** and **Surname** in a phonebook entry), the field is automatically activated. The following fields must be activated by navigating with the control key . A field is activated when a cursor is blinking inside it.

Correcting incorrect entries

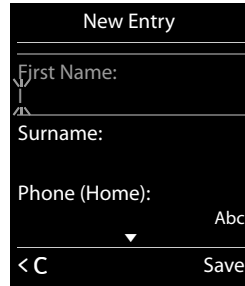- ◆ Deleting **characters** before the cursor: press the display key  briefly.
- ◆ Deleting **words** before the cursor: press and **hold** the display key .




Entering text

- ◆ **Letters/Characters:** Multiple letters and characters are assigned to each key between  and . The characters are shown according to the key in a selection line at the bottom left of the display. The selected character is highlighted. Briefly press the key several times in succession to select the required letter/character.
- ◆ **Placing the cursor:** Letters/characters are inserted at the cursor position. You can insert the cursor by pressing the control key , or  in fields with multiple characters.
- ◆ **Typing lower case, upper case and numbers:** Press the hash key  to switch between lower case, upper case or numbers for the **following letters**. When editing a phonebook entry, the first letter and each letter following a space is automatically in upper case.
- ◆ **Special characters:** Press the star key  to open the special characters table. Navigate to the character desired using the star key and press the display key **Insert** to select it.
- ◆ **Special letters:** Umlauts or other marked/diacritic characters can be selected by pressing the corresponding letter several times. See the character table → page 64.


Making calls


Making calls

Making an external call

- ▶ Enter number, **briefly** press the Answer call key .




Or:

- ▶ Press and **hold** the Answer call key , enter number.

You can cancel the dialling process with the End call key .


Dialling with the redial list

The redial list contains the 20 numbers last dialled with the handset. You can manage this similarly to your phone's message lists (→ page 16).

- ▶ Press the Answer call key  **briefly** to open the redial list.
- ▶  Select entry. ▶ Press the Answer call key . The number is dialled.

When a name and corresponding phone number are displayed: Press the display key **View**.

Managing entries in the redial list:



- ▶ Open redial list. ▶  Select entry. ▶ **Options**

You can select the following functions:

- ◆ **Copy to Directory** ▶ **OK**

Copy an entry to the phonebook (→ page 38).

- ◆ **Display number** ▶ **OK**

Copy a number into the display and edit it or add to it, then select with  or save as a new entry in the phonebook with .

- ◆ **Delete entry** ▶ **OK**



Delete the selected entry.

- ◆ **Delete all** ▶ **OK**

Delete all entries.


Dialling from the call list

-  ▶  ▶ **OK** ▶  Select list. ▶ **OK**


- ▶  Select entry. ▶ 

- ▶ The number is dialled.

Notes



- ◆ You can also bring up the call list using the display key **Calls**, but you must assign a display key accordingly (→ page 25).
- ◆ You can also open the list **Missed calls** using the Message key .

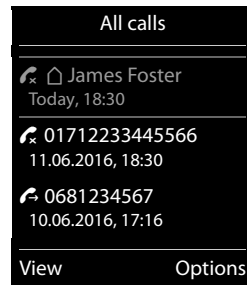Example



Dialling with the phonebook




 ▶  Select entry. ▶ 


▶ If multiple numbers are entered: Select the number with  and press the Answer call key  or **OK**.

▶ The number is dialled.

One touch call


You can set up your phone so that you can dial a specific number when you press **a key of your choice**. This allows children, who are unable to enter a number, to call a certain number, for example.

 ▶  ▶ **OK** ▶  **One Touch Call** ▶ **OK**

▶ **Activation:**  **On / Off**

▶ **Call to:** Enter or change the number that you wish to dial.

▶ **Save**

The activated One Touch Call appears on the idle display. The saved number is dialled by pressing any key. Press the End call key  to cancel dialling.

Ending one touch call:

▶ Press the display key **OFF**. ▶ Press and **hold** the  key.

Or:


▶ Press and **hold** the  key.

Accepting a call

You have the following options:

▶ Press .

▶ If **Auto Answer** is switched on (→ page 22), remove the handset from the charging cradle.

▶ Gigaset C530A: Press the display key  to forward the call to the answer machine (→ page 32).

Accepting a call with the Gigaset L410 handsfree clip (→ page 67): Press the Answer call key. To use your L410, you must register it to your base station. Proceed as described in the operating instructions for the Gigaset L410.

Caller display

Calling Line Identification

The caller's phone number is displayed. If the caller's number is stored in your phonebook, the number type and name are displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- ◆ **External:** No number has been transferred.
- ◆ **Withheld:** Caller has withheld Calling Line Identification.
- ◆ **Unavailable:** Caller has not requested Calling Line Identification.

Making calls

Notes on phone number display for CLIP


By default, the number of the caller is shown on the handset of your telephone, → page 59 or
 ▶ www.gigaset.com/service

Handsfree mode

If you are going to let someone listen in, you should tell the other party that this is happening. Activating/deactivating handsfree mode during a call, when establishing the connection and when listening to the answer machine (only C530A):

- ▶ Press .


Placing the handset in the charging cradle during a call:


- ▶ Press and hold  for a further 2 seconds while placing the handset in the charging cradle.

Adjusting the loudspeaker volume

- ◆ Accessing the settings **via the menu**:

 ▶  ▶ OK ▶ **Handset Volume** ▶ OK

- ▶ **Earpiece:**  Volume can be set at 5 levels for the earpiece and headset.

- ▶ **Speaker:**  Set the volume at 5 levels.

- ▶ **Save**


- ◆ Accessing the settings **during a call** for the mode currently in use (handsfree, earpiece, headset):

- ▶ control key  ▶ .

- ▶ The setting is saved automatically after 2 seconds or press the display key **Save**. The screen reverts back to its previous display.

Switching the microphone on/off (muting)

If you turn the microphone off during a call, your caller can no longer hear you.

- ▶ Press  to switch the microphone on/off.

Adjusting the telephone settings

The handset and base station are preconfigured, but you can change the settings to suit your individual requirements.

The settings can be changed via the menu **Settings** whilst on a call or in idle status.

Changing the display language

☰ ▶ ⚙ ▶ OK ▶ 🗣 Language ▶ OK ▶ 🗣 Select languages ▶ Select (● = selected)

Setting your country and local area codes

Your area code (international and local area code) must be saved on the phone before you can transfer phone numbers (e.g. in vCards). Some of these numbers are already preset. Please ensure that the prefix is correctly separated from the rest of the area code.

☰ ▶ ⚙ ▶ OK ▶ 📞 Telephony ▶ OK
▶ 🗣 Area Codes ▶ OK ▶ 🗣 Navigate to the entry field,
delete the number using **⏪** if needed ▶ Enter the number
▶ Save

Example

Area Codes	
International code:	00 - 49
Local area code:	0 - [8 [↑] / 1 [↓]]
<div style="display: flex; justify-content: space-between;"> < C Save </div>	

Adjusting the handset display settings

Setting a screensaver

You can set a screensaver for the display when in idle status. You can choose from an analogue clock, a digital clock or an image

To show the display in idle status, briefly press **🔒**.

☰ ▶ ⚙ ▶ OK ▶ 🗣 Display ▶ OK
▶ Screensaver (✓ = activated) ▶ Edit
▶ Activation: ☑ On / Off
▶ Selection:
▶ 🗣 Digital Clock / Analog Clock / [Images]
Or:
▶ View (View screensaver)
▶ 🗣 Select screensaver ▶ OK
▶ Save

Example

Screensaver	
Activation	<On >
Selection:	Analog Clock
<div style="display: flex; justify-content: space-between;"> Back Save </div>	

Setting the colour scheme

You can set the display to show a dark or a light background.

☰ ▶ ⚙ ▶ OK ▶ 🗣 Display ▶ OK ▶ 🗣 Colour Schemes ▶ OK
▶ 🗣 Colour Scheme 1 / Colour Scheme 2 ▶ Select (● = selected)

Adjusting the telephone settings

Setting the display backlight

The display backlight is always lit when the handset is not in the base/charging cradle or when a key is pressed. Any **digit keys** pressed appear on the display for pre-dialling.

You can also activate/deactivate the display backlight for idle status:

► ► OK ► Display ► OK ► Backlight ► OK

In Charger: On / Off

Out of Charger: On / Off

► Save

Note

The handset's standby time can be significantly reduced if the display backlight is activated.

Activating/deactivating Message key flashing

Specify whether receipt of new messages should be displayed on the handset by the message LED.

► In idle status: ► * 0 # + 0 0 5 # + 0

The display shows the number 9.

► Press the following keys to select the type of message:

for messages on the network mailbox

for missed calls

for messages on the answer machine
(only Gigaset C530A)

You will see the number 9 followed by your entry (e.g. 975); the current setting will be flashing in the entry field (e.g. 0).

► Press the key or to determine the setting for new messages:

The Message key flashes
(stops when the key is pressed)

The Message key does not flash

► Confirm by pressing OK or go back to the idle display without saving by pressing **Back**.



Activating/deactivating Auto Answer

When set to Auto Answer, the handset accepts an incoming call as soon as you remove it from the charging cradle.

► ► OK ► Telephony ► OK ► **Auto Answer** ► **Change** (☑ = activated)

Regardless of the setting **Auto Answer**, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold for a further 2 seconds while placing the handset in the charging cradle.

Setting earpiece profiles

You can set various profiles for the **earpiece** to optimally adapt your phone to your environment. Check which is the most comfortable for you.

 ▶  ▶ OK ▶  Earpiece Profiles ▶ OK ▶  Select profile ▶ Select (● = selected)


Earpiece Profiles: High and Low. The default is **Low**.

Setting the handset ringtones


Setting the ringtone volume

 ▶  ▶ OK ▶  Ringtones (Handset) ▶ OK ▶ Volume ▶ OK

▶ **For internal calls and alarms:**


 Volume can be set at 5 levels or crescendo (increasing volume) for internal calls and anniversaries.

▶ **External Calls:**



 Volume can be set at 5 levels or crescendo (increasing volume) for external calls.

▶ Save

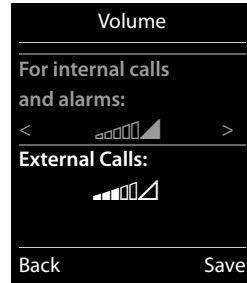
Example



Setting the ring melody



 ▶  ▶ OK ▶  Ringtones (Handset) ▶ OK ▶  Melodies ▶ OK


▶ **Internal Calls:**  Setting the volume/melody for internal calls and anniversaries.

▶ **External Calls:**  Setting volumes/melodies for external calls.

▶ Save


Activating/deactivating the ringtone


Activating/deactivating the ringtone **permanently**: Press and **hold** the star key . When the ringtone is deactivated,  appears in the status bar.


Deactivating the ringtone for a **current call**: Press **Silence** or .

Activating/deactivating the alert tone (beep)

You can activate an alert tone (beep) instead of the ringtone.

Press and **hold** the star key  and **within three seconds** ▶ **Beep**.


When the alert tone is activated,  appears in the status bar.


Press and **hold** the star key  to deactivate the alert tone again.

Setting the base station ringtone (Gigaset C530A only)

 ▶  ▶ OK ▶  Ringtones (Base) ▶ OK

▶ **Volume:**

 Volume can be set at 5 levels or crescendo (increasing volume) or ringtone can be deactivated (level 0).

▶ **Melody:**  Setting the ringtone/melody.


▶ Save

Adjusting the telephone settings

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. These advisory tones can be activated/deactivated independently of each other.


 ▶  ▶ OK ▶  **Advisory Tones** ▶ OK

▶ **Key Tones:**  **On / Off**

Tone when keys are pressed.

▶ **Confirmation:**  **On / Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received.

▶ **Battery:**  **On / Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds). There is no battery warning when the baby monitor is activated.

▶ **Save**

Activating/deactivating music on hold

You can activate/deactivate hold music for external calls during consultation and forwarding.

 ▶  ▶ OK ▶  **Music on hold** ▶ **Change** = activated)

Protection against unwanted calls

Setting time control for external calls

You can specify a time period when you do not want the telephone to ring.

 ▶  ▶ OK ▶  **Ringtones (Handset)** ▶ OK

▶  **Time Control** ▶ OK

▶ **For external calls:**  **On / Off**

If activated:

▶ **Suspend ring. from:** Enter the start of the period.

▶ **Suspend ring. until:** Enter the end of the period.

▶ **Save**

Example

Time Control	
For external calls:	
On	
Suspend ring. from:	
22:00	
Suspend ring. until:	
07:00	
Back	Save

Note

During this period, your phone will continue to ring for numbers to which you have assigned a VIP ringtone in the phonebook.

Protection from anonymous callers

You can set your phone so that it doesn't ring for anonymous calls (→ page 19, callers who have withheld Calling Line Identification). The call is only signalled on the display. The setting only applies to handsets for which the setting is configured.

 ▶  ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Anon. Calls Silent**

▶ **Change** = function activated)

Quick access to numbers and functions

The **digit keys**  up to  can be assigned to a **number from the phonebook**.

The left and right **display keys** have a **function** preset by default, but the keys can be re-assigned (→ page 25).

You can then dial the number or start the function by simply pressing a key.


Assigning digit keys

Prerequisite: You must assign a number to the digit key.

▶ Press and **hold** the digit key.

Or:

Briefly press the digit key. ▶ Press the display key **QuickDial**.

▶ The phonebook opens. ▶  Select entry. ▶ **OK**

The entry is saved to the corresponding digit key.

Note

If you delete or edit the entry in the phonebook at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: You must have assigned a number to the digit key.

When the handset is in idle status

▶ Press and **hold** the digit key: The number is dialed immediately.


Or:

▶ **Briefly** press the digit key: Press the left-hand display key with the number/name (abbreviated if necessary) to dial the number.

Or:

Press the display key **Change** to change the key assignment, or press the display key **Clear Key** to delete the assignment.

Assigning display keys

▶ In idle status, press and **hold** the left or right-hand display key. ▶ The list of possible key assignments is opened. ▶  Select entry ▶ **OK**

Choose from the following functions:

Baby Monitor Set and activate the baby monitor (→ page 45).

Alarm Clock Set and activate the alarm clock (→ page 44).

Calendar Open calendar (→ page 42).

One Touch Call Set up one touch call (→ page 19).

Redial Show redial list (→ page 18).

More Functions... You can also choose further functions:

Call Lists Show call list (→ page 41).

Operating a repeater

Operating a repeater

You can use the Gigaset Repeater to increase the range of your Gigaset handset.

The function and setting of your repeater depends on the repeater version used. The repeater version can be identified by the item number on the product label:







Gigaset Repeater (earlier than version 2.0) S30853-S601-...

Gigaset Repeater 2.0 S30853-S602-...

For additional information, see the repeater user guide and our website at www.gigaset.com

Gigaset Repeater (earlier than version 2.0)

Prerequisites:

- ◆ ECO DECT function **Maximum Range** must be activated.
- ◆ ECO DECT function **No Radiation** must be deactivated.
- ◆ Encryption must be deactivated:
 -   **OK**  **System**  **OK**  **Encryption**  **Change** (☐ = deactivated)

Modifying the ECO DECT functions → page 28.

Registering a repeater:

▶ Connect the repeater to the mains power supply. ▶ Press and **hold** (min. 3 secs) the Registration/Paging key on the base (C530A → page 2, C530 → page 2). ▶ The repeater registers automatically.

You can register up to 6 repeaters.

Gigaset Repeater 2.0

Registering the Gigaset Repeater 2.0:

▶ Connect the repeater to the mains power supply. ▶ Press and **hold** (min. 3 secs) the Registration/Paging key on the base (C530A → page 2, C530 → page 2). ▶ The repeater registers automatically.





You can register a maximum of 2 Gigaset Repeaters 2.0.

The ECO DECT function **Maximum Range** is activated and **No Radiation** is deactivated. The settings cannot be changed whilst the repeater is registered.

De-registering the Gigaset Repeater 2.0:

  **OK**  **System**  **OK**  **Repeater**  **OK**  **Select repeater.** ▶ **De-reg.**

Changing the system PIN

-  ▶  ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK
- ▶ If current PIN not 0000: enter current PIN ▶ OK
- ▶ Enter new system PIN (4 digits; 0 - 9) ▶ Save

Resetting system PIN

If you have forgotten your system PIN, you can reset it to **0000**. If you do this, **all the base settings** will be reset and **all the handsets** will be de-registered!

- ▶ Remove the power cord from the base.
- ▶ Press and hold the Registration/Paging key (C530A → page 2, C530 → page 2) and at the same time reconnect the power cord to the base.
- ▶ Hold the Registration/paging key for at least 5 seconds.

Restoring phone to default setting

You can reset individual modifications to base and handset settings separately.

The following are **not** affected by the reset:

- ◆ Date / time,
- ◆ Registration of handsets to the base and the current selection of the base,
- ◆ System PIN,
- ◆ Entries in the calendar and phonebook,
- ◆ Redial list.

When resetting the handset (**Handset Reset**), audio and display settings will be deleted.

When resetting the base (**Base Reset**), ECO DECT, answer machine, system settings and internal handset names, as well as call lists/answer machine lists, will be reset

Resetting the handset/base station

-  ▶  ▶ OK ▶  System ▶ OK ▶  Handset Reset / Base Reset ▶ For Base Reset: Enter the system PIN ▶ OK ▶ Confirm security prompt with Yes

ECO DECT



ECO DECT uses less energy and reduces transmission power.

Reducing transmission power (radiation)

In normal operation (default setting):

The device range is set to maximum as default. This guarantees optimum wireless management. In idle status, the handset will not function (as it is not transmitting). Only the base will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base and handset. A closer distance to the base means lower transmission power.

You can reduce the transmission power even further:

1) Reducing the range and thereby lowering transmission power by up to 80%

In many spaces such as apartments, business rooms and offices, the maximum range is not necessary. If you deactivate the **Maximum Range** setting, you can reduce the transmission power during a call by up to 80%, using half of the range.

ECO DECT **Maximum Range** = activated)

Display icon for reduced range → page 49.

This setting cannot be used with a repeater (→ page 26).

2) Deactivating DECT wireless module in idle status (Eco Mode+)

With the **No Radiation** setting, you can deactivate the transmission power of the base completely during idle status.

ECO DECT **No Radiation** = activated)

When the wireless module is deactivated, the icon is displayed in idle status instead of the signal strength icon.

This setting cannot be used with a repeater (→ page 26).

Notes

- ◆ To enjoy the benefits of the **No Radiation** setting, all registered handsets must support this feature.
- ◆ When the **No Radiation** setting is activated and a handset is registered to the base that does not support this feature, **No Radiation** will automatically be deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.
- ◆ The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.
- ◆ So that a handset can establish a wireless connection with the base more quickly for an incoming call, it must "listen" to the base more often, i.e. scan the environment. This increases power usage and reduces the standby and talktime duration of the handset.
- ◆ When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by assigning a line: Press and hold the Answer call key . You will hear the ringing tone.

Answer machine (Gigaset C530A)

The answer machine is operated using the keys on the base (→ page 2) or on the handset.

Activating/deactivating the answer machine

▶ ▶ OK ▶ **Activation** (✓ = activated) ▶ **Change**

▶ **Activation:** **On / Off**


If activated:

▶ **Mode:**

Answer & record / Answer only / Alternating

- **Answer & record:** The caller can leave a message;
- **Answer only:** The caller only hears an announcement and cannot leave a message;
- **Alternating:**
If activated, **Record from:** / **Record until:** Enter the length of time in which messages are recorded.

▶ **Save**

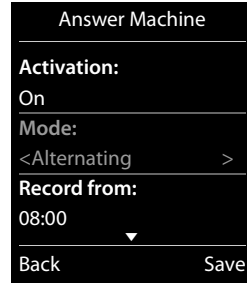

Setting up the answer machine

Recording a personal announcement/advisory message

▶ ▶ OK ▶ **Announcements** ▶ OK ▶ **Record Announcem.** / **Rec. Advisory Msg.** ▶ OK ▶ **To record, press "OK" and speak after the tone.** ▶ OK ▶ Record a message after the ready tone (min. 3 secs, max. 180 secs). ▶ **End** (Complete the recording and save.)

Cancelling the recording: Briefly press the Answer/End call key or **Back** during the recording.

After the recording, the announcement is played back for you to check.

Repeating the recording: Press **New** during playback.

Notes

- ◆ The recording ends if there is a pause lasting longer than 3 seconds.
- ◆ If you cancel the recording, the default announcement is used.
- ◆ If the answer machine's memory is full, it will switch to **Answer only** mode. After old messages have been deleted, it switches back into **Answer & record** mode.

Answer machine (Gigaset C530A)

Listening to announcements/advisory messages

 ▶  ▶ OK ▶  Announcements ▶ OK ▶  Play Announcement /  Play Advisory Msg. ▶ OK

If you have not recorded a personal announcement, the relevant default announcement is played.

Recording a new announcement: Press **New** during playback.


Deleting announcements/advisory messages


 ▶  ▶ OK ▶  Announcements ▶ OK ▶  Delete Announcem. /  Del. Advisory Msg. ▶ OK ▶ Yes (Confirm the prompt)

Additional setting options

◆ Setting recording parameters:



 ▶  ▶ OK ▶  Recordings ▶ OK

- **Length:**  1 min. / 2 min. / 3 min. / Maximum.

- **Ring Delay:**  Immediately / 10 sec. / 18 sec. / 30 sec. / Automatic (10 secs, if new messages are available, otherwise 18 secs).

▶ Save


◆ Deactivating/activating call screening on the handset / base:

 ▶  ▶ OK ▶  Call Screening / Base ▶ Change = on

Deactivating call screening on the handset for the current playback: Press **Silence**.

Playing back messages

Messages are listened to using the keys on the base (→ page 2) or on the handset.

- ▶ Press and **hold** the  key.




Prerequisite: Key 1 is assigned to the answer machine.

 ▶  ▶ **OK** ▶  **Set Key 1** ▶ **OK** ▶  **Answer Machine** ▶ **Select** (● = selected)

Or:














- ▶ Message playback via the message list:
Message key  ▶  **Answer Mach.:** ▶ **OK**

Or:

- ▶ Message playback via the menu:
 ▶  ▶ **OK** ▶ **Play Messages** ▶ **OK**
If the network mailbox is set up (→ page 34): ▶  **Answer Machine** ▶ **OK**


The answer machine begins immediately with the message playback. New messages are played back first.

The following options are available **during playback**:


- ◆ Stopping playback:
press , press again to continue.
Or:
Press **Options**. Playback is stopped, to continue: ▶  **Continue** ▶ **OK**
- ◆ Go to the next message: press  or .
- ◆ Skip back 5 seconds (> 5 seconds) during message playback: press .
- ◆ Skip to the previous message:
Press  or  during the time stamp playback.
- ◆ Go to the start of the current message:
Press  or  during the message playback.
- ◆ Delete current message: **Delete**
- ◆ To delete all old messages:
Options ▶  **Delete old list** ▶ **OK** ▶ **Yes** (Confirm prompt.)
- ◆ Calling back a caller: **Options** ▶  **Dial** ▶ **OK**
- ◆ To copy the number to the directory: **Options** ▶  **Copy to Directory** ▶ **OK**
- ◆ Marking an old message as "new": **Options** ▶  **Mark as new** ▶ **OK**



Answer machine (Gigaset C530A)

More answer machine functions



- ◆ **Picking up the call during answer machine recording:**
Press the Answer call key  or **Accept**.

Note

If call screening has been activated on the handset and the call can already be heard on the handset, then pressing the Answer call key  only activates/deactivates the hands-free mode.

- ◆ **Diverting a call to answer machine:**
The answer machine is activated and the handset indicates an external call: , the answer machine starts immediately in **Answer & record** mode.
- ◆ **Two-way recording of external call: Options** ▶  **Two-way Record** ▶ **OK**
Ending two-way recording: **End**
- ◆ Tell the other party that the call is being recorded.

Changing the language for the voice prompt and default announcement

-  ▶  ▶ **OK** ▶  **Language** ▶ **OK** ▶  Select language (English/French/ Arabic/Farsi)
▶ **Select** (● = selected)

Answer machine (Gigaset C530A)

Operating when on the move (remote operation)

Check or activate the answer machine from another telephone (e.g. hotel, mobile phone).

Prerequisites: The current system PIN is set to something other than 0000 (→ page 27) and the other telephone has tone dialling (DTMF). Alternatively, you can use a code transmitter (available from retailers).

Activating the answer machine

Prerequisite: The answer machine is deactivated.

- ▶ Call your phone line and let it ring until you hear: "Please enter PIN".
- ▶ Enter the system PIN for your phone within 10 seconds.

Calling your answer machine and playing messages

Prerequisite: The answer machine is activated.

- ▶ Call your phone line and press the **9** key when you hear your announcement. ▶ Enter your phone's system PIN.

You can operate the answer machine with the keypad.

The following keys are used:

- 1** During the time stamp playback:
Skip to previous message.
During message playback:
Go to the start of the current message.
- 2** Stop playback. Press again to resume.
After a pause of approx. 60 seconds, the connection is ended.
- 3** Go to the next message.
- 4** Skip back 5 seconds in the current message.
- 0** Delete current message.
- *** Change the status of a previously played back message to "new".

Cancelling remote operation

- ▶ Press the end call key or replace the earpiece.

Note




The answer machine will terminate the connection under the following circumstances:

- ◆ The incorrect system PIN has been entered.
- ◆ There are no messages on the answer machine.
- ◆ After the remaining memory has been specified.

Network mailbox

Network mailbox





You cannot use the network mailbox unless you have **requested** it from your provider and saved the network mailbox number in your phone.

 ▶  ▶ OK ▶  **Network Mailbox** ▶ OK ▶ **Network Mailbox: Enter the phone number of the network mailbox** ▶ OK

Playing back network mailbox messages

- ▶ Press and hold the  key.

Prerequisite: Assign key 1 to the network mailbox (Gigaset C530A).

 ▶  ▶ OK ▶  **Set Key 1** ▶ OK ▶  **Network Mailbox**

▶ **Select** (● = selected)

Or:

- ▶ Message playback via the message list:
Message key  ▶  **Net Mailbox:** ▶ OK

Or:

- ▶ Message playback via the menu:
 ▶  ▶ OK ▶ **Play Messages** ▶ OK ▶ (Gigaset C530A): **Network Mailbox** ▶ OK

Your network mailbox is called directly. You can listen to the messages.

Multiple handsets

Registering handsets

You can register up to six handsets to your base. You must initiate handset registration on the handset **and** on the base station. Both must be carried out **within 60 secs**.

- ▶ **On the base station:** Press and hold (min. 3 secs) the Registration/paging key (C530A → page 2, C530 → page 2).
- ▶ **On the handset C530** (for other handsets see "Notes"):
 - If the handset is not already registered to a base station: Press the display key **Register**.
 - If the handset is already registered to a base station:
 - ☎ ▶ ⚙ ▶ OK ▶ ☎ **Registration** ▶ OK ▶ **Register Handset** ▶ OK
 - ▶ If the handset is already registered to four bases: ☎ Select a base. ▶ OK

The connection to the base is established, this may take some time.

- ▶ Enter the system PIN if required (factory setting: **0000**). ▶ **OK**

Successful registration is shown on the display.

Notes

- ◆ If six handsets are already registered to the base (all internal numbers assigned), replace the handset with the internal number 6 with the new one. If this is not possible, because a conversation is being held for example, the message **No available internal number** is given. In this case, de-register another handset that is no longer required and repeat the registration procedure.
- ◆ For **other Gigaset handsets** and handsets for other devices with GAP functionality, start the registration of the handset according to the respective user guide.

Using the handset on multiple bases

Your handset can be registered on up to four bases.

The active base is the base to which the handset was last registered. The other bases remain saved in the list of available bases.

You can change the assignment to the base **manually at any time**.

Alternatively, you can set the handset so that it selects the base with the best reception (**Best Base**), as soon as it loses connection to the current base.






- ☎ ▶ ⚙ ▶ OK ▶ ☎ **Registration** ▶ OK ▶ **Select Base** ▶ OK ▶ ☎ Select base or **Best Base**. ▶ **Select** (● = selected)

Changing name of a base station

- ☎ ▶ ⚙ ▶ OK ▶ ☎ **Registration** ▶ OK ▶ **Select Base** ▶ OK ▶ ☎ Select base. ▶ **Select** (● = selected) ▶ **Name** ▶ Change name. ▶ **Save**

Multiple handsets

De-registering handsets

 ▶  ▶ **OK** ▶  **Registration** ▶ **OK** ▶  **De-register Handset** ▶ **OK**
▶ The handset used is selected. ▶  Select another handset if required. ▶ **OK** ▶ If system PIN <> 0000: Enter the system PIN. ▶ **OK** ▶ Confirm de-registration with **Yes**.



If the handset is still registered to other bases, it switches to the base with the best reception (Best Base → page 35).

Locating a handset ("Paging")

▶ Press **briefly** the Registration/paging key on the base (C530A → page 2, C530 → page 2).




All handsets will ring at the same time ("paging"), even if ringers are switched off.
(**Exception:** handset on which the baby monitor is activated).

Ending the search


- ▶ **On the base station:** Press the Registration/paging key again **briefly**, or
- ▶ **On the handset:** press  or  or press **Silence**, or
- ▶ **No action:** After approx. 3 minutes, the paging call will end **automatically**.

Changing the handset name and internal number

When registering multiple handsets, they will automatically be assigned the names "INT 1", "INT 2" etc. Each handset will automatically be assigned the lowest unassigned number (1-6).
To change:




 ▶ The list of handsets is opened. Your own handset is marked <.
▶  Select another handset if required. ▶ **Options**
▶  **Rename** ▶ **OK** ▶ Enter names. ▶ **OK**

Or:

▶  **Edit Handset No.** ▶ **OK** ▶  Select number. ▶ **OK**
▶ **Save**

Making internal calls



Internal calls to other handsets registered to the same base are free of charge.


 (press **briefly**) ▶ The list of handsets is opened. Your own handset is marked <. ▶ 
Select the handset or **Call all** (group call) from the list if required. ▶ 

Holding down  immediately starts a call on **all** registered handsets.


Internal consultation/internal transfer

You receive a call from an **external** participant and would like to transfer the call to an **internal** participant or wish to consult him/her.

 ▶ The list of handsets is opened. ▶ If more than two handsets are registered to the base, select one handset or **Call all**. ▶  or **OK**


Holding a consultation call: You are speaking to the internal participant and are returning to your external call: ▶ **Options** ▶  **End active call** ▶ **OK**

Transferring an external call: You have two options to transfer the call:

- ▶ Wait until the participant called answers, then hang up:
Press the End call key .

Multiple handsets



Or:


- ▶ Hang up before the participant calls: Press the End call key .

If the participant called does not answer or does not transfer the call, end the consultation with **End**.

Establishing a conference call/call swapping


You are taking a call while a second call is being held. Both callers are indicated on the display.

- ▶ **Call swapping:** You can switch between both participants using .
- ▶ **Establishing a three-way conference call:** Press **Conf**.
Ending a conference call: Press **End Conf**. You are reconnected with the external participant. You can switch again between both participants using .

Each of the callers can end their participation in the conference call by pressing the End call key .

Accepting/rejecting call waiting

If you get an external call while conducting an internal call, you will hear the call waiting tone. If the number is transferred, you will see it or the name of the caller on the display.

- ▶ Rejecting a call: ▶ Press the display key **Reject**.
- ▶ Accepting a call: ▶ Press the display key **Accept**. You are now speaking to the new caller. The previous call is placed on hold.
Ending the current call and returning to the call on hold:
▶ **Options** ▶  **End active call** ▶ **OK**.

Listening in to an external call

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).


Prerequisite: The function **Listening In** is activated.

Activating/deactivating internal listening in


 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Listening In** ▶ **Change** = on)

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You can listen in to the external call.

- ▶ **Hold down** . All participants hear a signal tone. Call waiting is not displayed.

Ending listening in

- ▶ Press . All participants hear a signal tone.

Phonebook (Address book)

Phonebook (Address book)

In a **phonebook entry**, you can store first names and surnames, up to three numbers, an anniversary with a reminder, and caller melody.

You can create the directory (with up to 200 entries) individually for each of your handsets. You can also send lists/entries to other handsets (→ page 39).

Length of the entries



3 numbers: Max. 32 digits each
 First name and surname: Max. 16 characters each


Managing directory entries

Opening phonebook


Press the key  in idle status or, depending on the situation, the display key .

Creating a new entry

- ▶ Open directory. ▶  <New Entry> ▶ OK
- ▶ Switch between the input fields using  and enter the relevant components of the entry (names, numbers, anniversary, ringtone).
 Navigate downwards to display further components.
- ▶ Press the display key **Save**.

To create an entry, you must enter at least one number. If you have assigned a caller melody, the entry in the phonebook is supplemented with the symbol .

Example

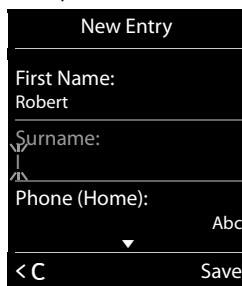



Displaying/changing an entry

- ▶ Open phonebook. ▶  Select the desired entry.
- ▶ **View** ▶ Display all components of the entry. ▶ **Edit**

Or:

- ▶ **Options** ▶  **Edit entry** ▶ OK

Deleting an entry

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options** ▶  **Delete entry** ▶ OK

Delete **all** entries in the directory:

- ▶ Open phonebook. ▶ **Options** ▶  **Delete List** ▶ OK

Defining the order of the contacts entries

You can define whether the entries are to be sorted by first name or surname.

- ▶ Open phonebook. ▶ **Options** ▶ Press **Sort by Surname** or **Sort by First Name**.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetical) | Other characters


Displaying the number of entries that are available in the directory

- ▶ Open phonebook. ▶ **Options** ▶  **Available Memory** ▶ **OK**

Selecting a phonebook entry, searching in the phonebook

- ▶ Open phonebook.
- ▶ Scroll to the name you are searching for using . **Holding down**  scrolls continuously upwards or downwards through the phonebook.

Or:

- ▶ Enter the first few letters (max. 8 letters) using the keypad. The display jumps to the first name that begins with these letters. If necessary, scroll on to the desired entry using .

Transferring an entry/phonebook to another handset

Prerequisites:





- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several individual entries.

Notes

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. Only the date is transferred for an anniversary.
- ◆ When transferring an entry between two vCard handsets:
If the recipient does not yet have an entry with that name, a new entry is created.
If there is already an entry with that name, this entry is expanded with the new numbers.
If the entry contains more numbers than the recipient permits, a further entry is created with the same name.
- ◆ If the recipient is not a vCard handset: A separate entry is created and sent for each number.
- ◆ Your handset receives entries from a non-vCard handset: Entries with numbers that are already stored are discarded, otherwise a new entry is created.





Transferring individual entries

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options**
- ▶  **Copy Entry** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  Select the recipient handset. ▶ **OK**

After a successful transfer:

- ▶ Press **Yes** if you want to send another entry. Otherwise press **No**.






Transferring the entire directory

- ▶ Open phonebook. ▶  Select the desired entry. ▶ **Options**
- ▶  **Copy List** ▶ **OK** ▶  **to Internal** ▶ **OK** ▶  Select the recipient handset. ▶ **OK**

Phonebook (Address book)





Transferring a displayed number to the phonebook

You can transfer numbers to the phonebook which are displayed in a list, e.g. the caller list, the redial list, as well as numbers that you have already selected or have entered for selection.

- ▶ The number is displayed or highlighted.
- ▶ Press display key  or **Options** ▶  **Copy to Directory.** ▶ **OK**
 - ▶ **<New Entry>** ▶ **OK** ▶  **Select number type.** ▶ **OK**
 - ▶ **Complete the entry.** ▶ **OK**
- Or:
 - ▶  **Select entry.** ▶ **OK** ▶  **Select number type.** ▶ **OK**
 - ▶ The number is entered or an existing number is overwritten (answer the prompt using **Yes/No**).
- ▶ **Save**






Transferring a number from the phonebook

In some operating situations, you can transfer a number from the phonebook, e.g. by dialling (even after the entry of a prefix).

- ▶ Depending on the operating situation, open the phonebook using  or .
- ▶  **Select the phonebook entry.** ▶ **OK**
- ▶ If more than one number is entered:  **Select number.** ▶ **OK**

Call list











Your telephone stores calls in various lists. Opening the lists:

- ◆ **Missed calls list:** Message key  ▶  **Missed Calls:** ▶ OK
- ◆ **List selection:**  ▶  ▶ OK ▶  Select list. ▶ OK

The last 20 entries are displayed in the call list.

List entry

The following information is displayed in the list entries:

- ◆ The list type (in the header row)
 - ◆ Icon for the type of entry:
 -  (Missed calls),  (Accepted calls),  (Outgoing calls),  (Call on the answer machine, only C530A)
 - ◆ Caller's number. If the number is stored in the phonebook, name and number type are displayed instead ( Phone (Home),  Phone (Office),  Phone (Mobile)). For missed calls, the number of missed calls from this number is also shown in square brackets.
 - ◆ Date and time of call (if set).
 - ▶  Select entry. ▶ **Options**
 - ▶ **View:** All available information is displayed, e.g. the corresponding number when a name is displayed.
 - ▶ **Options:** You can delete the entry or transfer the number to the phonebook (→ page 40).
- Calling back a caller from the call list:**
- ▶  Select entry. ▶ Press the Answer call key .

Example




Calendar

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour.

When a day is selected, it will be highlighted.

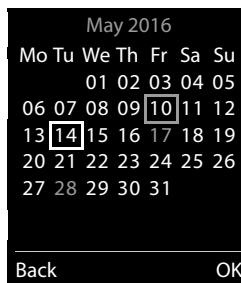

Saving appointments to the calendar

Prerequisite: Date and time are set (→ page 10).

▶ ▶ **OK** ▶ **Calendar** ▶ **OK**

▶ Select the desired day. ▶ **OK**

◆ Appointments that have already been stored are shown.

<**New Entry**> ▶ **OK** opens the window to enter an additional appointment.

◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

Activation: **On/Off**

The following information can be added:

◆ **Date:** The selected day is preset. Enter new data to change.

◆ **Time:** Time (hour and minute) of the appointment.

◆ **Text:** Appointment name (e.g. dinner, meeting).

◆ **Signal:** Select the melody of the reminder signal or deactivate the acoustic signalling.

▶ **Save**

Signalling of appointments/anniversaries

Anniversaries are transferred from the phonebook and displayed as an appointment. An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone.

You can deactivate the reminder call:


▶ Press **OFF** to acknowledge and end the reminder call.

When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.




Displaying missed appointments/anniversaries

The following appointments and anniversaries are stored in the **Missed Alarms** list:

- ◆ The appointment/anniversary call was not acknowledged.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the head of the list.

To open the list: ▶ Message key  ▶  **Missed Alarms** ▶ **OK**

Or via the menu:  ▶  ▶ **OK** ▶  **Missed Alarms** ▶ **OK**
▶  scroll in the list if required

Information about the appointment/anniversary is displayed. You can:

- ▶ Delete an appointment/anniversary: **Delete**

Displaying/changing/deleting stored appointments

 ▶  ▶ **OK** ▶  **Calendar** ▶ **OK** ▶  Select the desired day. ▶ **OK** ▶ The appointment list is displayed. ▶  Select the desired appointment.

- ▶ **View:** Display appointment settings, change, if required using **Edit**.

Or:

- ▶ **Options:** Change settings or delete appointments.
 - **Edit entry** ▶ **OK**
 - **Delete entry** ▶ **OK**
 - **Activate/Deactivate** ▶ **OK**
 - **Delete all Appoints.** ▶ **OK** ▶ Confirm prompt with **Yes**.
All appointments for the **selected day** are deleted.

Alarm clock




Alarm clock

Prerequisite: Date and time are set (→ page 10).


You can activate/deactivate and set the alarm clock as follows:

 ▶  ▶ **OK** ▶ **Activation:**  **On/Off**

▶ Changing the settings:

- **Time:** Set the hour and minute for the wake-up time (time setting → page 10).
- **Occurrence:**  **Daily/Monday-Friday**
- **Volume:**  Volume can be set at 5 levels or crescendo (increasing volume).
- **Melody:**  Select a ringtone for the alarm call.

▶ Press the display key **Save**.

When the alarm clock is activated, the icon  and the alarm time is displayed in idle status.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone.

Deactivating the alarm call/repeating after a pause (snooze mode)

Prerequisite: One alarm call sounds.

▶ **Deactivating until the next alarm call:** Press **OFF**.

Or:


▶ **Snooze mode:**

Press **Snooze** or any key. The wake-up call is deactivated and then repeated after 5 minutes.

Or:

Press nothing. The alarm call is deactivated after 60 seconds and then repeated after 5 minutes. After the fourth repetition, the alarm call is deactivated for 24 hours.

Example

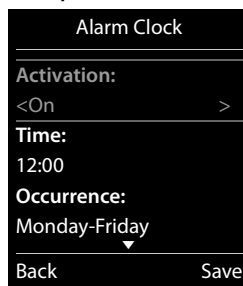

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The baby monitor alarm to an external number is cancelled after approximately 90 seconds.

In baby monitor mode, incoming calls are only signalled on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and pressing the middle of the control key.

You can answer the baby monitor alarm using the **Two Way Talk** function. Deactivate/activate the speaker of the handset with this function.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.

Caution

Ensure the following points:

- ◆ The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- ◆ Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- ◆ The baby monitor is activated 20 seconds after switching on.

Please always check the functionality when you switch on:

- ◆ Test the sensitivity.
- ◆ Check the connection if you are forwarding the baby monitor alarm to an external number.
- ◆ Make sure that the answer machine at the target number is switched off.






Baby monitor

Activating/deactivating and setting the baby monitor

 ▶  ▶ OK ▶  Baby Monitor ▶ OK

▶ **Activation:**  On/Off


▶ Setting the baby monitor:

- **Send alarm to:**  **Internal** (at least 2 handsets are registered)/ **External**
If **Internal** is selected:
 - ▶ **Handset:** Press the **Change** display key. ▶  Select handset. ▶ OK
 - If **External** is selected:
 - ▶ **Number:** Enter the number directly or select from the phonebook (press the display key ).
- **Two Way Talk:**  On/Off
- **Sensitivity:**  High/Low

▶ **Save**



The target number is displayed in idle status when the baby monitor alarm is activated. The baby monitor is deactivated using the **OFF** display key.

Cancelling the baby monitor alarm

Cancelling during a baby monitor alarm: Press .


Deactivating the baby monitor remotely

Prerequisites: The baby monitor alarm is forwarded to an external destination number. The recipient's phone supports tone dialling.

▶ Accept the baby monitor alarm and press the   keys.

The call is ended. The baby monitor is deactivated and the handset is in idle status.

Baby monitor activated

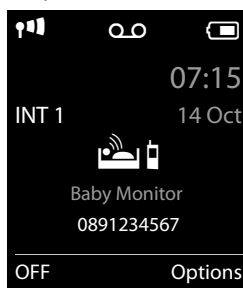









Operating the telephone on a router/PABX


Operation with a router


When operating on the analogue connection of a router, potentially occurring **echoes** can be reduced by switching on **XES mode 1***. If **XES mode 1** does not suppress the echoes sufficiently, you can activate **XES mode 2**.

If there are no problems with echoes, the normal mode (factory settings) should be activated.

 ▶       ▶

▶  ▶ **OK** (for normal mode)

▶  ▶ **OK** (for XES mode 1)

▶  ▶ **OK** (for XES mode 2)

Operation with a PABX

To find out which settings are required for your PABX, please refer to the PABX user guide.

Dialling modes and flash time

Changing the dialling mode





 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Dialling Mode** ▶ **OK** ▶  **Select tone dialling (Tone)/ pulse dialling (Pulse)** ▶ **Select** (● = selected)

Setting flash time

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Recall** ▶ **OK** ▶  **Select flash time** ▶ **Select** (● = selected)

Saving an access code (outside line code)


If you have to enter an access code before any external number on your PABX, e.g., "0":

 ▶  ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Access Code** ▶ **OK** ▶ **Access external line with:** Enter access code (max. of 3 characters).

▶ **For:**

 **Off:** Deactivate access code.

Or:

 **Call Lists:** The access code should only be prefixed when dialling from one of the following lists: missed call list, accepted call list, answer machine list (Gigaset C530A).

Or:






 **All calls:** The access code should be prefixed to every number.

▶ **Save**

* XES stands for "eXtended Echo Suppression".

Operating the telephone on a router/PABX

Setting pauses

Menu key  ▶   0  5  ▶ Then enter one of the following function-specific codes:

◆ **Pause after line seizure:**

  ▶  ▶ OK (for 1 sec.)

  ▶  ▶ OK (for 3 secs.)

  ▶  ▶ OK (for 7 secs.)

◆ **Pause after Recall key:**

  ▶  ▶ OK (for 800 ms)

  ▶  ▶ OK (for 1600 ms)

  ▶  ▶ OK (for 3200 ms)

◆ **Dialling pause** (Pause after access code):


  ▶  ▶ OK (for 1 sec.)

  ▶  ▶ OK (for 2 secs.)

  ▶  ▶ OK (for 3 secs.)


  ▶  ▶ OK (for 6 secs.)

To enter dialling pause when dialling:

Hold down the Recall key  . A P appears in the display.

Switching temporarily to tone dialling (Tone)

After dialling the external number or after establishing the connection:

▶ Press the star key  **briefly**.












Or:












▶ **Options** ▶  **Tone Dialling** ▶ **OK**

Display icons




Icons in the status bar




The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (No Radiation off)
	76% - 100%
	51% - 75%
	26% - 50%
	1% - 25%
	Red: no connection to the base
	No Radiation activated: white, if Maximum Range is on; green, if Maximum Range is off
	Answer machine activated (only C530A) flashes: Answer machine is recording a message or is being operated by another internal party
	Ringtone deactivated
	"Beep" ringtone activated
	Key lock

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34 and 66%
	White: charged between 11 and 33%
	Red: charged below 11%
	Flashes red: battery almost empty (approx. 5 minutes talktime remaining)
	Battery is charging (current charge status):
	0% - 10%
	11% - 33%
	34% - 66%
	67% - 100%

Menu icons




	Alarm Clock
	Call Lists
	Answer Machine



	Audio Settings
	Additional Features
	Settings

Display icons

Display key icons

The following icons indicate the current function of the display keys according to the operating situation:

Icon	Action
	Last number redial
	Deleting text
	Opening phonebook

Icon	Action
	Copy number to the phonebook
	Forwarding a call to the answer machine (only C530A)

Display icons for signalling of



Establishing a call (outgoing call)



Connection established



No connection established/connection terminated



External call



Internal call



Reminder call for anniversary



Reminder call for appointment



Alarm call



Answer machine recording (only C530A)

Other display icons



Information



(Security) prompt



Please wait...



Action complete (green)



Action failed (red)

Menu tree

Opening the main menu: Press  whilst the telephone is in idle status.

Note

Not all functions described in this user guide are available in all countries or with all network providers.

 **Alarm Clock** → page 44

Call Lists

All calls	→ page 41
Outgoing calls	→ page 41
Accepted calls	→ page 41
Missed calls	→ page 41

Answer Machine

Play Messages	Network Mailbox **	→ page 34
	Answer Machine **	→ page 31
Activation *		→ page 29
Announcements *	Record Announcem. *	→ page 29
	Play Announcement *	→ page 30
	Delete Announcem. *	→ page 30
	Rec. Advisory Msg. *	→ page 29
	Play Advisory Msg. *	→ page 30
	Del. Advisory Msg. *	→ page 30
Recordings *		→ page 30
Call Screening *		→ page 30
Network Mailbox		→ page 34
Set Key 1 *	Network Mailbox	→ page 34
	Answer Machine	→ page 31
Language *		→ page 32

* Base with answer machine only

** Base with answer machine **and** number of the network mailbox entered only

Menu tree



Audio Settings

Handset Volume	→ page 20								
Earpiece Profiles	<table border="1"> <tr> <td>High</td> <td>→ page 23</td> </tr> <tr> <td>Low</td> <td>→ page 23</td> </tr> </table>	High	→ page 23	Low	→ page 23				
High	→ page 23								
Low	→ page 23								
Advisory Tones	→ page 24								
Ringtones (Handset)	<table border="1"> <tr> <td>Volume</td> <td>→ page 23</td> </tr> <tr> <td>Melodies</td> <td>→ page 23</td> </tr> <tr> <td>Time Control</td> <td>→ page 24</td> </tr> <tr> <td>Anon. Calls Silent</td> <td>→ page 24</td> </tr> </table>	Volume	→ page 23	Melodies	→ page 23	Time Control	→ page 24	Anon. Calls Silent	→ page 24
Volume	→ page 23								
Melodies	→ page 23								
Time Control	→ page 24								
Anon. Calls Silent	→ page 24								
Ringtones (Base), (only C530A)	→ page 23								
Music on hold	→ page 24								



Additional Features

Calendar	→ page 42
Baby Monitor	→ page 45
One Touch Call	→ page 19
Missed Alarms	→ page 43

**Settings**

Date/Time	→ page 10
Display	Screensaver → page 21
	Colour Scheme → page 21
	Backlight → page 22
Language	→ page 21
Registration	Register Handset → page 35
	De-register Handset → page 36
	Select Base → page 35
Telephony	Auto Answer → page 22
	Area Codes → page 21
	Listening In → page 37
	Access Code → page 47
	Dialling Mode → page 47
	Recall → page 47
System	Reset Handset → page 27
	Base Reset → page 27
	Encryption → page 26
	System PIN → page 27
ECO DECT	Maximum Range → page 28
	No Radiation → page 28

Customer Service & Assistance

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

In our constantly updated online service you can find:

- Extensive information about our products
- FAQ compilations
- Keyword search to help find topics quickly
- Compatibility database: Find out which base stations and handsets can be combined.
- Product comparison: Compare the features of several products with each other.
- Downloads for user manuals and current software updates
- E-mail contact form for customer service

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or an after sales query/issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Customer Service & Assistance

Australia ----- **+61 1300 780 878**
 Austria ----- **0043 1 311 3046**
 Bahrain ----- **31 73 11 173**
 Belgium ----- **07815 6679**
 Bosnia Herzegovina ----- **033 276 649**
 Brazil
 Grandes Capitais e Regiões Metropolitanas:
 ----- **4003 3020**

(Preço de uma ligação local)

----- Demais localidades:
 ----- **0800 888 3020**

(Gratuito)

Bulgaria ----- **+359 2 9710666**
 Canada ----- **1-866 247-8758**
 China ----- **0 21 400 670 6007** (RMB 0.11)
 Croatia ----- **01 / 2456 555**
 Czech Republic ----- **233 032 727**
 Denmark ----- **+45 43682003**
 Finland ----- **+358 (0)9725 19734**
 France ----- **(0)1 57 32 45 22**
 Germany ----- **02871 / 912 912**
 Greece ----- **+30 2111 98 1778**
 Hong Kong ----- **-2763 0203**
 ----- 2389 7285

Hungary ----- **01 267 2109**
 India ----- Please refer to your
 ----- local warranty card
 Indonesia ----- **(62-21) 5673813**
 ----- **(62-21) 888856000**

Ireland ----- **0818 200 033**
 Italy ----- **02.600.630.45**

(il numero è di tipo "urbano nazionale" e può essere chiamato da qualunque operatore di rete fissa o mobile. Il costo della chiamata è inerente al proprio piano tariffario definito con l'operatore telefonico, ad esempio in caso di un contratto con tariffa FLAT, non ci sono costi aggiuntivi per la chiamata a questo numero, in quanto si tratta di un numero urbano nazionale).

Jordan ----- **00962 6 5625460/1/2**
 Kuwait ----- **+965 -22458737/22458738**
 Lebanon ----- **+9611240259/**
 ----- **+9611236110**
 Luxembourg ----- **(+352) 8002 3811**
 Malaysia ----- **+603-8076 9696**
 Malta ----- **+39 02360 46111** (0,10 €)

Mexico
 -- **01800 999 4442738** (01800 999 GIGASET)
 Netherlands ----- **0900-3333102**
 New Zealand ----- **0800 780 878**
 Norway ----- **+47 2231 0845**
 Oman ----- **+968 70928 Ext. 49/21/75**
 Poland ----- **-801 140 160**
 Portugal ----- **+(351) 308 804 760**
 ----- (custo de uma chamada local)

Romania ----- **+40 021 204 9130**
 Russia ----- **8-800 333 4956**
 Serbia ----- **-0800 222 111**
 Singapore ----- **6735 9100**
 Slovak Republic ----- **044 5567 988**
 Slovenia ----- **-01 5466 511**
 South Africa ----- **0800 98 08 42**
 Spain ----- **902 103935**

Sweden ----- **+46 (0)8502 52347**
 Switzerland ----- **-0848 212 000**
 Taiwan ----- **-02 266 24343**
 Turkey - **Son kullanıcı için +90 212 888 6346**
Bayi için +90 212 888 6347

Ukraine ----- **+380-44-451-71-72**
 United Arab Emirates ----- **+97144458255**
 ----- **+97144458254**
 United Kingdom ----- **020 36953111**
 USA ----- **1-866 247-8758**
 ----- tollfree

Manufacturer warranty (Middle East)

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Manufacturer warranty (Middle East)

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuine manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for one full year from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase. Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

This Certificate of warranty does not apply if the telephone has:

1. Been misused, mishandled, willfull damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
2. A defect arising out of any failure to follow instructions either in the manual or product specification.
3. In case repairs are carried out of by unauthorized personnel or unauthorized source warranty will be void.
4. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
5. If this certificate of warranty is not signed and stamped by the authorised distributor.
6. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

For Southern Africa:

In the event of an after-sales issue/warranty claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

Certificate of warranty (Middle East)

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to validate the warranty.

All details must be filled in by the dealer and retained by the customer.

This warranty shall apply to products purchased in the Middle East only.

Customer's Name:

Product / Model:

Dealer's Name:

Date of Purchase: Invoice / Cash Memo Details:

Dealer's Stamp

Service Centres (Midde East)

Service Centres (Midde East)

UAE

Customer Service Hotline UAE

TEL: 00971-4-4458255 /
00971-4-4458254

Service Collection Point

www.technocare-prodigy.com

KARAMA

Sea Shell Electronics

Opp. Karama Centre

Dubai, UAE

Tel: 00971-4-3979228

Fax: 00971-4-3966205

Deira

Souvenir Mobiles,

Omar Bin Katab Road,

Oppst. Gulf Peral hotel (Tahir Hotel)

Al Baraha Street,

Tel: 00971-4-2731910 /

00971-4-2737377

Sharajah

Hotline Telecom

Sahara Centre

Sharjah, UAE

Tel: 00971-6-5312126

Al Ain

Phone Station

Al Ain Mall, Town Centre,

Tel: 00971-3-7515588

Fujairah

Al Manzil,

Al Gurfa Street,

Main market Road,

Tel: 00971-9-2233488

Oman

National Telephone Services Co. LLC

P.O. Box 2786 PC:112, Sultanate of Oman

Tel: +968-709281 Ext. 45/21/75

Fax: +968-791013

E-mail: isonts@omentel.net.om

Qatar

Modern Home,

51-East - Salwa Road,

Al-Maha Complex, Doha

Tel: 00974-4257844 / 00974-4257777

Fax: 00974-4314700

Bahrain

Authorized Service Center,

Bldg: 211, Rd: 339, Block: 321,

Old Place Road, Manama,

Tel: 00973-17311173

E-mail: servicemanager@ashrafs.com.bh

Saudi Arabian Service Centers:

Ahmed Abdulwahed Trading Co.

Jeddah Service Center

Al-Amal Plaza, Hail Street,

Jeddeh, Saudi Arabia,

Tel: 02-6500282 Ext. 209

Riyadh Service Center

Olaya Street

Riyadh, Saudi Arabia,

Tel: 01-4622470 / 4623850

Khobar Service Centre

Al-Khobar Street,

Al-Khobar, Saudi Arabia,

Tel: 03-8944193/03-8952359

Service Centres (Midde East)

Madina Munawara

Al-Ayon Street,

Tel: 00966-4-8387931

Khamis Mushyat

Al-Khalidiya St.,

Tel: 00966-7-2230772

Tabuk

Main Street,

Tel: 00966-4-4219232

Kuwait

Customer Service Hotline Kuwait

Tel: 00965-22458737 / 00965-22458738

Al-Baptain Service Center

Shop #: 247

Qibla, Block 11,

Avenue 11,

Souk al Kabeer,

Fahad Al Salem Street,

Tel: 00965-2464993

Jordan

SEDR Home & office Electronics

Co - Tronicom

Wasfi Al-Tal St.,

Building No. 80,

2nd floor,

Tel: 00962-6-5625460/1/2

Lebanon

306, Jdeideh Sin el Fil Blvd,

Tel: 00961-1240259 / 00961-1236110



Service Centres (Middle East)

Questions and answers

If you have any queries about the use of your telephone, suggested solutions are available on our web-site at

www.gigaset.com/service ▶ FAQ ▶ First steps for troubleshooting.

The table below also lists steps for troubleshooting.

<p>The display is blank.</p> <ol style="list-style-type: none"> 1. The handset is not activated. <ul style="list-style-type: none"> ▶ Hold down . 2. The battery is empty. <ul style="list-style-type: none"> ▶ Charge the battery or replace it (→ page 7). 3. The key and display lock is activated. <ul style="list-style-type: none"> ▶ Hold down the hash key .
<p>"No Base" flashes on the display.</p> <ol style="list-style-type: none"> 1. The handset is outside the range of the base. <ul style="list-style-type: none"> ▶ Move the handset closer to the base. 2. The base is not activated. <ul style="list-style-type: none"> ▶ Check the base power adapter. 3. The base's range is reduced because Maximum Range is deactivated. <ul style="list-style-type: none"> ▶ Activate Maximum Range (→ page 28) or reduce the distance between the handset and base.
<p>"Please register handset" or "Place handset in base" flashes on the display.</p> <p>The handset has not yet been registered or was de-registered due to the registration of an additional handset (more than six DECT registrations).</p> <ul style="list-style-type: none"> ▶ Register the handset again (→ page 35).
<p>The handset does not ring.</p> <ol style="list-style-type: none"> 1. The ringtone is deactivated. <ul style="list-style-type: none"> ▶ Activate ringtone (→ page 23). 2. The phone does not ring if the caller has withheld his number. <ul style="list-style-type: none"> ▶ Activate the ringtone for unknown calls (→ page 24). 3. The phone does not ring during a specific period or for certain numbers. <ul style="list-style-type: none"> ▶ Check time control for external calls (→ page 24).
<p>You cannot hear a ringtone/dialling tone from the fixed line network.</p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.</p> <ul style="list-style-type: none"> ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 64).
<p>The connection always terminates after approx. 30 seconds.</p> <p>A repeater (prior to Version 2.0) has been activated or deactivated (→ page 26).</p> <ul style="list-style-type: none"> ▶ Switch the handset off and back on again (→ page 14).
<p>Error tone sounds after system PIN prompt.</p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none"> ▶ Repeat the process, reset the system PIN to 0000 if required (→ page 27).
<p>Forgotten system PIN.</p> <ul style="list-style-type: none"> ▶ Reset the system PIN to 0000 (→ page 27).

Service Centres (Middle East)

<p>The other party cannot hear you.</p> <p>The handset is "muted".</p> <ul style="list-style-type: none"> ▶ Activate the microphone again (→ page 20).
<p>The caller's number is not displayed.</p> <ol style="list-style-type: none"> 1. Calling Line Identification (CLI) is not approved for the caller. <ul style="list-style-type: none"> ▶ The caller should ask the network provider to enable Calling Line Identification (CLI). 2. Caller display (CLIP) is not supported by the network provider or is not enabled for you. <ul style="list-style-type: none"> ▶ Caller display (CLIP) is enabled by the network provider. 3. Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information. <ul style="list-style-type: none"> ▶ Reset the system: Briefly pull out the power plug. Reinsert the plug and wait until the device restarts. ▶ Check the settings on the PABX and activate phone number display, if necessary. To do this, search for terms such as CLIP, calling line identification, phone number identification, caller ID, etc. in the system's user guide or ask the system manufacturer.
<p>You hear an error tone when keying an input.</p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> ▶ Repeat the process. ▶ Read the display and refer to the user guide if necessary.
<p>You cannot listen to messages on the network mailbox.</p> <p>Your PABX is set to pulse dialling.</p> <ul style="list-style-type: none"> ▶ Set your PABX to tone dialling.

only Gigaset C530A:

<p>No time is specified for a message in the call list.</p> <p>Date/time are not set.</p> <ul style="list-style-type: none"> ▶ Set the date/time (→ page 10).
<p>The answer machine reports "Invalid PIN" during remote operation.</p> <ol style="list-style-type: none"> 1. You have entered the wrong system PIN. <ul style="list-style-type: none"> ▶ Repeat input of system PIN. 2. The system PIN is still set to 0000. <ul style="list-style-type: none"> ▶ Set the system PIN to something other than 0000 (→ page 27).
<p>The answer machine is not recording any messages/has switched to answer only mode.</p> <p>The memory is full.</p> <ul style="list-style-type: none"> ▶ Delete old messages. ▶ Play back new messages and delete.

Service Centres (Midde East)

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset C530/C530A is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Exclusion of liability

Your handset display has a resolution of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation.

This is normal and no reason for a warranty claim.

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and housing are excluded from the warranty.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

Appendix

Appendix

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 Disconnect the power supply.**
- 2 Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.**
- 4 Pat all parts dry.**
- 5 Place the device in a dry, warm place **for at least 72 hours (not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).**
- 6 Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology: 2 x AAA NiMH
 Voltage: 1.2 V
 Capacity: 800 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	320 * 170 **
Talktime (hours)	14
Operating time for 1.5 hours of calls per day (hours) *	130 * 100 **
Charging time in base (hours)	8.5
Charging time in charging cradle (hours)	7.5

* **No Radiation** deactivated, **without** display backlight in idle status

** **No Radiation** activated, **without** display backlight in idle status

Base power consumption

	C530	C530A
In standby mode		
– Handset in charging cradle	approx. 1.0 W	approx. 1.0 W
– Handset outside charging cradle	approx. 0.5 W	approx. 0.65 W
During a call	approx. 0.65 W	approx. 0.75 W


Appendix

General specifications

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex method	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Base power supply	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Pin connections on the telephone jack

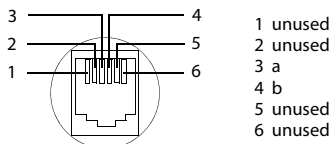

Character charts

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 []	1									
2 []	a	b	c	2	ä	á	à	â	ã	ç
3 []	d	e	f	3	ë	é	è	ê		
4 []	g	h	i	4	ï	í	ì	î		
5 []	j	k	l	5						
6 []	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 []	p	q	r	s	7	ß				
8 []	t	u	v	8	ü	ú	ù	û		
9 []	w	x	y	z	9	ÿ	ý	æ	ø	å
0 []	[] ¹⁾	.	,	?	!	[] ²⁾	0			

- 1) Space
2) Line break

Appendix

Arabic

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1	ا											
2	ب	ت	ة	ث	٢	a	b	c				
3	ا	ا	ا	ا	و	ى	ى	ع	٣	d	e	f
4	س	ش	ص	ض	٤	g	h	i				
5	د	ذ	ر	ز	٥	j	k	l				
6	ح	ح	خ	٦	m	n	o					
7	ن	ه	و	ى	٧	p	q	r	s			
8	ف	ق	ك	ل	م	٨	t	u	v			
9	ط	ظ	ع	غ	٩	w	x	y	z			
0	¹⁾	.	,	?	!	²⁾	*					

- 1) Space
- 2) Line break

Persian

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1	ا											
2	ب	پ	ت	ة	ث	٢	a	b	c			
3	ا	ا	ا	ا	و	ى	ى	ع	٣	d	e	f
4	س	ش	ص	ض	٤	g	h	i				
5	د	ذ	ر	ز	٥	j	k	l				
6	ح	ح	خ	٦	m	n	o					
7	ن	ه	و	ى	٧	p	q	r	s			
8	ف	ق	ك	گ	ل	م	٨	t	u	v		
9	ط	ظ	ع	غ	٩	w	x	y	z			
0	¹⁾	.	,	?	!	²⁾	*					

- 1) Space
- 2) Line break

Accessories

Accessories

Upgrade your Gigaset to a cordless PABX:

Gigaset Handset C620H

- ◆ Brilliant sound quality in handsfree mode
- ◆ 1.8" TFT colour display
- ◆ Directory for 250 entries
- ◆ Talk/standby time of up to 26 hrs/530 hrs, standard batteries
- ◆ Brilliant sound quality in speaker mode: 4 adjustable handsfree profiles
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Black list for 15 unwanted numbers
- ◆ Baby monitor, one touch call

www.gigaset.com



Gigaset Handset E630H

- ◆ Brilliant sound quality in handsfree mode
- ◆ Side keys for easy volume control
- ◆ 1.8" TFT colour display
- ◆ Splashproof
- ◆ Simple Auto Answer with any key
- ◆ Directory for 200 entries
- ◆ Talk/standby time of up to 20 hrs/250 hrs, standard batteries
- ◆ Torch function
- ◆ LED light call display
- ◆ Profile key for quick adjustment to the surroundings
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Baby monitor, one touch call

www.gigaset.com



Gigaset Handset C430H-C530H

- ◆ Brilliant sound quality in handsfree mode
- ◆ 1.8" TFT colour display
- ◆ Directory for 200 entries
- ◆ Talk/standby time of up to 20 hrs/250 hrs, standard batteries
- ◆ Screensaver (analogue and digital clock)
- ◆ ECO-DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from anonymous calls
- ◆ Baby monitor, one touch call

www.gigaset.com



L410 handsfree clip for cordless telephones

- ◆ Complete freedom of movement when making calls
- ◆ Practical clip fastening
- ◆ Perfect sound quality in handsfree mode
- ◆ Simple call transfer from handset
- ◆ Weight approx. 30 g
- ◆ ECO-DECT
- ◆ 5 volume settings
- ◆ LED status display
- ◆ Talk/standby time of up to 5 hrs/120 hrs
- ◆ Ranges in buildings up to 50 m, outdoors up to 300 m

www.gigaset.com



ZX300 Headset

- ◆ Perfect voice quality
- ◆ Optimum wear comfort
- ◆ Weight approx. 12 g

www.gigaset.com



Accessories

ZX400 Headset

- ◆ Perfect voice quality
- ◆ Optimum wear comfort
- ◆ Weight approx. 75 g

www.gigaset.com



Gigaset Repeater/Gigaset Repeater 2.0

You can use the Gigaset Repeater to increase the receiving range between your Gigaset handset and the base.

www.gigaset.com



Compatibility

You can find more information about the handset functions in connection with the individual Gigaset base stations at:

www.gigaset.com/compatibility

All accessories and batteries are available from your phone retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

Index

A

- Access code (PABX) 47
- Accessories 66
- Activating
 - answer machine 29
 - answer machine (remote operation) ... 33
 - message LED 22
 - two-way recording 32
- Address book, see Phonebook
- Advisory tones 24
- Alarm clock 44
- Alert tone (beep) 23
- Anniversary 38
 - displaying missed 43
- Announcement 29
- Announcement (answer machine) ... 29, 30
- Anonymous 19
- Anonymous calls off 24
- Answer call key 1
- Answer machine 29
 - activating/deactivating 2, 29
 - answer machine list 16
 - deleting individual messages 2, 31
 - language for the voice prompt 32
 - mode 29
 - playing back messages 2, 31
 - recording a personal announcement/
 - advisory message 29
 - remote operation 33
 - skip-back function 33
 - time control 29
 - two-way recording 32
- Appointment
 - displaying missed 43
- Area code
 - setting own area code 21
- Assigning number key 25
- Authorisation 60
- Auto Answer 22

B

- Baby monitor 45
- Backlight, display 22
- Base
 - changing 35
 - changing name 35
 - changing system PIN 27

- connecting to power/
 - telephone network 6
- restoring to default setting 27
- setting up 5
- wall mounting 6
- Base station
 - changing the settings 21
 - setting the ringtone 23
- Battery
 - charging 8
 - charging status 49
 - display 1
 - icon 1
 - inserting 7
- Beep (alert tone) 23
- Best base 35
- Birthday, see Anniversary
- Broken display 4

C

- Call
 - accepting 19
 - accepting automatically 22
 - diverting (ans. mach.) 32
 - external 18
 - forwarding (ans. mach.) 32
 - internal 36
 - participant listening in 37
 - picking up from answer machine 32
 - transferring (connecting) 36
 - transferring internally (connecting) ... 36
 - two-way recording 32
- Call lists 41
 - deleting an entry 41
- Call protection 24
- Call screening during
 - recording (ans. mach.) 30
- Call waiting
 - external during an internal call 37
 - internal during an external call 37
- Calling
 - external 18
 - internal 36
- Calling Line Identification 19
- Care 62
- Care of the device 62
- Changing
 - dialling mode 47
 - display language 9
 - name of the handset 36

Index

- phone settings 21
- ringtone 23
- settings 21
- system PIN 27
- Character charts 64
- Charge status indicator 1
- Charge status of the batteries 49
- Charging cradle (handset)
 - connecting 7
 - setting up 5
- Charging time of handset 63
- CLIP 20
- Colour scheme 21
- Connecting the base station
 - to the PABX 47
 - to the router 47
- Connecting the headset 11
- Connections with the base 35
- Consultation call
 - internal 36
- Contact with liquid 62
- Contents of the package 5
- Control key 1, 14
- Correcting incorrect entries 17
- Correction of incorrect entries 17
- Customer Care 54
- Customer Service & Assistance 54
- D**
- Deactivating
 - answer machine 29
 - baby monitor 46
 - internal listening in 37
 - message LED 22
 - two-way recording 32
 - wireless module 28
- Default setting 27
- Deleting
 - announcement for answer machine . . . 30
- De-registering (handset) 36
- De-registering the handset 36
- Dialling
 - from the call list 18
 - using speed dial 25
 - using the redial list 18
 - with directory 19
- Dialling pause 48
- Directory
 - saving entry 38
- Display
 - activating/deactivating new message . 22
 - backlight 22
 - broken 4
 - changing display language 9
 - colour scheme 21
 - network mailbox message 16, 34
 - number (CLI/CLIP) 19
 - phonebook memory 39
 - screensaver 21
 - setting 21
 - setting the backlight 22
- Display icons 49
- Display keys 1, 15
 - assigning 25
 - icons 50
- Displays
 - missed appointments/anniversaries . . 43
- Disposal 61
- Diverting (ans. mach.) 32
- Diverting a call
 - to answer machine 32
- DTMF (tone dialling) 47, 48
- E**
- Earpiece profile 23
- Earpiece volume 20
- Echo 47
- ECO DECT 28
- Eco mode + (deactivating wireless module) 28
- Emergency numbers
 - not possible 4
- End call key 1
- End call/End key 18
- Ending a conference call 37
- Entering special characters 17
- Entering special letters 17
- Entering text 17
- Entering umlauts 17
- Environment 61
- Exclusion of liability 60
- External 19
- External call
 - transferring internally (connecting) . . 36
- External calls
 - time control for ringtone 24
- F**
- Factory settings 27
- Field strength 49
- Flash time 47

G

Getting started 5

H

Handset

advisory tones 24
 changing name 36
 changing the settings 21
 changing to a different base 35
 changing to best reception 35
 colour scheme 21
 connecting the charging cradle 7
 display backlight 22
 display language 9, 21
 earpiece volume 20
 idle status 16
 list 14
 muting 20
 paging 36
 registering on another base 35
 restoring to default setting 27
 screensaver 21
 searching for 36
 setting 21
 setting up 7
 speaker volume 20
 switching on/off 14
 transferring a call 36
 use as a baby monitor 45
 using multiple 35

Handsfree mode 20
 Handsfree volume 20
 Hash key 1
 Headset socket 11
 Hearing aids 4
 Help 58
 Hold music 24

I

Icon

alarm clock 44

Icons

displaying new messages 16
 on display keys 50
 status bar 49

Idle status, returning to 16

Internal

listening in 37
 making calls 36

Internal call 36
 call waiting 37

Internal consultation call 36

K

Key

assigning to a function or number 25

Key 1 (fast access) 1

Keys

Answer call key 1
 answer machine 2
 control key 1, 14
 display keys 1, 15
 End call key 1
 End call/End key 18
 fast access 1
 Hash key 1
 Message key 1
 On/off key 1
 Recall key 1
 Star key 1

L

Language

display 9

Liquid 62

List

accepted calls 41
 answer machine 16
 call lists 41
 handsets 14
 missed calls 41
 outgoing calls 41

List entry 41

Listening in to an external call 37

Locking/unlocking the keypad 14

Lower/upper case 17

M

Making calls

accepting a call 19
 external 18
 internal 36

Managing the calendar 42

Manufacturer warranty (Middle East) 55

Marked characters 17

Medical equipment 4

Melody

ringtone for internal/external calls 23

Memory in the phonebook 39

Menu

opening 14
 tree 51

Index

- Message key 1
- Message length (ans. mach.) 30
- Message lists 16
 - opening 16
- Microphone 1
- Missed anniversaries/appointments 43
- Missed call 41
- Mounting the base on the wall 6
- Muting the handset 20

- N**
- Network mailbox 34
- Number
 - copying to the phonebook 40
 - displaying caller's number (CLIP) 19
 - entering with the phonebook 40
- Numbers
 - entering 17

- O**
- On/off key 1
- One touch call 19
- Operating time of handset 63
- Order in the phonebook 38
- Outside line code 47
- Outside line code (PABX) 47

- P**
- PABX
 - connecting base 47
 - pauses 48
 - saving access code 47
 - setting dialling mode 47
 - setting flash time 47
 - switching to tone dialling 48
- Paging 36
- Pause
 - after access code 48
 - after line seizure 48
 - after Recall key 48
- PD (pulse dialling) 47
- Phone
 - restoring to default setting 27
 - setting 21
- Phone number display, notes 20
- Phonebook 38
 - copying number from text 40
 - opening 14
 - order of entries 38
 - sending entry/list to handset 39
 - sending to handset 39
 - using to enter numbers 40
- Pin connections 64
- Playing back
 - announcement (answer machine) 30
 - message (answer machine) 31
- Playing back message (ans. mach.) 2, 31
- Power adapter 4
- Power consumption 63
- Protection against unwanted calls 24
- Protection from anonymous callers 24
- Pulse dialling 47

- Q**
- Questions and answers 58

- R**
- Range 5
 - reducing 28
- Recall key 1, 48
- Reception booster, see Repeater
- Recording
 - announcement (answer machine) 29
 - two-way recording 32
- Redial list 18
- Reducing radiation 28
- Reducing transmission power 28
- Registering (handset) 35
- Registering other Gigaset handsets 35
- Registering the handset 35
- Remote operation 33
- Repeater 26
- Restoring to default setting 27
- Restoring to factory settings 27
- Ring delay 30
- Ringtone
 - changing 23
 - melody for internal/external calls 23
 - setting the volume 23
 - silencing for anonymous calls 24
 - time control for external calls 24
- Ringtones 23
- Router
 - connecting base station 47

S

Safety precautions	4
Saving a number in the directory	38
Screensaver	21
Searching	
handset	36
in directory	39
Selecting an entry from the phonebook	39
Sending	
phonebook entry to handset	39
Service Centres (Midde East)	56
Setting an appointment	42
Setting options	
answer machine	29
phone	21
Setting the date	10, 53
Setting the display language	21
Setting the time	10, 53
Setting up	
handset	7
Setting up the answer machine	29
Signal tone, see Advisory tones	
Skip-back function (ans. mach.)	33
Snooze mode (alarm)	44
Sound, see Ringtone	
Speaker	20
Speed dial	25
Star key	1
Status bar	1
icons	49
Switching microphone (handset) on/off	20
System PIN	
changing	27
resetting	27

T

Technical data	63
Telephone	
operating	14
Telephone jack, pin connections	64
Three-way conference call	
ending	37
Time control	
ringtone for external calls	24

Time control (ans. mach.)	29
Tone dialling (DTMF)	47, 48
Transferring an external call internally	36
Troubleshooting	
general	58
Two-way recording	32
Two-way recording (ans. mach.)	32

U

Unknown	19
Upper/lower case	17

V

Viewing network mailbox message	16, 34
VIP ringtone	38
Volume	
handset handsfree/earpiece volume	20
ringtone	23

W

Warning tone, see Advisory tones	
----------------------------------	--

X

XES mode	47
----------	----

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2016
Subject to availability.
All rights reserved. Rights of modification reserved.
www.gigaset.com